

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AA59-00851A Remote Control User Manual for Samsung Plasma TV PS64F8590

ECONTROLLY RCEC-817A

ECONTROLLY AA59-00851A Remote Control User Manual

For Samsung Plasma TV PS64F8590

INTRODUCTION

Thank you for choosing the ECONTROLLY AA59-00851A Remote Control. This manual provides detailed instructions for setting up, operating, and maintaining your new remote control, ensuring seamless compatibility with your Samsung Plasma TV PS64F8590. Please read this manual thoroughly before use.

SETUP GUIDE

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Rear view of the remote control with the battery compartment open, illustrating correct battery placement.

Initial Use

This remote control is pre-programmed for compatibility with Samsung Plasma TV PS64F8590. No additional programming or setup is required. Once batteries are installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

Point the remote control directly at your Samsung Plasma TV. Ensure there are no obstructions between the remote and the TV's infrared receiver.



Image: Front view of the remote control, highlighting the button layout.

Button Functions

- **Power (Red Button):** Turns the TV on or off.
- **SOURCE:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly select TV channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (P Up/Down):** Changes TV channels.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **SMART HUB:** Opens the Smart Hub interface for apps and online content.
- **GUIDE:** Displays the electronic program guide.
- **INFO:** Shows information about the current program or input.
- **Directional Pad (Up/Down/Left/Right) & Enter:** Navigates menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain menus or applications.
- **Playback Controls (REC, Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback on compatible devices or content.

MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Disposal:** Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	• Ensure batteries are installed correctly with the correct polarity. • Replace old batteries with new AAA alkaline batteries. • Check for any obstructions between the remote and the TV's infrared sensor. • Ensure you are pointing the remote directly at the TV.
Buttons are unresponsive or delayed.	• Replace batteries with fresh ones. • Clean the remote control surface and buttons with a soft, dry cloth.

SPECIFICATIONS

Feature	Detail
Model Number	RCEC-817A (AA59-00851A)
Brand	ECONTROLLY
Compatible Devices	Samsung Plasma TV PS64F8590

Feature	Detail
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce

WARRANTY AND SUPPORT

For any questions, concerns, or technical support regarding your ECONTROLLY AA59-00851A Remote Control, please contact the manufacturer or your point of purchase. Please refer to your purchase documentation for specific warranty details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question