

ECONTROLLY RCEC-2249A

ECONTROLLY AH59-02249A Replacement Remote Control User Manual

For Samsung Home Cinema Systems HT-Z220, HT-TZ222, HT-TZ225

INTRODUCTION

This manual provides instructions for the ECONTROLLY AH59-02249A replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Samsung Home Cinema Systems, including models HT-Z220, HT-TZ222, and HT-TZ225. It requires no programming and operates by simply installing batteries.





Image: Front view of the ECONTROLLY AH59-02249A Replacement Remote Control.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use. No additional programming or setup is

required.





Image: Back view of the remote control showing the open battery compartment for AAA batteries.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Samsung Home Cinema System. Point the remote control directly at the system's infrared receiver for optimal performance.

Key Functions Overview

- **POWER:** Turns the system on or off.
- **SOURCE:** Cycles through available input sources (e.g., DVD, TV, AUX, TUNER, PORT).
- **Number Buttons (0-9):** Used for direct track selection, channel input, or menu navigation.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Silences the audio output.
- **Playback Controls (PLAY, STOP, PAUSE, STEP, SKIP):** Controls media playback functions.
- **Directional Pad (Up, Down, Left, Right) & ENTER:** Navigates menus and confirms selections.
- **MENU:** Accesses the system's main menu.
- **RETURN:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or function.
- **INFO:** Displays information about the current content or system status.



Image: Detailed view of the remote control highlighting various function buttons.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or it stops functioning. Always replace both AAA batteries simultaneously with new ones to ensure consistent performance. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the system's infrared receiver.
 - Ensure you are within the effective operating range and pointing the remote directly at the system.
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering.
 - If only a few buttons are affected, and battery replacement does not resolve the issue, the remote may require replacement.

SPECIFICATIONS

Model Number	RCEC-2249A (AH59-02249A)
Brand	ECONTROLLY
Compatible Devices	Samsung Home Cinema Systems (HT-Z220, HT-TZ222, HT-TZ225)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce