



Manuals.plus /

› Easytry123 /

› Easytry123 Remote Control Instruction Manual for Pioneer DEH-X8500BH, DEH-X8700BH, DEH-X8600BJ, DEH-X8600BH, DEH-X8600BS, DEH-X8700BS Receivers

## Easytry123 Easytry0794

# Easytry123 Replacement Remote Control Instruction Manual

For Pioneer DEH-X8500BH, DEH-X8700BH, DEH-X8600BJ, DEH-X8600BH, DEH-X8600BS, DEH-X8700BS Receivers

## 1. PRODUCT OVERVIEW

This Easytry123 remote control (model Easytry0794) is designed as a direct replacement for the original remote controls of various Pioneer car audio receivers. It provides essential functions for controlling your compatible Pioneer DEH-X series receiver, including models DEH-X8500BH, DEH-X8700BH, DEH-X8600BJ, DEH-X8600BH, DEH-X8600BS, and DEH-X8700BS. This remote operates using infrared (IR) technology, requiring a clear line of sight to the receiver's IR sensor.



**Figure 1:** Front view of the Easytry123 replacement remote control. This image shows the general layout and buttons of the remote, which are designed to mimic the original Pioneer remote for ease of use.

## 2. SETUP AND BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two fresh AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use. No pairing or complex setup is typically required for infrared replacement remotes; it should function directly with compatible Pioneer receivers.



**Figure 2:** Back view of the Easytry123 remote control. This image highlights the battery compartment, where two AAA batteries are to be inserted for operation.

### 3. OPERATING THE REMOTE CONTROL

---

To operate your Pioneer receiver using this remote control, point the remote directly at the receiver's infrared sensor. Ensure there are no obstructions between the remote and the receiver.

- **Power Button:** Turns the receiver on or off.
- **Volume Control:** Adjusts the audio output level.
- **Source/Mode Button:** Switches between different audio sources (e.g., Radio, CD, USB, Bluetooth).
- **Track/Tune Buttons:** Navigates through tracks, radio stations, or menu options.
- **Menu/Navigation Buttons:** Used for accessing and navigating the receiver's menu system.

Refer to your Pioneer receiver's original instruction manual for specific functions and button layouts, as this replacement remote is designed to replicate those controls.

### 4. MAINTENANCE AND CARE

---

Proper care will extend the life of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or if it stops responding. Always replace both batteries at the same time with new ones. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Environmental Warning: CAUTION:** Do not leave this unit at a place of direct sunshine or at a hot place for a long time. Otherwise, heat may cause this unit to deform, change in color, or become faulty.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there is a clear line of sight between the remote's IR emitter and the receiver's IR sensor.
  - Make sure the remote is pointed directly at the receiver.
- **Some functions do not work:**
  - This is a replacement remote. While designed to be highly compatible, it may not replicate every single function of your original remote, especially for highly specific or advanced features. Refer to your receiver's manual for expected remote functions.

## 6. SPECIFICATIONS

---

- **Model Number:** Easytry0794
- **Brand:** Easytry123
- **Compatible Devices:** Pioneer Audio Receivers (DEH-X8500BH, DEH-X8700BH, DEH-X8600BJ, DEH-X8600BH, DEH-X8600BS, DEH-X8700BS)
- **Connectivity Technology:** Infrared (IR)
- **Batteries Required:** 2 x AAA (not included)
- **Max Number of Supported Devices:** 1

## 7. WARRANTY AND SUPPORT

---

For any issues or questions regarding your Easytry123 replacement remote control, please contact the seller directly through your purchase platform. Specific warranty details may vary by retailer. It is recommended to retain your purchase receipt for any support inquiries.