

[Manuals.plus](#) /

› [Willz](#) /

› Willz 0.7 Cu.Ft 700W Countertop Microwave Oven Instruction Manual WLCMD2C07WE-07

Willz WLCMD2C07WE-07

Willz 0.7 Cu.Ft 700W Countertop Microwave Oven Instruction Manual

Model: WLCMD2C07WE-07

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your new Willz 0.7 Cu.Ft 700W Countertop Microwave Oven. Please read this manual thoroughly before using the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your microwave oven.



Image 1.1: Front view of the Willz 0.7 Cu.Ft 700W Countertop Microwave Oven. This image displays the appliance's compact design, digital LED display, and control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if the cord or plug is damaged, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not allow children to use the oven without supervision.
- Ensure proper ventilation around the microwave.
- Do not overcook food.
- Never operate the oven when empty.
- Always use microwave-safe cookware.

3. SETUP

3.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents

or a misaligned door. If any damage is observed, do not operate the oven and contact customer support.

3.2 Placement

Place the microwave oven on a flat, stable surface, such as a kitchen countertop, that is strong enough to hold the oven and the food being placed in it. Ensure there is adequate space for ventilation: at least 3 inches (7.5 cm) of clearance on the top, sides, and rear of the oven.



Image 3.1: The microwave oven positioned on a kitchen countertop, demonstrating appropriate placement with surrounding space.

3.3 Turntable Assembly

Place the roller ring in the center of the oven cavity. Position the glass tray securely on top of the roller ring, ensuring it sits properly on the shaft. The glass tray must be in place during operation.

3.4 Power Connection

Plug the power cord into a standard 120V/60Hz grounded electrical outlet. Do not use an extension cord or adapter.

4. OPERATING INSTRUCTIONS

4.1 Setting the Clock

To set the clock, press the 'CLOCK/TIMER' button once. Use the number pads to enter the current time. Press 'CLOCK/TIMER' again to confirm.

4.2 Basic Cooking

Place food in the microwave-safe container on the glass tray. Close the door. Enter the desired cooking time using the number pads. Press 'START/+30 SEC.' to begin cooking.

4.3 Power Levels

Your microwave oven offers 11 variable power levels (0% to 100%). To adjust the power level, press the 'POWER LEVEL' button, then use the number pads to select a power level from 1 to 10 (10 being 100% power). For example, press 'POWER LEVEL' then '5' for 50% power.



Image 4.1: Detailed view of the microwave's control panel, highlighting the 'POWER LEVEL' button and number pad for setting cooking

4.4 Preset Cooking Programs

The microwave includes 6 one-touch cooking programs for common foods:

- **Potato:** For cooking potatoes.
- **Popcorn:** For popping popcorn.
- **Pizza:** For reheating pizza.
- **Beverage:** For heating beverages.
- **Frozen Dinner:** For cooking frozen dinners.
- **Reheat:** For reheating various foods.

Simply press the corresponding button for the desired program. The oven will automatically set the cooking time and power level.

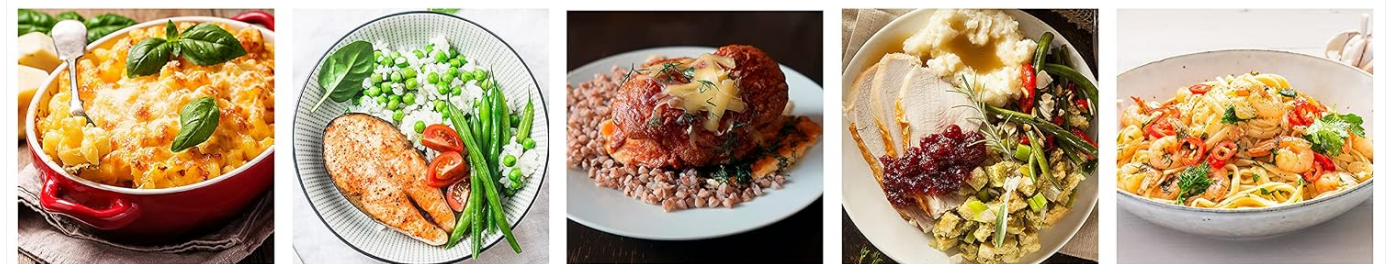


Image 4.2: Close-up of the microwave's control panel, illustrating the dedicated buttons for the six one-touch preset cooking programs.

4.5 Express Cook

For quick cooking, press any number pad from 1 to 6 to instantly start cooking for that many minutes at 100% power. For example, pressing '3' will start cooking for 3 minutes.

4.6 Reheating & Defrost Settings

The microwave can reheat leftovers (7 oz - 28 oz) and defrost frozen foods. Use the 'DEFROST' button and follow the prompts to select defrost by time or weight.

4.7 Multi-Stage Cooking

This feature allows you to program two cooking stages with different power levels and time settings. Consult the full user manual for detailed instructions on programming multi-stage cooking.

4.8 Child Safety Lock

To activate the child safety lock, press and hold the 'STOP/CANCEL' button for 3 seconds. The display will indicate that the lock is active. To deactivate, press and hold the 'STOP/CANCEL' button again for 3 seconds.



Image 4.3: The control panel showing the child safety lock feature, indicated by a lock icon, which prevents unintended operation.

5. MAINTENANCE AND CLEANING

5.1 General Cleaning

Always unplug the microwave oven before cleaning. Clean the interior and exterior surfaces with a soft, damp cloth and mild soap. Avoid abrasive cleaners or scouring pads.

5.2 Cleaning the Glass Tray and Roller Ring

The glass tray and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start	Door not closed properly; Power cord unplugged; Blown fuse or tripped circuit breaker.	Ensure door is securely closed; Check power cord connection; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Microwave-safe cookware not used.	Adjust cooking time/power; Use appropriate cookware.
Turntable not rotating	Glass tray or roller ring not positioned correctly; Debris under roller ring.	Re-position tray and ring; Clean under roller ring.

7. SPECIFICATIONS

- Brand:** Willz
- Model:** WLCMD2C07WE-07
- Color:** White
- Capacity:** 0.7 Cubic Feet
- Wattage:** 700W
- Voltage:** 120 Volts / 60Hz
- Product Dimensions (W x D x H):** 17.81" x 12.31" x 10.31"
- Material:** Painted Steel & Glass
- Special Features:** Child Safety Lock, Timer, Turntable, Interior Light, LED Display
- Included Components:** Countertop Microwave Oven, Glass Tray, Roller Ring, Shaft, Power Cord



Image 7.1: A diagram illustrating the external dimensions (width, depth, height) of the Willz 0.7 Cu.Ft Countertop Microwave Oven.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Willz microwave oven is covered by a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

8.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your Willz microwave oven, please contact the manufacturer's customer support. Refer to the product packaging or the official Willz website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07F1TK17G>

More documents and user manuals: <https://manuals.plus/>