

[manuals.plus](#) /› [MEGA MOTION](#) /› [MEGA MOTION NM5001 Power Recline with Lift Option Chair User Manual](#)

## MEGA MOTION NM5001

# MEGA MOTION NM5001 Power Recline with Lift Option Chair User Manual

## 1. PRODUCT OVERVIEW

The MEGA MOTION NM5001 Power Recline with Lift Option Chair is designed to provide comfort and assistance for sitting and standing. This chair features a quiet and smooth power recline mechanism, a lift function, and a USB charging port for convenience. It is constructed with furniture-grade hardwood plywood and a heavy-duty steel lift mechanism, ensuring durability and reliable performance.

## 2. SAFETY GUIDELINES

Adherence to the following safety information is crucial for safe operation and to prevent injury or damage to the product.

- Always read and follow the assembly instructions carefully before use.
- Do not exceed the maximum weight capacity of 375 pounds.
- Use the lift function with caution to avoid injury. Ensure the area around the chair is clear before operating.
- Keep the power cord clear of the lift mechanism to prevent entanglement or damage.
- Store remote controls and small items in the side pockets to prevent them from falling and creating a tripping hazard.
- Always turn off the power and unplug the chair when not in use, when leaving the room, or before cleaning.
- Keep children and pets away from the chair's moving parts.

## 3. SETUP AND ASSEMBLY

The MEGA MOTION NM5001 chair typically requires minimal assembly. Refer to the separate assembly instructions included in the packaging for detailed steps. Ensure all components are securely connected before plugging in the chair.



Figure 3.1: Chair dimensions. The chair measures 37.5 inches deep, 37 inches wide, and 43.5 inches high. Ensure adequate space for full recline and lift functions.

After assembly, place the chair on a level surface. Connect the power cord to the chair's power input and then plug it into a grounded electrical outlet. Ensure the cord is not pinched or obstructed by the chair's mechanism.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power Recline and Lift Function

The chair features a 3-position power recline and lift mechanism, controlled by a hand wand. The hand wand typically has buttons to move the chair into different positions:

- **Upright Position:** The standard sitting position.
- **Recline Position:** Press the recline button to smoothly move the backrest down and extend the footrest. You can stop at any comfortable position.
- **Lift Position:** Press the lift button to gently tilt the chair forward and upward, assisting you in standing up from the chair.



Figure 4.1: Chair in the upright sitting position.



Figure 4.2: Chair with the footrest partially extended, demonstrating an initial recline position.



Figure 4.3: Chair in the fully reclined position, offering maximum relaxation.



Figure 4.4: Chair in the lift assist position, gently raising the user to a standing posture.

#### 4.2 USB Charging Port

A USB port is integrated into the hand wand, allowing you to charge your tablet or phone conveniently while relaxing in the chair.

#### 4.3 Side Pockets

The chair includes easy-to-reach side pockets on both sides, ideal for storing magazines, newspapers, or remote controls.

#### 4.4 Emergency Battery Backup

The chair is equipped with an integrated emergency battery backup system. In the event of a power outage, this system allows for a limited number of operations to return the chair to a safe position.

### 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your chair.

- **Cleaning:** For general cleaning, spot clean with a mild detergent and a damp cloth. Wipe clean any spills immediately. Avoid harsh chemicals or abrasive cleaners.
- **Mechanism Check:** Periodically inspect the lift and recline mechanisms for any loose fasteners or obstructions. Do not attempt to lubricate the mechanism unless specifically instructed by the manufacturer.
- **Power Cord:** Regularly check the power cord for any signs of damage. If damaged, discontinue use and contact customer support for replacement.

## 6. TROUBLESHOOTING

---

If you encounter issues with your chair, refer to the following common troubleshooting steps:

- **Chair Not Responding:**
  - Ensure the power cord is securely plugged into both the chair and a working electrical outlet.
  - Check if the outlet is functional by plugging in another device.
  - Verify that the hand wand cable is properly connected to the chair.
- **Unusual Noises During Operation:**
  - Check for any obstructions under or around the chair's mechanism.
  - Ensure all assembly fasteners are tight. If noises persist, contact customer support.
- **USB Port Not Charging:**
  - Ensure the chair is powered on and connected to an active power source.
  - Try a different USB cable or device to rule out a faulty accessory.

If these steps do not resolve the issue, please contact customer support.

## 7. PRODUCT SPECIFICATIONS

---

<b>Brand</b>	MEGA MOTION
<b>Model Name</b>	NM5001
<b>Product Dimensions</b>	37.5"D x 37"W x 43.5"H
<b>Weight Capacity</b>	375 lbs
<b>Seat Width</b>	21 inches
<b>Seat Depth</b>	22 inches
<b>Seat to Floor Height</b>	20.5 inches
<b>Item Weight</b>	130 pounds
<b>Reclining Position Count</b>	3
<b>Special Features</b>	Arm Rest, Foldable (for transport/storage), USB Port, Emergency Battery Backup
<b>Material</b>	Foam fill, Furniture grade hardwood plywood construction, Heavy duty steel lift mechanism

<b>Product Care Instructions</b>	Spot Clean, Wipe Clean
----------------------------------	------------------------

## 8. WARRANTY AND CUSTOMER SUPPORT

**Warranty:** The MEGA MOTION NM5001 chair comes with a one-year warranty on parts and service, and a limited lifetime warranty on the steel lift frame. Please retain your proof of purchase for warranty claims.

**Customer Support:** For any questions, technical assistance, or warranty inquiries, please refer to the contact information provided with your purchase documentation or visit the official MEGA MOTION website for support resources.