

## ECONTROLLY AH59-02692E

# ECONTROLLY AH59-02692E Replacement Remote Control User Manual

Compatible with Samsung Soundbar HW-JM6000C, HW-J55, HW-J551, HW-JM35, HW-J450, HW-J355, HW-J355/ZA, HW-J450/ZA, HW-J550, HW-J550/ZA, HW-J6000, HW-J6000/ZA, HW-JM35/ZA

## 1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your new ECONTROLLY AH59-02692E Replacement Remote Control. Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control. This remote is designed to be a direct replacement for various Samsung Soundbar models, offering seamless compatibility without complex programming.

## 2. PRODUCT OVERVIEW

The ECONTROLLY AH59-02692E is a high-quality replacement remote control for Samsung Soundbar Home Theater Systems. It features durable ABS material, soft silicone buttons for comfortable use, and infrared technology for fast, sensitive, and precise control. Its ergonomic design ensures a comfortable grip.



Figure 2.1: Front view of the ECONTROLLY AH59-02692E remote control.


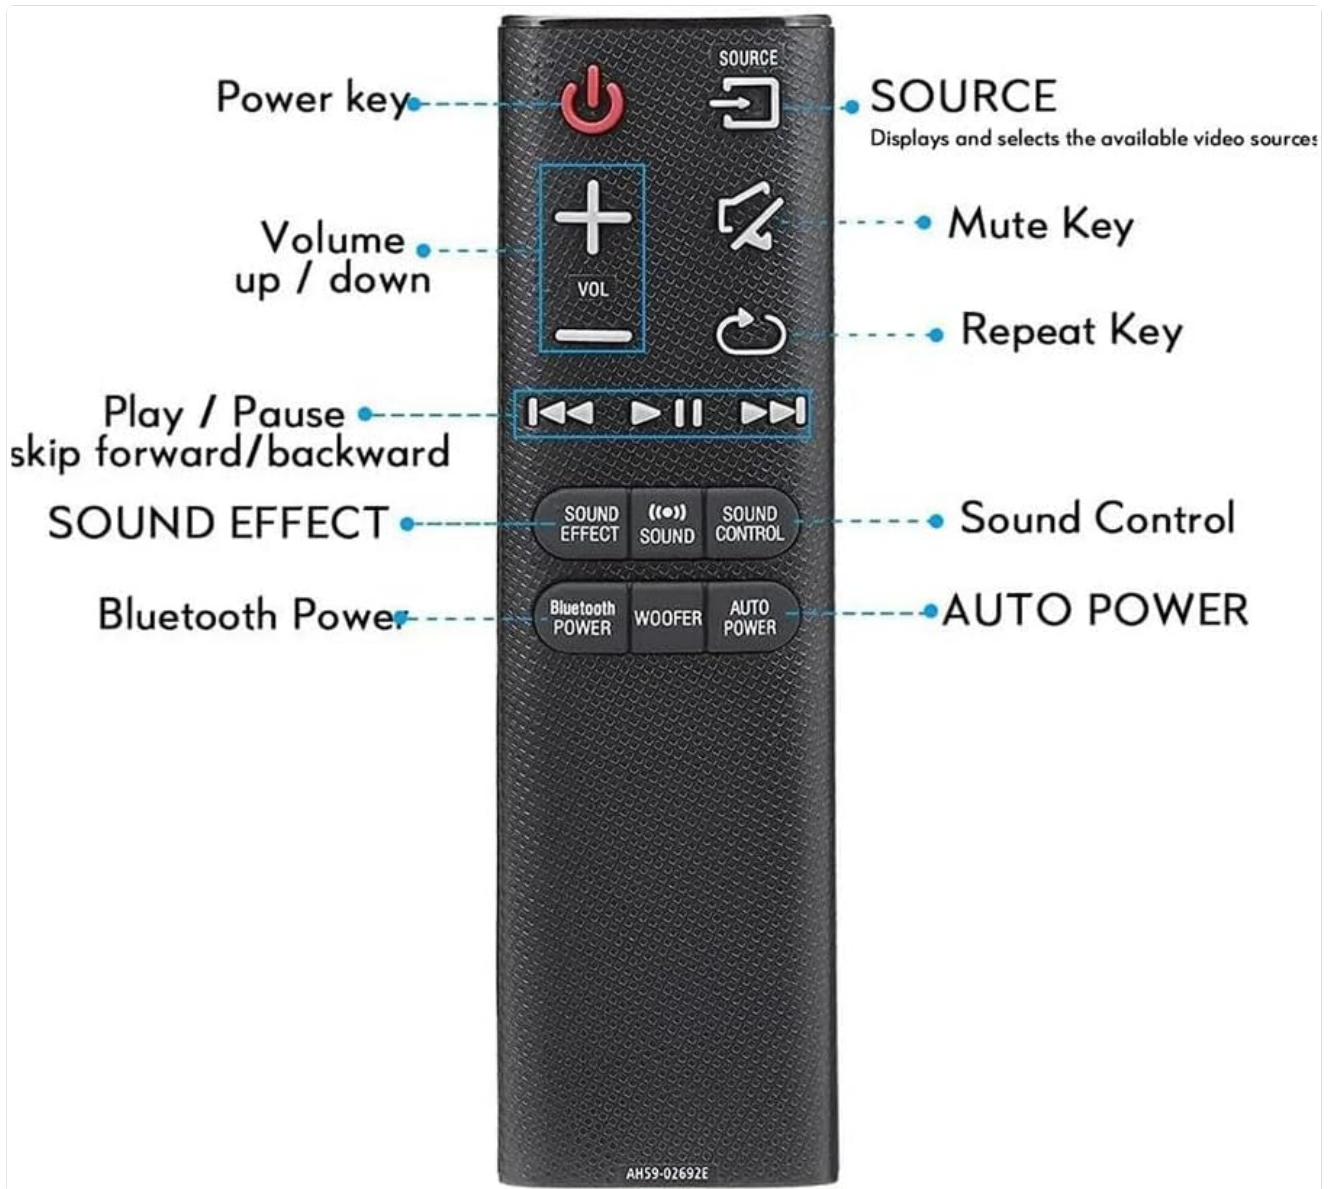


Figure 2.2: Labeled functions of the remote control buttons.



**5.3inch**

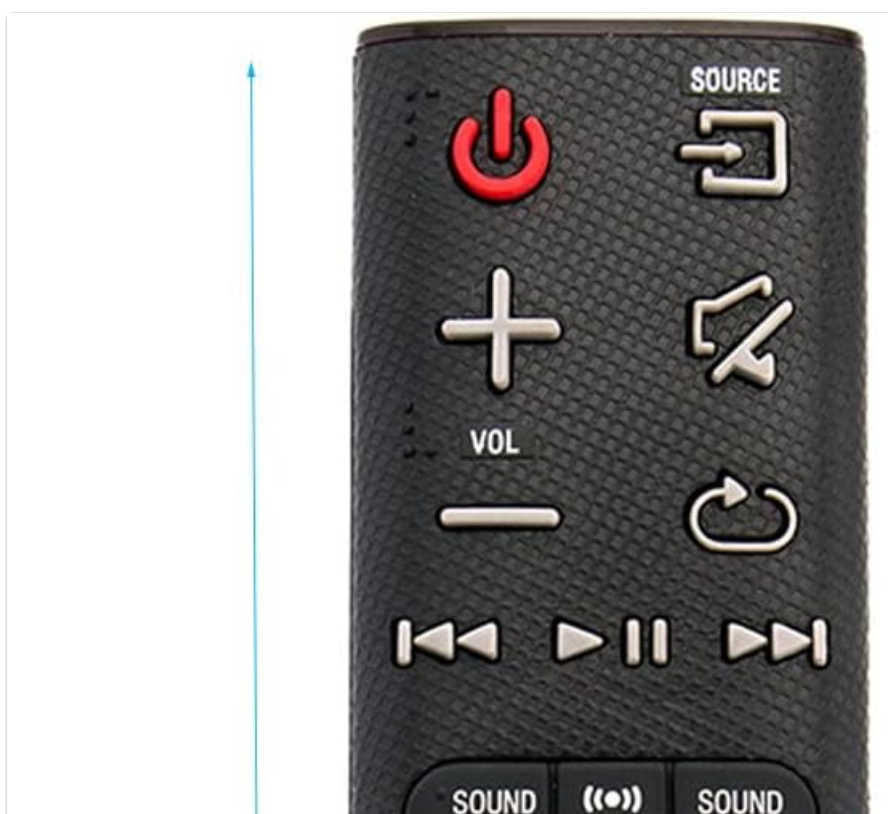

**1.6inch**

Figure 2.3: Dimensions of the remote control.

# Econtrollly AH59-02692E

Replace Remote Control Compatible  
with Samsung soundbar



Figure 2.4: ECONTROLLY AH59-02692E Replacement Remote Control for Samsung Soundbar.

## 3. SETUP

Setting up your ECONTROLLY AH59-02692E remote control is straightforward and requires no programming or pairing. Simply install the batteries, and it will be ready for use with your compatible Samsung Soundbar.

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) new 1.5V AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

*Note: The remote requires 2 AAA batteries. These are not included with the remote control.*



Figure 3.1: Remote control detail, showing battery type (Note: Product specifications state 2 AAA batteries are required, not CR2032).

## 4. OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Samsung Soundbar to operate. The infrared technology allows for multi-angle induction and sensitive response.

### 4.1 Basic Functions

- **Power Key** ( ): Turns the soundbar on or off.
- **SOURCE**: Displays and selects available audio input sources (e.g., TV, Bluetooth, Optical).
- **Volume Up/Down (VOL + / -)**: Adjusts the soundbar's volume level.
- **Mute Key** ( ): Mutes or unmutes the sound.
- **Play/Pause** ( ): Plays or pauses media playback.
- **Skip Forward/Backward** ( / ): Skips to the next or previous track/chapter.
- **Repeat Key** ( ): Repeats the current track or playlist.

### 4.2 Special Functions

- **SOUND EFFECT**: Cycles through various sound effects or modes (e.g., Standard, Music, Movie, Sports, Clear Voice).
- **SOUND CONTROL**: Accesses advanced sound settings.
- **Bluetooth POWER**: Activates or deactivates Bluetooth pairing mode.
- **WOOFER**: Adjusts the subwoofer level.
- **AUTO POWER**: Controls the auto power-on/off feature of the soundbar.



Figure 4.1: Function Button Layout.



Figure 4.2: Remote control in use with a soundbar and television.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases. Always replace both batteries at the same time with new ones. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Handle the remote with care. Avoid dropping it, as repeated impacts can damage the internal circuitry or the battery compartment.

## 6. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common problems and solutions:

- **Remote Not Responding:**

- Check the batteries. Ensure they are inserted correctly with the proper polarity.
- Replace the batteries with new 1.5V AAA alkaline batteries. Low battery power is a common cause of unresponsiveness.
- Ensure there are no obstructions between the remote control and the soundbar's infrared receiver.
- Verify that you are pointing the remote directly at the soundbar.

- **Certain Buttons Not Working:**

- Press the button firmly. Silicone buttons may require a deliberate press.
- Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering.

- **Intermittent Operation:**

- This often indicates low battery power. Replace the batteries.
- Ensure you are within the effective range of the soundbar's IR receiver.

Since this remote does not require programming or pairing, most issues are related to battery power or line-of-sight with the soundbar.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	AH59-02692E
Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches (approx. 17.8 x 5.1 x 1.65 cm)
Item Weight	1.06 ounces (approx. 30 grams)
Color	Black
Material	ABS
Batteries Required	2 x AAA (Alkaline, 1.5V)
Compatible Devices	Samsung Soundbar Home Theater Systems (various models)

## 8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ECONTROLLY AH59-02692E Replacement Remote Control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty details, as warranty terms may vary.

