

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ECONTROLLY](#) /
- › [ECONTROLLY AKB33871401 Replacement Remote Control User Manual for LG TVs](#)

## ECONTROLLY AKB33871401

# ECONTROLLY AKB33871401 Replacement Remote Control User Manual

For LG TV Models: 42cs560, 32cs460, 32cs560, 32ls3400, 42ls3400, 37cs560

## 1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB33871401 replacement remote control. This remote is designed to be compatible with various LG TV models, offering a direct replacement without the need for programming.

## 2. PACKAGE CONTENTS

- 1 x ECONTROLLY AKB33871401 Replacement Remote Control
- (Batteries are not included)

## 3. SETUP

### 3.1 Installing Batteries

The remote control requires two (2) AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Image: Back view of the remote control with the battery cover removed, showing the battery slots.*

### **3.2 Initial Use**

This remote control is a direct replacement and typically requires no programming. Once batteries are installed, it should function immediately with compatible LG TV models.

## **4. OPERATING THE REMOTE CONTROL**

The ECONTROLLY AKB33871401 remote control features standard buttons for TV operation. Refer to the image below for button layout and common functions.



Image: Front view of the remote control, displaying all buttons including power, input, number pad, navigation, volume, and channel controls.

#### 4.1 Key Functions

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (HDMI, AV, etc.).

Button	Function
TV/RADIO	Switches between TV and Radio modes.
MUTE	Mutes or unmutes the TV sound.
Number Buttons (0-9)	Direct channel selection.
VOL (+/-)	Adjusts the volume up or down.
CH (P +/-)	Changes channels up or down.
OK / Navigation Arrows	Navigates menus and confirms selections.
MENU	Opens the TV's main menu.
EXIT	Exits the current menu or function.
BACK	Returns to the previous screen or menu.
Q.VIEW	Quick view for previously watched channels. (Note: For 42LS3400 model, this button may act as the Back button.)
I/II	Switches audio language or stereo/mono. (Note: For 42LS3400 model, this button may act as the Q.VIEW button.)

## 5. MAINTENANCE

### 5.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### 5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## 6. TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> <li>• Ensure batteries are inserted correctly with the correct polarity.</li> <li>• Replace old batteries with new AAA alkaline batteries.</li> <li>• Ensure there are no obstructions between the remote and the TV's infrared sensor.</li> <li>• Point the remote directly at the TV.</li> </ul>

Problem	Solution
Some buttons do not work as expected.	<ul style="list-style-type: none"> <li>• Verify the remote is compatible with your specific LG TV model.</li> <li>• For LG 42LS3400 model, note that the Q.VIEW button may function as BACK, and the I/II button may function as Q.VIEW.</li> <li>• Clean the remote control buttons and surface to ensure no debris is interfering.</li> </ul>
Remote appears damaged or broken.	If the remote control is physically damaged (e.g., cracked casing, loose components), it may not function correctly. Contact customer support for assistance.

## 7. SPECIFICATIONS

- **Brand:** ECONTROLLO
- **Model Name:** AKB33871401
- **Model Number:** RCEC-AKB1401
- **Compatible with:** LG 42cs560, 32cs460, 32cs560, 32ls3400, 42ls3400, 37cs560, AKB33871414, AKB33871410
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Maximum Range:** Approximately 10 meters (33 feet)
- **Material:** ABS Environmental protection material
- **Color:** Black
- **Item Weight:** 1 Ounce
- **Item Dimensions (L x W x H):** 5"L x 1"W x 0.25"H

## 8. WARRANTY AND SUPPORT

For any issues or questions regarding your ECONTROLLO AKB33871401 remote control, please refer to the retailer's return policy or contact the seller directly for support. Information regarding specific warranty periods may be available from your point of purchase.