

ECONTROLLY AKB72914048

ECONTROLLY AKB72914048 Remote Control Instruction Manual

Model: AKB72914048 (RCEC-4048)

Brand: ECONTROLLY

1. INTRODUCTION

This instruction manual provides detailed information on the setup, operation, maintenance, and troubleshooting of your ECONTROLLY AKB72914048 replacement remote control. This remote is designed to be compatible with various LG 3D Smart LCD LED TV models.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your viewing experience.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: No programming or pairing is required. The remote control is ready for use immediately after battery installation.



Image: Back of the remote control with battery compartment open. This image displays the rear side of the remote control, highlighting the battery compartment. The cover is removed, revealing two AAA batteries correctly inserted, indicating the proper orientation for battery placement.

3. OPERATING INSTRUCTIONS

The ECONTROLLY AKB72914048 remote control features a standard layout for LG TVs. Below is a general guide to its primary functions.



Image: Front view of the remote control. This image shows the complete front panel of the remote control, displaying all buttons clearly labeled with their respective functions, such as power, volume, channel, navigation, and input selection.

3.1 Key Functions Overview

- **Power Button (●):** Turns the TV on or off.
- **Input/Source:** Selects video input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly selects channels.
- **Volume Up/Down (+/-):** Adjusts the TV's volume level.

- **Channel Up/Down (P ▲/P ▼):** Changes TV channels sequentially.
- **Mute:** Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Home:** Accesses the TV's Smart Home menu.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Closes the current menu or application.
- **Menu/Q.Menu:** Opens the main menu or quick menu for settings.
- **Guide:** Displays the electronic program guide (EPG).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain applications or menus, as indicated on-screen.
- **3D Setting:** Activates or adjusts 3D display settings (for compatible TVs).

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, and moisture.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Remove any objects blocking the line of sight between the remote and the TV's IR sensor. Ensure the TV's IR sensor is clean and unobstructed.
Specific buttons not responding.	Button stuck or damaged; Remote incompatibility with a specific TV function.	Gently press the button multiple times. If the issue persists, the remote may be damaged or the function is not supported by your specific TV model.
TV not responding to any remote commands.	TV is off or unplugged; TV's IR sensor is faulty; Remote is incompatible.	Ensure the TV is powered on. Test with another remote if available. Verify your TV model is listed in the compatibility section.

6. SPECIFICATIONS

- **Model:** AKB72914048 (RCEC-4048)
- **Brand:** ECONTROLLY
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** LG 3D Smart LCD LED Televisions
- **Dimensions:** Approximately 7 x 2 x 0.65 inches (17.8 x 5.1 x 1.65 cm)

- **Weight:** Approximately 1 ounce (28 grams) without batteries

7. COMPATIBLE LG TV MODELS

This remote control is compatible with a wide range of LG 3D Smart LCD LED TV models, including but not limited to:

- 55LW450U
- 42LW451C
- 47LV355C
- 47LW451C
- 55LW451C
- 32LW5500
- 32LW4500
- 42LW4500
- 47LW4500
- 55LW4500
- 32LW450U
- 42LW450U
- AKB72914046
- AKB72914018
- AKB72914026
- 47LW5600
- 55LW5600

If your specific LG TV model is not listed, please refer to your TV's original remote control model number or contact ECONTROLLY customer support for compatibility verification.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact your retailer. ECONTROLLY strives to provide reliable products and customer satisfaction.

For further assistance, you may visit the ECONTROLLY official website or contact their customer service department directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question