

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ECONTROLLY](#) /

› [ECONTROLLY AKB72915207 Remote Control User Manual for LG TVs](#)

ECONTROLLY RCEC-5207

ECONTROLLY AKB72915207 Remote Control User Manual

Model: RCEC-5207

INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB72915207 replacement remote control, compatible with various LG TV models. This remote control requires no programming; simply install batteries to begin operation.

Compatible LG TV models include: AKB73275681, 37LD465, 42LD420, 32LD465, 32LE3300, 37LD450, 42LD450, 47LX6500, 50PK750, 52LD550, 22LE5500, 47LD420, 47LD450, 32LE5300, 32LE5400, and 42LE530C.

PACKAGE CONTENTS

- 1 x ECONTROLLY AKB72915207 Remote Control

SETUP

Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.





Image: Back view of the remote control with the battery compartment open, showing the correct insertion of two AAA batteries.

First Use

After installing batteries, the remote control is ready for immediate use with compatible LG TV models. No programming or pairing is required.

OPERATING INSTRUCTIONS

Basic Functions

The remote control features standard buttons for TV operation. Refer to the image below for button layout.





Image: Front view of the remote control displaying all functional buttons.

- **Power (Red Button):** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (Page Up/Down):** Changes TV channels sequentially.
- **Mute:** Mutes or unmutes the TV audio.
- **Input:** Selects video input sources (HDMI, AV, etc.).
- **Menu:** Accesses the TV's main menu.
- **Navigation (Arrow Buttons & OK):** Navigates through menus and confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or function.
- **Q.MENU:** Accesses the Quick Menu.
- **GUIDE:** Displays the electronic program guide.
- **INFO:** Displays information about the current program.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and application.
- **TEXT, T.OPT, SUBTITLE:** Teletext and subtitle functions.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Remote Control Not Responding

- Check Batteries:** Ensure batteries are inserted correctly with the correct polarity. Replace with fresh AAA alkaline batteries if necessary.
- Line of Sight:** Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Obstructions can block the signal.
- Distance:** Operate the remote control within the effective range of the TV.
- Interference:** Strong light sources (e.g., direct sunlight, fluorescent lights) or other electronic devices may interfere with the remote's signal. Try operating in a different environment.

Specific Buttons Not Working

- Clean Buttons:** Ensure buttons are not stuck or obstructed by debris.
- Battery Check:** Low batteries can sometimes cause intermittent button functionality. Replace batteries.

SPECIFICATIONS

Product Details

Feature	Detail
Model Number	RCEC-5207 (AKB72915207)
Brand	ECONTROLLY
Compatible Devices	LG Televisions (various models)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approx.)
Item Weight	1 ounce (approx.)

WARRANTY AND SUPPORT

Warranty Information

No specific warranty information is provided with this product. Please refer to your retailer's return policy for details on returns or exchanges.

Customer Support

For further assistance or inquiries, please contact the seller or refer to the product listing on the platform where it was purchased.

