

VOKSUN XR-636DP-89

VOKSUN XR-636DP-89 3-Speed Wood Turntable Instruction Manual

Model: XR-636DP-89

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before operating the unit and retain them for future reference. Observe all warnings and instructions marked on the product and in the operating instructions.

- **Water and Moisture:** Do not use this apparatus near water.
- **Heat:** Do not place near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Power Sources:** Operate only from the type of power source indicated on the marking label.
- **Power-Cord Protection:** Protect the power cord from being walked on or pinched.
- **Cleaning:** Clean only with a dry cloth.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- VOKSUN XR-636DP-89 Turntable Unit
- Power Adapter
- User Manual
- Dust Brush (for stylus/record cleaning)

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your turntable.

3.1 Front and Top View



Image: Top view of the VOKSUN XR-636DP-89 turntable, highlighting the Auto Stop Control, Speed Switch, Power Switch/Volume Control, and 3.5mm Headphone Jack.

1. **Dust Cover:** Protects the turntable and records from dust.
2. **Platter:** Where the record is placed.
3. **Spindle:** Holds the record in place on the platter.
4. **Tonearm:** Holds the stylus and tracks the record grooves.
5. **Stylus (Needle):** Reads the audio information from the record.
6. **Tonearm Lift Lever:** Raises and lowers the tonearm.
7. **Auto Stop Control Switch:** Enables or disables the auto-stop function.
8. **Speed Switch:** Selects playback speed (33-1/3, 45, 78 RPM).
9. **Power Switch / Volume Control:** Turns the unit on/off and adjusts the volume of the built-in speakers.
10. **3.5mm Headphone Jack:** For connecting headphones.
11. **Built-in Stereo Speakers:** Integrated speakers for audio output.

3.2 Rear View



Image: Rear panel of the turntable, showing the AUX-IN, RCA Output, and Power In connections.

- **AUX-IN Port:** For connecting external audio sources (e.g., smartphone, tablet) to play through the turntable's speakers.
- **RCA Output Jacks (L/R):** For connecting the turntable to an external amplifier or powered speakers.
- **DC IN Port:** For connecting the power adapter.

4. SETUP

1. **Unpacking:** Carefully remove the turntable from its packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the turntable on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibration.
3. **Power Connection:** Connect the power adapter to the DC IN port on the back of the turntable, then plug the adapter into a wall outlet.
4. **Dust Cover:** Install the dust cover by aligning its hinges with the slots on the back of the turntable.

5. OPERATING INSTRUCTIONS

5.1 Playing a Vinyl Record

1. **Power On:** Rotate the Power Switch/Volume Control knob clockwise until it clicks to turn on the turntable.
2. **Select Speed:** Set the Speed Switch to the appropriate speed (33-1/3, 45, or 78 RPM) for your record. For 45 RPM records, place the included 45 RPM adapter on the spindle if needed.
3. **Place Record:** Carefully place a vinyl record on the platter.
4. **Auto Stop:** Set the Auto Stop Control switch to ON if you want the platter to stop spinning automatically when the record finishes. Set to OFF for continuous play.
5. **Position Tonearm:** Gently lift the tonearm using the Tonearm Lift Lever. Move the tonearm over the desired starting track of the record.
6. **Lower Tonearm:** Slowly lower the tonearm onto the record using the Tonearm Lift Lever. The music will begin to play.
7. **Adjust Volume:** Adjust the volume using the Power Switch/Volume Control knob.
8. **End of Play:** When the record finishes (with Auto Stop ON), the platter will stop. If Auto Stop is OFF, manually lift the tonearm and return it to its rest.

5.2 Connecting External Speakers (RCA Output)

To connect the turntable to an external amplifier or powered speakers for enhanced audio:

1. Ensure both the turntable and your external audio system are powered off.
2. Connect an RCA cable (not included) to the RCA Output jacks (red for right, white for left) on the back of the turntable.
3. Connect the other end of the RCA cable to the corresponding input jacks on your amplifier or powered speakers.
4. Power on your external audio system, then the turntable. Select the correct input on your amplifier.
5. *Note:* The turntable does not have a built-in phono pre-amplifier. If your external amplifier does not have a dedicated "Phono" input, you may need an external phono pre-amplifier (not included) between the turntable and your amplifier's line-level input.

5.3 Using AUX-IN

To play audio from an external device (e.g., smartphone, MP3 player) through the turntable's built-in speakers:

1. Connect a 3.5mm audio cable (not included) from the headphone jack or line-out of your external device to the AUX-IN port on the back of the turntable.
2. Ensure the turntable is powered on.
3. The audio from your external device will now play through the turntable's speakers. Adjust volume using the turntable's volume control and/or your external device's volume control.

5.4 Using Headphones

For private listening, connect headphones to the 3.5mm Headphone Jack on the front of the turntable. The built-in speakers will automatically mute when headphones are connected.

6. MAINTENANCE

6.1 Cleaning the Turntable

- Always unplug the turntable from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- The dust cover can be cleaned with a soft cloth and a mild, non-abrasive cleaner.

6.2 Stylus Care

- The stylus is delicate. Handle it with extreme care.
- Clean the stylus regularly using the provided dust brush, brushing gently from back to front.
- A worn stylus can damage records and degrade sound quality. Replace the stylus approximately every 300-500 hours of play, or sooner if you notice a change in sound quality.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power outlet not active; Power switch off.	Ensure power adapter is securely connected and plugged into a live outlet. Turn the Power Switch/Volume Control knob clockwise to turn on.
No sound or low sound from built-in speakers	Volume too low; Headphones connected; External speakers connected via RCA.	Increase volume. Disconnect headphones. If using external speakers, ensure they are powered on and the correct input is selected on your amplifier.
Poor sound quality / Distortion	Dirty record; Dirty or worn stylus; Incorrect speed selected; Turntable not on a stable surface.	Clean record. Clean or replace stylus. Select correct playback speed. Place turntable on a stable, level surface.
Record skipping	Dirty or damaged record; Dirty or worn stylus; Turntable not level; Excessive vibration.	Clean record. Clean or replace stylus. Ensure turntable is on a level and stable surface. Avoid placing near vibrating objects.
Platter not spinning	Power off; Belt dislodged; Auto Stop engaged at end of record.	Ensure power is on. Check if the drive belt is correctly positioned around the motor pulley and platter. If Auto Stop is ON, the platter will stop after a record finishes.

8. SPECIFICATIONS

Feature	Detail
Brand	VOKSUN
Model Number	XR-636DP-89
Playback Speeds	33-1/3, 45, 78 RPM
Record Sizes Supported	7", 10", 12"
Connectivity	RCA Output, AUX-IN, 3.5mm Headphone Jack
Built-in Speakers	Yes
Auto Stop	Yes (switchable)

Feature	Detail
Material	Wood
Item Weight	6.49 pounds (2.95 Kilograms)
Package Dimensions	16.5 x 16.5 x 6.5 inches

9. WARRANTY AND SUPPORT

This VOKSUN turntable comes with a **one-year warranty** from the date of purchase.


If you encounter any issues or require technical assistance, please contact VOKSUN customer support. For the most up-to-date contact information, please refer to the official VOKSUN website or your purchase documentation.

When contacting support, please have your model number (XR-636DP-89) and proof of purchase readily available.



Related Documents - XR-636DP-89

	Voksun E300 Turntable User Manual: Bluetooth, USB Encoding, and Operation Guide Comprehensive user manual for the Voksun E300 turntable. Learn how to set up, operate Bluetooth and USB modes, connect to amplifiers, replace the needle, and troubleshoot. Features detailed specifications and FCC compliance information.
	Voksun S350 Turntable User Manual: Bluetooth, USB Encoding, and Operation Guide Comprehensive user manual for the Voksun S350 turntable. Learn how to set up, operate, and connect your turntable via Bluetooth and USB. Includes specifications, troubleshooting, and FCC information.
	Voksun E300 Turntable User Manual: Bluetooth, USB Encoding, and Operation Guide Comprehensive user manual for the Voksun E300 turntable. Learn how to set up, operate Bluetooth and USB modes, connect to amplifiers, replace the needle, and troubleshoot. Features detailed specifications and FCC compliance information.
	Voksun S350 Turntable User Manual: Bluetooth, USB Encoding, and Operation Guide Comprehensive user manual for the Voksun S350 turntable. Learn how to set up, operate, and connect your turntable via Bluetooth and USB. Includes specifications, troubleshooting, and FCC information.
	Cyrus XR Series Quick Start Guide: Setup, Connections, and Operation Get started with your Cyrus XR Series audio system. This guide provides essential information on connecting and operating your Cyrus i9-XR amplifier, CDi-XR CD player, and Pre-XR preamplifier, including remote control usage and system configuration.

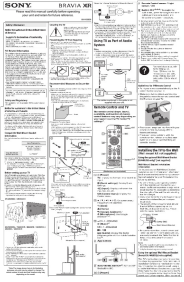

[Sony BRAVIA XR Television Setup Guide and Specifications](#)

Comprehensive setup guide and technical specifications for Sony BRAVIA XR televisions, including wall-mounting, troubleshooting, and connectivity details for models XR-85X90K, XR-75X90K, XR-65X90K, and XR-55X90K series.