

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEXiBOOK](#) /

› [LEXiBOOK Powerman - Remote Control Walking Talking Toy Robot, Dances, Sings, Reads Stories, Math Quiz, Shooting Discs, and Voice Mimicking, for Kids 4+ - ROB50EN User Manual](#)

LEXiBOOK ROB50EN

LEXiBOOK Powerman - ROB50EN

REMOTE CONTROL WALKING TALKING TOY ROBOT USER MANUAL

Model: ROB50EN | Brand: LEXiBOOK

Introduction

The LEXiBOOK Powerman ROB50EN is an interactive toy robot designed for children aged 4 and up. This robot offers a variety of engaging features including remote control movement, voice mimicking, disc shooting, educational quizzes, story-telling, and musical performances with dancing. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Powerman robot to ensure a safe and enjoyable experience.



Image: The Powerman ROB50EN robot, its remote control, and product packaging.

Important Safety Information

Please read all safety warnings and instructions before using the Powerman robot. Keep this manual for future reference.

- This product is not a toy for children under 3 years due to small parts. Manufacturer recommended age is 3 years and up.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.

- Dispose of batteries responsibly according to local regulations.
- Do not aim the foam discs at eyes or face.

Components and Package Contents

Before starting, ensure all components are present in the package:

- 1 x Powerman Robot
- 1 x Remote Control
- 1 x Instruction Manual (this document)
- 9 x Foam Discs



Image: The Powerman robot and its remote control as they appear in the product packaging.

Setup Guide

1. Battery Installation

The Powerman robot and its remote control require batteries (not included). A total of 7 AA batteries are needed.

1. Robot Battery Installation:

Locate the battery compartment on the back of the Powerman robot. Use a screwdriver to open the battery cover. Insert 5 x LR6/AA batteries, ensuring correct polarity (+/-). Close the battery cover and secure it with the screw.

2. Remote Control Battery Installation:

Locate the battery compartment on the back of the remote control. Use a screwdriver to open the battery cover.

Insert 2 x LR6/AA batteries, ensuring correct polarity (+/-). Close the battery cover and secure it with the screw.

2. Powering On

Once batteries are installed, locate the ON/OFF switch on the robot (usually on its back or base) and switch it to the 'ON' position. The robot will typically greet you or make a sound indicating it's ready.

Operating Instructions

The Powerman robot can be controlled using the included remote control. Familiarize yourself with the remote's buttons for optimal interaction.

Remote Control Functions

The remote control allows you to access all of Powerman's features:

- **Movement Buttons:** Control the robot to move forward, backward, turn left, and turn right.
- **Record Button:** Press to record your voice. Powerman will repeat what you say in a funny robot voice.
- **Disc Shooting Button:** Activates the disc-shooting mechanism. Ensure foam discs are loaded.
- **Music/Dance Button:** Initiates music playback and robot dancing.
- **Story Button:** Commands Powerman to tell a story or joke.
- **Quiz Button:** Starts an educational quiz about numbers, animals, or daily life.

Key Features Overview

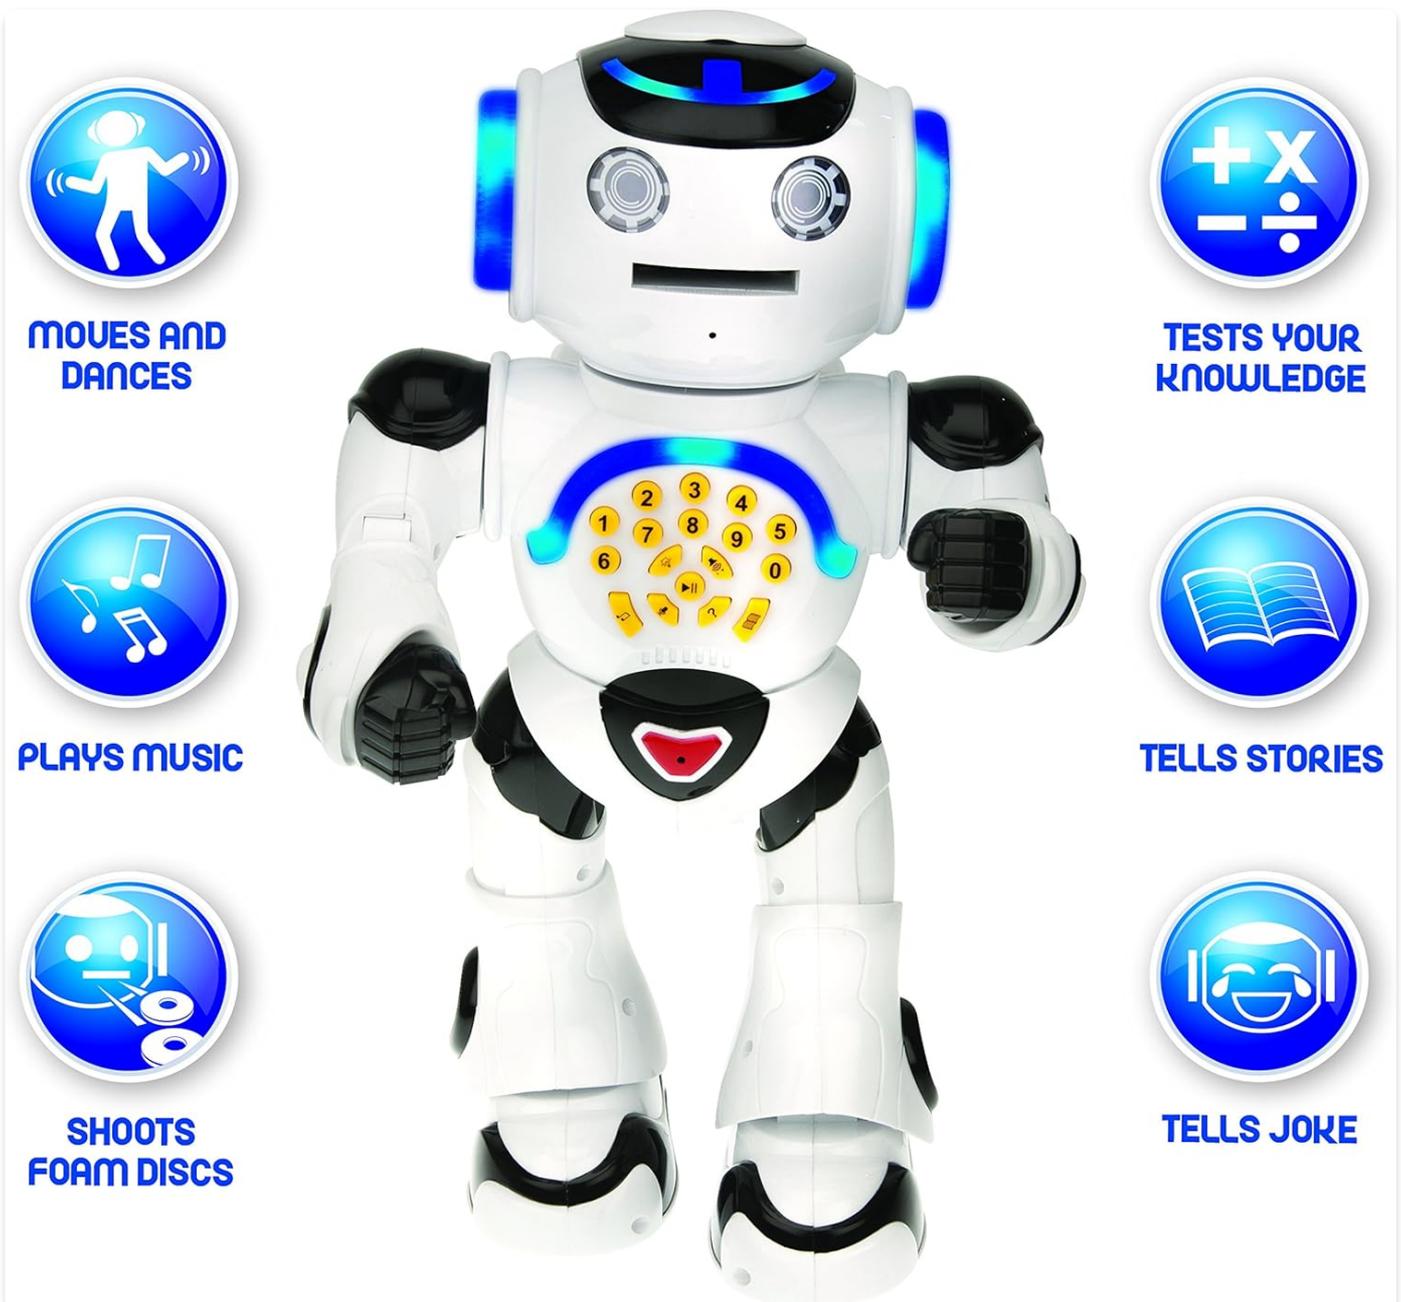


Image: Visual representation of Powerman's core functionalities including movement, music, disc shooting, knowledge testing, story-telling, and joke-telling.

Voice Mimicking

To use the voice mimicking feature, press the dedicated record button on the remote. Speak clearly into the robot's microphone. Powerman will then play back your recording in its unique robot voice.

Disc Shooting

Load the foam discs into the designated slot on the robot (typically in its mouth or chest area). Use the remote control to activate the disc-shooting function. Ensure there are no obstacles in the robot's path and that no one is in the line of fire.



Image: The Powerman robot demonstrating its ability to shoot foam discs.

Educational Quizzes and Stories

Engage with Powerman's educational content by pressing the respective buttons on the remote. The robot will ask riddles about numbers, animals, or daily life, or narrate classic fables and tell jokes.





Image: Children engaged in listening to the Powerman robot as it tells a story.

Dancing and Music

Activate the music and dance mode to see Powerman move to the rhythm. This feature provides entertainment and encourages physical activity.

THE LION AND THE MOUSE...



Image: Two children dancing with the Powerman robot, illustrating its music and dance capabilities.

Official Product Videos

No official seller videos were found for this product in the provided data. Please refer to the product page on Amazon for any available video demonstrations.

Maintenance

Cleaning

To clean your Powerman robot, gently wipe its surface with a soft, dry cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the robot in water, as this can damage the electronic components.

Battery Care

When the robot is not in use for an extended period, it is recommended to remove all batteries from both the robot and the remote control to prevent leakage and corrosion. Always replace all batteries at the same time with new ones of the same type.

Storage

Store the Powerman robot and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. Keep foam discs in a safe place to prevent loss.

Troubleshooting

If you encounter issues with your Powerman robot, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on or respond.	<ul style="list-style-type: none"> Batteries are low or depleted. Batteries are inserted incorrectly. ON/OFF switch is in the 'OFF' position. 	<ul style="list-style-type: none"> Replace all batteries in both the robot and remote with fresh LR6/AA batteries. Check battery polarity (+/-) and reinsert correctly. Ensure the ON/OFF switch is set to 'ON'.
Robot moves erratically or functions are intermittent.	<ul style="list-style-type: none"> Low battery power. Interference from other electronic devices. Remote control is too far from the robot. 	<ul style="list-style-type: none"> Replace batteries in both robot and remote. Move away from other electronic devices. Operate the robot within the recommended range of the remote control.
Foam discs do not shoot or get stuck.	<ul style="list-style-type: none"> Discs are not loaded correctly. Mechanism is jammed. Low battery power. 	<ul style="list-style-type: none"> Ensure discs are fully inserted into the loading slot. Check for any obstructions in the disc-shooting mechanism. Replace batteries.
Voice mimicking or sound features are unclear.	<ul style="list-style-type: none"> Microphone is obstructed. Recording environment is too noisy. Low battery power. 	<ul style="list-style-type: none"> Ensure the microphone is clear of debris. Record in a quiet environment. Replace batteries.

Product Specifications

Feature	Detail
Model Number	ROB50EN
Brand	LEXIBOOK
Product Dimensions	7.8 x 5.1 x 14.7 inches
Item Weight	2.08 pounds
Recommended Age	3 years and up (Manufacturer) / 4-7 years (Product Description)
Batteries Required	7 x LR6/AA batteries (5 for robot, 2 for remote) - Not included
Manufacturer	Lexibook
Release Date	January 1, 2018

Warranty and Support

For detailed warranty information, please refer to the warranty card included with your product or visit the official LEXiBOOK website. For technical support, spare parts, or further assistance, please contact LEXiBOOK customer service through their official channels.

You can find more information and contact details on the [LEXiBOOK Store on Amazon](#).