

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [ECONTROLLY](#) /

› ECONTROLLY Universal Remote Control AKB73615379 for LG TV and Blu-ray Players

ECONTROLLY AKB73615379

ECONTROLLY Universal Remote Control Instruction Manual

Model: AKB73615379

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY Universal Remote Control, model AKB73615379. This remote is designed as a replacement for various LG TV and Blu-ray Disc Player models, offering direct compatibility without complex programming for most listed devices. Please read this manual thoroughly before use to ensure proper operation and to maximize your experience.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high temperatures, or high humidity.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating correct battery insertion.

3.2 Initial Use

This ECONTROLLY remote control is a universal replacement designed to work directly with many LG TV and Blu-ray Disc Player models without requiring additional programming. After installing the batteries, point the remote at your device and test its functions. If your device is listed in the compatibility section, it should function immediately.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the button layout and functions of your remote control:





Image: Front view of the remote control, displaying all functional buttons.

4.1 Key Functions Overview

Button	Function
POWER (Red Button)	Turns the connected device (TV/Blu-ray Player) on or off.
REMOTE MODE (TV/BLU-RAY)	Switches the remote's operating mode between TV and Blu-ray Player control.
INPUT	Selects the input source on your TV (e.g., HDMI 1, AV).
RATIO	Adjusts the screen aspect ratio.
Number Pad (0-9)	Direct channel selection or numerical input.
LIST	Displays the channel list or media list.
FLASHBK	Returns to the previously viewed channel.
VOL (+/-)	Adjusts the volume level.
CH (up/down)	Changes the channel.
MUTE	Mutes or unmutes the audio.
3D	Activates or deactivates 3D mode (if supported by your TV).
SETTINGS	Accesses the device's settings menu.
INFO	Displays information about the current program or media.

Button	Function
Q.MENU	Accesses the Quick Menu.
Navigation Pad (Up/Down/Left/Right/OK)	Navigates through menus and confirms selections.
BACK / RETURN	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions, often indicated on-screen.
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls media playback on Blu-ray players or compatible devices.
HOME	Accesses the main home screen or smart TV interface.
DISC MENU	Accesses the menu of a Blu-ray or DVD disc.
REPEAT	Repeats playback of a track or chapter.
TITLE/POPUP	Accesses the title menu or pop-up menu on a disc.
OPEN/CLOSE	Opens or closes the disc tray on a Blu-ray player.

5. COMPATIBILITY

This remote control is compatible with a wide range of LG TV and Blu-ray Disc Player models. Some of the compatible models include, but are not limited to:

5.1 Compatible LG TV Models

- **LD Series:** 32LD420, 32LD450, 37LD450, 42LD450, 47LD450, 37LD450C, 42LD450C, 47LD450C, 32LD520, 42LD630, 47LD630, 47LD520, 55LD630, 55LD520, 55LD520C, 26LD350, 42LD550, 46LD550, 47LD650, 32LD550, 42LD550UB, 32LD550UB, 52LD550UB, 46LD550UB, 47LD650UA, 55LD650UA, 60LD550
- **LE Series:** 19LE5300, 22LE5300, 26LE5300, 22LE5500, 26LE5500, 32LE5300, 37LE5300, 42LE5300, 47LE5300, 55LE5300, 46LD550, 42LE5350, 55LE5500, 42LE5500, 55LE8500, 42LE7300, 42LE7300UA, 47LE7300, 55LE7300
- **PJ/PT Series:** 50PT350, 42PJ350, 50PJ340, 50PJ350, 42PJ350C, 42PJ350CUB, 42PJ350UB, 50PJ340UC, 50PJ350C, 50PJ350CUB, 50PJ350UB

5.2 Compatible LG Remote Control Models (Replaces)

This remote is designed to replace or be compatible with the following LG remote control models:

- AKB73615379, AKB73615363, AKB72914201, AKB72915204, AKB72915252, AKB73615320, AKB72914016, AKB72914207, AKB72915206, AKB72915277, AKB72914018, AKB72914208, AKB72915207, AKB73275605, AKB73655801, AKB73655803, AKB73655804, AKB73655805, AKB73655862, AKB73756502, AKB73756505
- AKB33871420, AKB72914020, AKB72914209, AKB72915208, AKB73275607, AKB33871422, AKB72914029, AKB72914219, AKB72915217, AKB73275612, AKB36157101, AKB72914036, AKB72914240, AKB72915238, AKB73275656, AKB69680403, AKB72914042, AKB72914245, AKB72915239, AKB73615303, AKB69680416, AKB72914048, AKB72914261, AKB72915244, AKB73615306, AKB72914001, AKB72914059, AKB72914293, AKB72915249, AKB73615309,

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

6.2 Battery Replacement

If the remote control becomes unresponsive or its range decreases, the batteries may need to be replaced. Follow the battery installation steps in Section 3.1. Always replace both batteries at the same time with new AAA alkaline batteries.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries. Obstruction between remote and device. Remote is in the wrong mode.	Check battery polarity and replace if necessary. Ensure a clear line of sight to the device's IR receiver. Press the REMOTE MODE button to select TV or BLU-RAY.
Buttons are unresponsive or sticky.	Dirt or debris under buttons. Worn-out internal contacts.	Clean the remote surface. If the issue persists, consider replacing the remote.
Remote only controls one device (e.g., TV but not Blu-ray).	Remote is set to the incorrect operating mode.	Press the REMOTE MODE button to switch between TV and BLU-RAY control.
Limited operating range.	Weak batteries. Obstruction.	Replace batteries. Ensure no objects are blocking the signal path.

8. SPECIFICATIONS

Brand: ECONTROLLY

Model Number: AKB736155379 (Replaces AKB73615379, AKB73615363)

Connectivity Technology: Infrared

Compatible Devices: LG Televisions, LG Blu-ray Disc Players

Maximum Number of Supported Devices: 18 (via various LG models)

Maximum Range: 33 Feet (approx. 10 meters)

Battery Type: 2 x AAA Alkaline batteries (not included)

Color: Black

Item Weight: 0.06 Pounds (approx. 27 grams)

Item Dimensions (L x W x H): 5"L x 1"W x 0.25"H (approx. 12.7cm x 2.54cm x 0.64cm)

Special Feature: Ergonomic design

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the ECONTROLLY customer service directly. Contact details are typically available on the product packaging or the seller's website.