

[manuals.plus](#) /› [Rowenta](#) /› [Rowenta RH7329WO X-Pert Essential 260 Cordless Stick Vacuum Cleaner User Manual](#)

Rowenta RH7329WO

Rowenta X-Pert Essential 260 Cordless Stick Vacuum Cleaner

MODEL: RH7329WO - USER MANUAL

1. Product Overview

The Rowenta X-Pert Essential 260 (Model RH7329WO) is a versatile cordless stick vacuum cleaner designed for efficient cleaning from floor to ceiling. Its multifunction design allows it to transform into a handheld unit for hard-to-reach areas and a high-reach tool for ceilings. Equipped with a motorized suction head and Power Slim Vision technology, it ensures thorough cleaning on various surfaces, including hard floors and carpets.



Image: The Rowenta X-Pert Essential 260 cordless stick vacuum cleaner in its upright configuration, showcasing its sleek design and the Power Slim Vision head.

Key features include a 21.9V Lithium-Ion battery providing up to 25 minutes of autonomy, a Power Slim Vision head with integrated LEDs to illuminate hidden dust, and an ergonomic trigger for comfortable use. The cyclonic technology ensures effective filtration and sustained performance.

2. Important Safety Instructions

Before using this appliance, please read all instructions carefully. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is intended for domestic use only. Do not use it for commercial or industrial purposes.
- Do not use the appliance to vacuum water, liquids, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner if the dust container or filters are not properly installed.
- Use only the charger supplied by the manufacturer to recharge the battery.
- Do not expose the battery to high temperatures or direct sunlight.
- Always disconnect the appliance from the charger before cleaning or performing maintenance.
- Children should be supervised to ensure they do not play with the appliance.

- Do not use the appliance if it has been dropped, damaged, left outdoors, or dropped into water.

3. Package Contents

Verify that all components are present in the package:

- Main vacuum unit (motor and dust bin)
- Extension tube
- Power Slim Vision motorized suction head
- Charger
- Wall-mounted charging base (may vary by model)
- Crevice tool
- Upholstery brush
- User Manual

4. Assembly

Follow these steps to assemble your Rowenta X-Pert Essential 260 vacuum cleaner:

1. **Attach the Extension Tube:** Insert the extension tube into the main vacuum unit until it clicks securely into place.
2. **Connect the Suction Head:** Attach the Power Slim Vision motorized suction head to the other end of the extension tube, ensuring it locks firmly.
3. **Install Accessories:** For handheld use, detach the extension tube and attach desired accessories (crevice tool, upholstery brush) directly to the main unit.
4. **Initial Charge:** Before first use, fully charge the battery. Connect the charger to the charging port on the main unit or place the unit on its wall-mounted charging base. The charging indicator light will show the charging status.

5. Operating Instructions

5.1. Charging the Battery

- Ensure the vacuum is switched off.
- Plug the charger into a wall outlet and connect it to the vacuum's charging port.
- Allow approximately 3 hours for a full charge. The battery indicator will show when charging is complete.
- A fully charged battery provides up to 25 minutes of runtime.

5.2. Powering On/Off

- To turn on the vacuum, press the ergonomic trigger located on the handle.
- To turn off, release the trigger.

5.3. Using the Vacuum

- **Floor Cleaning:** Use the vacuum in its stick configuration with the Power Slim Vision head. The integrated LEDs will illuminate dust particles, making them easier to spot and clean.
- **Handheld Mode:** For cleaning furniture, car interiors, or tight spaces, detach the extension tube and

use the main unit with appropriate accessories.

- **High-Reach Mode:** For cleaning ceilings, cobwebs, or high shelves, attach the crevice tool or brush directly to the extension tube (without the main suction head) and use the main unit.

6. Maintenance and Care

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Emptying the Dust Bin

- It is recommended to empty the dust bin after each use or when the MAX fill line is reached.
- Press the dust bin release button and remove the bin from the main unit.
- Open the dust bin lid and empty the contents into a waste bin.
- Close the lid and reattach the dust bin to the main unit until it clicks.

6.2. Cleaning the Filters

- The filters should be cleaned regularly, approximately once a month, depending on usage.
- Remove the dust bin and then carefully remove the foam filter and the pleated filter.
- Tap the filters to remove loose dust. For a deeper clean, rinse them under cold running water.
- Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use a dryer or heat source.

6.3. Cleaning the Brush Roll

- Periodically check the brush roll in the Power Slim Vision head for tangled hair or debris.
- To access the brush roll, unlock the brush cover (refer to the diagrams in the full manual if needed).
- Carefully cut and remove any tangled hair or fibers using scissors.
- Reassemble the brush roll and cover securely.

6.4. Battery Care

- To prolong battery life, avoid completely discharging the battery before recharging.
- Store the vacuum in a cool, dry place when not in use.
- If storing for an extended period, ensure the battery is partially charged (around 50%).

7. Troubleshooting

Refer to the table below for common issues and their solutions.

| Problem | Possible Cause | Solution |
|--------------------------|---------------------------------|--|
| Vacuum does not turn on. | Battery is not charged. | Charge the battery fully. |
| | Charger not properly connected. | Ensure charger is securely plugged into both the vacuum and the wall outlet. |
| Reduced suction power. | Dust bin is full. | Empty the dust bin. |

| Problem | Possible Cause | Solution |
|--------------------------|---|--|
| | Filters are dirty or clogged. | Clean or replace the filters. Ensure they are completely dry before reinserting. |
| | Brush roll is tangled or blocked. | Remove debris from the brush roll. |
| | Obstruction in the nozzle or tube. | Check and clear any blockages in the suction path. |
| Brush roll not spinning. | Brush roll is jammed. | Remove any obstructions from the brush roll. |
| | Connection issue with the motorized head. | Ensure the Power Slim Vision head is securely attached to the extension tube or main unit. |

8. Technical Specifications

| Feature | Specification |
|--------------------------------|---|
| Brand | Rowenta |
| Model Number | RH7329WO |
| Battery Type | Lithium-Ion |
| Voltage | 21.9 Volts |
| Runtime | Up to 25 minutes |
| Product Dimensions (L x W x H) | 26 x 25 x 114.5 cm |
| Item Weight | 3.75 Kilograms |
| Sound Level | 78 Decibels |
| Special Feature | Lightweight, Power Slim Vision LED Head |

9. Warranty and Customer Support

This Rowenta product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact Rowenta customer service. Contact information can typically be found on the Rowenta official website or in the documentation provided with your product.

When contacting support, please have your product model number (RH7329WO) and proof of purchase readily available.