

[Manuals.plus](#) /

› [Fender](#) /

› Fender CD-60SCE Dreadnought Electro-Acoustic Guitar Instruction Manual

## Fender CD-60SCE

# Fender CD-60SCE Dreadnought Electro-Acoustic Guitar Instruction Manual

Model: CD-60SCE | Brand: Fender

## INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your new Fender CD-60SCE Dreadnought Electro-Acoustic Guitar. The CD-60SCE combines Fender's rich heritage with modern enhancements, making it suitable for musicians of all skill levels. It features a dreadnought cutaway body, a Fishman pickup/preamp system, and an integrated electronic tuner.







Figure 1: Front view of the Fender CD-60SCE Dreadnought Electro-Acoustic Guitar.

## PRODUCT FEATURES

- **Dreadnought Cutaway Body:** Offers excellent projection and easy access to upper frets.
- **Fishman Pickup/Preamp System:** Provides amplified performance with integrated controls for bass, treble, and volume.
- **Integrated Electronic Tuner:** Ensures reliable tuning stability.
- **"Easy-to-Play" Neck:** Designed with rolled fretboard edges for enhanced comfort and playability.
- **Quality Construction:** Crafted from high-quality mahogany wood for the back and sides, with a solid spruce top.



Figure 2: Key components of the Fender CD-60SCE guitar, highlighting the die-cast chrome tuners, easy-to-play neck, mahogany back and sides, dreadnought cutaway body, solid spruce top, and integrated Fishman pickup, preamp, and tuner.

## SETUP

1. **Unpacking and Inspection:** Carefully remove the guitar from its packaging. Inspect for any visible damage.

2. **Tuning the Guitar:**

The CD-60SCE features an integrated electronic tuner. To use it:

- Press the "Tuner" button on the Fishman preamp to activate the tuner.
- Pluck each string individually. The display will show the note being played and indicate if it is sharp or flat.
- Adjust the corresponding tuning machine head (see Figure 3) until the display shows the correct note and the indicator is centered.

- Repeat for all six strings (E, A, D, G, B, E).



Figure 3: Headstock and chrome die-cast tuning machines.

### 3. Connecting to an Amplifier (Optional):

If you wish to amplify your guitar, connect a standard 6.35mm instrument cable from the guitar's output jack (located at the bottom strap button) to your amplifier's input.

## OPERATING THE FISHMAN PREAMP

Your Fender CD-60SCE is equipped with a Fishman pickup and preamp system, allowing you to control your amplified tone.



Figure 4: Fishman preamp controls.

- **Volume Knob:** Controls the overall output level of the amplified sound. Turn clockwise to increase volume, counter-clockwise to decrease.
- **Bass Knob:** Adjusts the low-frequency response of your tone. Turn clockwise for more bass, counter-clockwise for less.
- **Treble Knob:** Adjusts the high-frequency response of your tone. Turn clockwise for brighter tones, counter-clockwise for warmer tones.
- **Tuner Button:** Activates the integrated electronic tuner (as described in the Setup section).

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the guitar after each use to remove sweat and fingerprints. For a deeper clean, use guitar-specific cleaning products sparingly. Avoid abrasive cleaners.
- **String Replacement:** Strings should be replaced regularly, depending on usage. Phosphor bronze strings are recommended for optimal tone. Replace one string at a time to maintain neck tension.
- **Storage:** Store your guitar in a stable environment, away from extreme temperature changes and humidity fluctuations. A guitar case or gig bag is recommended for protection.
- **Neck Adjustment:** The guitar's neck may require occasional adjustment (truss rod adjustment) due to changes in humidity or string tension. This is best performed by a qualified guitar technician.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound when amplified	Cable not connected properly Amplifier off or volume low Guitar's volume knob turned down Battery in preamp is dead	Ensure instrument cable is securely connected to both guitar and amplifier. Turn on amplifier and increase volume. Increase the guitar's volume knob on the preamp. Replace the 9V battery in the preamp compartment.
Strings buzzing	Improper playing technique Worn strings Neck relief issue High or low action	Ensure proper finger placement and pressure. Replace old or worn strings. Consult a guitar technician for neck relief or action adjustments.
Tuner not working	Battery in preamp is dead Tuner not activated	Replace the 9V battery in the preamp compartment. Press the "Tuner" button on the preamp to activate it.

## SPECIFICATIONS

<b>Brand</b>	Fender
<b>Model Name</b>	CD-60SCE Dreadnought
<b>Model Number</b>	0970113006
<b>Color</b>	Black
<b>Top Material</b>	Wood (Solid Spruce)
<b>Body Material</b>	Mahogany
<b>Back Material</b>	Mahogany Wood
<b>Neck Material</b>	Walnut Wood
<b>Fretboard Material</b>	Walnut Wood
<b>String Material</b>	Phosphor Bronze
<b>Hand Orientation</b>	Right
<b>Bridge Type</b>	Fixed
<b>Number of Strings</b>	6
<b>Scale Length</b>	25.3 inches
<b>Dimensions (L x W x H)</b>	111.3 x 40.6 x 15.8 cm
<b>Item Weight</b>	4 Kilograms
<b>Connectivity</b>	6.35 mm Instrument Cable
<b>UPC</b>	885978875726

Country of Origin

Indonesia

## WARRANTY INFORMATION

The Fender CD-60SCE Dreadnought Electro-Acoustic Guitar comes with a **2-year limited warranty** from Fender. This warranty guarantees that your guitar is free from defects in materials and workmanship for two (2) years from the original date of purchase. This warranty is non-transferable. Please retain your proof of purchase for warranty claims.



**GARANTIE  
LIMITÉE DE  
2 ANS \***

\* NON TRANSFÉRABLE  
LES GUITARES FENDER SONT  
CONSTRUITES AVEC UNE QUALITÉ  
INÉGALÉE. FENDER GARANTIT CETTE  
GUITARE ÊTRE EXEMPT DE DÉFAUTS DE  
MATÉRIAUX ET DE FABRICATION  
PENDANT DEUX (2) ANS À COMPTER  
DE LA DATE D'ACHAT ORIGINALE.

Figure 5: Fender's 2-year limited warranty details.

## SUPPORT AND RESOURCES

For additional support, resources, and to enhance your playing skills, consider the following:

- **Fender Play:** Your guitar includes free virtual lessons on Fender Play. This platform offers a structured way to learn guitar with song-based lessons. Visit [Fender Play](#) for more information and to redeem your free lessons.

- **Fender Official Website:** For product registration, FAQs, and further support, visit the official Fender website.
- **Authorized Service Centers:** For repairs or professional adjustments, contact Fender customer service to locate an authorized service center near you.

# COMPREND UN ABONNEMENT GRATUIT À FENDER PLAY®

## LA FAÇON LA PLUS SIMPLE D'APPRENDRE LA GUITARE

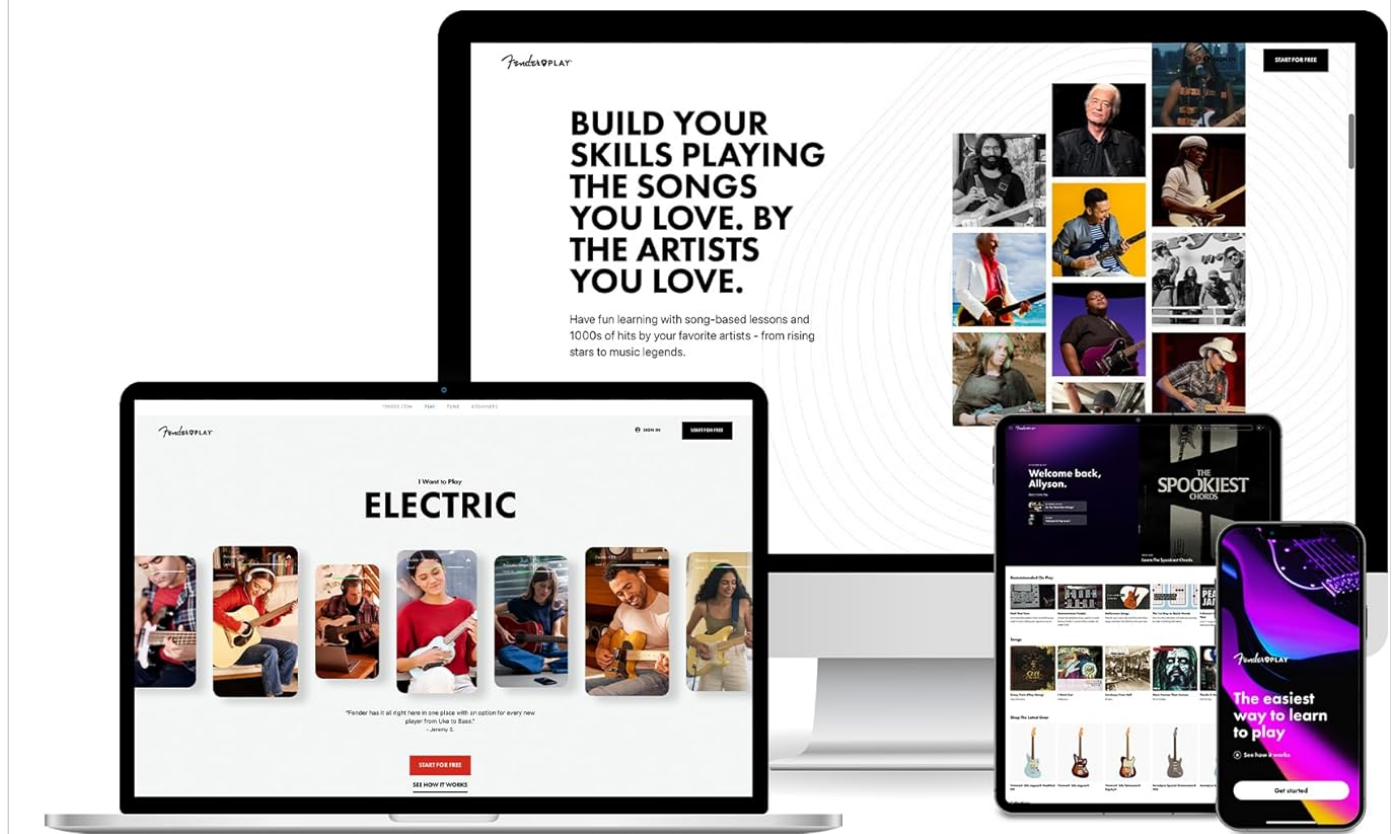


Figure 6: Fender Play, an online platform for learning guitar.