

Magic Sing EB2

Magic Sing EB2 Wireless Microphone Instruction Manual

Model: EB2

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Magic Sing EB2 Wireless Microphone. The EB2 is designed as an additional wireless microphone for compatible Magic Sing karaoke systems, enhancing your karaoke experience.

Compatibility: The Magic Sing EB2 Wireless Microphone is specifically designed to work with the **Magic Sing E2** and **Magic Sing Titanium Max** karaoke machines. It is not compatible with other Magic Sing models or karaoke systems.

2. SETUP AND SYNCHRONIZATION

Follow these steps to connect and synchronize your EB2 Wireless Microphone with your Magic Sing E2 or Titanium Max base unit:

1. **Insert Batteries:** Open the battery compartment of the EB2 microphone and insert two AA batteries. Ensure correct polarity.
2. **Automatic Power On:** The microphone will automatically power on once batteries are inserted.
3. **Power Off Microphone:** Turn the microphone off using the power button.
4. **Initiate Synchronization:** While the microphone is OFF, press and hold the '7' button and the 'POWER' button simultaneously.
5. **Observe Indicator Light:** A green indicator light on the microphone will begin blinking approximately 4-5 times. Continue holding the buttons until the light stops blinking.
6. **Release Buttons:** Once the green light stops blinking, release both the '7' and 'POWER' buttons.
7. **Verification:** The EB2 microphone is now successfully synchronized with your Magic Sing E2 or Titanium Max base unit and ready for use.



Image of the Magic Sing EB2 wireless microphone, showing its grey body, silver mesh head, and control buttons including a numeric keypad, navigation buttons, and power/menu/list/mic buttons.

3. OPERATING INSTRUCTIONS

Once synchronized, the EB2 microphone functions as a standard wireless microphone for your Magic Sing system. Use the integrated buttons to navigate menus, select songs, and control various functions of your karaoke machine.

- **Power Button:** Turns the microphone on or off.
- **Numeric Keypad (0-9):** Used for entering song numbers or navigating menu options.
- **Navigation Buttons (Up/Down/Left/Right/Enter):** For menu navigation and selection.
- **MENU Button:** Accesses the main menu of the karaoke system.
- **LIST Button:** Displays the song list.
- **MIC Button:** Controls microphone volume or effects (functionality may vary by system).

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your EB2 microphone.

- **Battery Replacement:** Replace AA batteries when the low battery indicator appears or when performance degrades. Always use fresh, high-quality batteries.
- **Cleaning:** Wipe the microphone body with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Remove batteries if storing for extended periods to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your Magic Sing EB2 Wireless Microphone, refer to the following common solutions:

- **Microphone Not Connecting/No Sound:**

- Ensure batteries are correctly inserted and fully charged.
- Repeat the synchronization steps outlined in Section 2.
- Verify that the microphone is within range of the karaoke base unit.
- Check the microphone volume settings on both the microphone and the karaoke system.

- **Interference:**

- Move away from other wireless devices that may cause interference.
- Ensure there are no obstructions between the microphone and the base unit.

6. SPECIFICATIONS

Model Number	EB2
Microphone Form Factor	Handheld
Power Source	Battery Powered (AA)
Hardware Platform	Karaoke Machine
Number of Channels	1
Manufacturer	EnterMedia Co. Ltd
UPC	680201841574
Item Weight	10.3 ounces
Package Dimensions	12.87 x 4.33 x 2.48 inches
Connectivity Technology	Infrared
Special Feature	Wireless
Color	Grey
Included Components	Battery
Polar Pattern	Unidirectional

7. SAFETY INFORMATION

Consumer Alert:

Most users do not need a license to operate this wireless microphone system. Nevertheless, operating this microphone system without a license is subject to certain restrictions:

- The system may not cause harmful interference.
- It must operate at a low power level (not in excess of 50 milliwatts).
- It has no protection from interference received from any other device.

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your Magic Sing E2 or Titanium Max karaoke system, or visit the official Magic Sing website. Keep your purchase receipt

for warranty claims.