

[Manuals.plus](#) /

› [GUESS](#) /

› GUESS W1156L1 Women's Analog Watch Instruction Manual

GUESS W1156L1

GUESS W1156L1 Women's Analog Watch Instruction Manual

Model: W1156L1

INTRODUCTION

Thank you for choosing the GUESS W1156L1 Women's Analog Watch. This manual provides essential information for the proper setup, operation, maintenance, and care of your new timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.



Image: Front view of the GUESS W1156L1 watch, showcasing the silver dial with crystal embellishments and stainless steel bracelet.

The GUESS W1156L1 is a stylish analog watch featuring a durable stainless steel case and bracelet, a mineral glass crystal, and a reliable quartz movement. It is designed for everyday wear with a water resistance rating of 5 ATM.



Image: Angled close-up of the watch face, highlighting the intricate crystal details on the bezel and dial, and the three sub-dials.

1. Unboxing

Your GUESS W1156L1 watch comes packaged in a branded case. Carefully remove the watch and any protective films from the crystal, case back, and bracelet.

2. Setting the Time

1. **Pull out the crown:** Locate the crown on the right side of the watch case. Gently pull it out to the first or second click position (depending on the model's specific functions). For time setting, pull it out to the outermost position.
2. **Adjust the time:** Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. **Push in the crown:** Once the time is set, push the crown back into its normal operating position against the watch case. This will start the watch movement.





Image: Side view of the GUESS W1156L1 watch, clearly showing the crown used for setting the time and date.

3. Bracelet Adjustment

The stainless steel bracelet may need to be adjusted for a comfortable fit. It is recommended to have this adjustment performed by a professional jeweler or watch repair service to avoid damaging the bracelet or clasp. They can add or remove links as necessary.



Image: Close-up of the watch's foldover clasp, featuring the embossed GUESS logo, which secures the bracelet.

OPERATING THE WATCH

Time Reading

Your GUESS W1156L1 watch displays time using traditional hour, minute, and second hands on an analog dial. The sub-dials provide additional information, typically 24-hour format, day of the week, and date, depending on the specific movement configuration.

Water Resistance (5 ATM)

This watch has a water resistance rating of 5 ATM (50 meters). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water, such as washing hands. It is **not** suitable for swimming, showering, diving, or any water sports where it may be subjected to high-velocity water or prolonged immersion.

- Do not operate the crown or pushers while the watch is wet or submerged.
- Ensure the crown is fully pushed in before any contact with water.

MAINTENANCE AND CARE

Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the finish.

Battery Replacement

Your watch is powered by a Lithium Metal battery. When the watch stops or the second hand begins to skip, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure the watch's water resistance is maintained and to prevent damage to the movement.

General Care Tips

- Avoid exposing your watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Keep your watch away from strong magnetic fields, as these can affect the accuracy of the quartz movement.
- Protect your watch from impacts and drops.
- If the watch comes into contact with saltwater, rinse it gently with fresh water and dry it thoroughly with a soft cloth.

TROUBLESHOOTING

Watch Not Running

- **Check the crown:** Ensure the crown is fully pushed in against the watch case. If it is pulled out, the watch will not run.
- **Battery:** If the watch has stopped completely, the battery may need to be replaced. Consult a professional watch technician.

Incorrect Time Display

- **Reset the time:** Follow the 'Setting the Time' instructions in the Setup section to adjust the time.
- **Magnetic interference:** If the watch is consistently running fast or slow, it may have been exposed to a strong magnetic field. A professional watch technician can demagnetize the movement.

Condensation Inside the Watch

If you notice condensation (fogging) under the crystal, it indicates that moisture has entered the watch. This requires immediate attention from a professional watch technician to prevent further damage to the movement.

SPECIFICATIONS

Feature	Detail
Model Number	W1156L1
Brand	GUESS
Display Type	Analog
Movement Type	Quartz
Power Source	Battery Powered (1 Lithium Metal battery included)

Case Material	Stainless Steel
Case Diameter	40 mm
Case Thickness	12.1 mm
Band Material	Stainless Steel
Band Width	20 mm
Clasp Type	Foldover Clasp
Crystal Material	Mineral
Water Resistance Depth	50 Meters (5 ATM)
Dial Color	Silver
Band Color	Silver
Embellishment Feature	Crystal
Item Weight	179.6 Grams

WARRANTY INFORMATION

Your GUESS W1156L1 watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official GUESS Watches website for detailed information.

The warranty typically does not cover normal wear and tear, damage caused by improper use, accidents, unauthorized repairs, or battery replacement.

CUSTOMER SUPPORT

For further assistance, service, or inquiries regarding your GUESS W1156L1 watch, please contact GUESS customer support. Contact information can usually be found on the official GUESS Watches website or on the warranty documentation provided with your watch.

When contacting support, please have your watch model number (W1156L1) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07F3FZLYS>

More documents and user manuals: <https://manuals.plus/>