

Easytry123 Easytry1120

Easytry123 Universal IR Learning Remote Control

USER MANUAL - MODEL: EASYTRY1120

1. Introduction

Thank you for choosing the Easytry123 Universal IR Learning Remote Control. This manual provides essential instructions for the proper setup, operation, and maintenance of your new remote. Please read this guide thoroughly before use to ensure optimal performance and compatibility with your devices.

This remote is designed as a replacement and learning solution for various infrared-controlled devices, including Dish TV receivers, DVD players, and DVRs.

For best results, ensure your original remote control is available if you intend to use the learning function.

2. Product Overview

The Easytry123 Universal IR Learning Remote Control is designed to consolidate control of multiple infrared-enabled devices. Its ergonomic design and intuitive button layout aim to provide a seamless user experience.



Figure 2.1: Front view of the Easytry123 Universal IR Learning Remote Control, showing the button layout for various functions including power, channel, volume, navigation, and DVR controls.



Figure 2.2: Back view of the Easytry123 Universal IR Learning Remote Control, displaying the smooth, ergonomic casing and the battery compartment cover.



Figure 2.3: Back view of the Easytry123 Universal IR Learning Remote Control with the battery compartment open, showing the slots for two AAA batteries.

3. Setup

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and lift it off.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

***Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.*

4. Operating Instructions

4.1 Basic Functions

This remote is pre-programmed to function as a replacement for many Dish TV, DVD, and DVR receivers. Point the remote directly at the device you wish to control. Common buttons and their functions include:

- **POWER:** Turns the device on or off.
- **MODE (TV, DVD, DVR, SAT):** Selects the device to be controlled. Press the corresponding mode button before operating.
- **CHANNEL +/-:** Changes channels up or down.
- **VOL +/-:** Adjusts the volume level.
- **MUTE:** Silences the audio.
- **GUIDE:** Displays the program guide.
- **INFO:** Displays information about the current program.
- **MENU:** Accesses the device's main menu.

- **Navigation (Up, Down, Left, Right, SELECT):** Navigates through menus and selects options.
- **DVR Controls (PLAY, PAUSE, STOP, REC, FWD, REW, SKIP BACK, SKIP FWD):** Controls playback functions for DVRs and DVD players.
- **Number Pad (0-9):** Direct channel entry.

4.2 Using the Learning Function

The learning function allows this remote to copy infrared signals directly from your original remote control. This is useful for functions not pre-programmed or for devices not fully compatible out-of-the-box. The exact steps may vary slightly, but a general procedure is as follows:

1. **Prepare Remotes:** Place the Easytry123 remote and your original remote head-to-head (IR emitters facing each other) at a distance of approximately 1-3 cm (0.5-1 inch).
2. **Enter Learning Mode:** Press and hold the desired **MODE** button (e.g., TV, DVD, DVR) on the Easytry123 remote for approximately 3-5 seconds until the mode indicator light starts blinking slowly. This indicates it's ready to learn.
3. **Select Target Button:** Press the button on the Easytry123 remote that you want to program (e.g., a specific function button). The indicator light should now blink faster, waiting for a signal.
4. **Transmit Signal:** Press and hold the corresponding button on your **original remote** that you wish to copy. Hold it until the indicator light on the Easytry123 remote blinks rapidly several times and then stays solid, indicating successful learning.
5. **Repeat or Exit:** To learn more buttons, repeat steps 3 and 4. To exit learning mode, press the **MODE** button again, or wait for 10-15 seconds for it to automatically exit.

***Important:** If the indicator light does not respond as described, try repositioning the remotes or replacing batteries in the original remote. Some original remotes may have stronger or weaker IR signals, requiring slight adjustments in distance.*

5. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light fails to illuminate. Refer to Section 3.1 for installation.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. Troubleshooting

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly installed batteries.	Check battery orientation; replace with fresh AAA batteries.
Remote not controlling device.	Incorrect device mode selected. Obstruction between remote and device.	Ensure correct MODE button (TV, DVD, DVR, SAT) is pressed. Remove any obstructions and ensure direct line of sight.

Problem	Possible Cause	Solution
Learning function fails.	Remotes not positioned correctly. Original remote batteries low. Signal interference.	Ensure IR emitters are 1-3 cm apart and facing each other. Replace batteries in the original remote. Try learning in a different environment.
Some buttons don't work after learning.	Learning process for specific button failed.	Repeat the learning process for the problematic button.

7. Specifications

- **Model Number:** Easytry1120
- **ASIN:** B07F3WB6J2
- **Batteries Required:** 2 x AAA (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Television, DVD, DVR, Satellite Receivers (Dish TV)
- **Max Number of Supported Devices:** 1 (via mode selection)
- **Special Feature:** IR Learning Function, Ergonomic Design

8. Warranty and Support

For warranty information or technical support regarding your Easytry123 Universal IR Learning Remote Control, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase.