Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Greencut /
- > Greencut PP560L 56V Cordless Lithium-Ion Pole Saw Instruction Manual

Greencut PP560L

Greencut PP560L 56V Cordless Lithium-Ion Pole Saw Instruction Manual

Model: PP560L | Brand: Greencut

1. Introduction

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your Greencut PP560L 56V Cordless Lithium-Ion Pole Saw. Please read this manual thoroughly before using the product and keep it for future reference.

The Greencut PP560L is a lightweight and powerful pole saw designed for pruning and cutting branches at height. It features a 56V lithium-ion battery system (battery and charger sold separately) and an extendable aluminum shaft for optimal reach and balance.



Figure 1: Greencut PP560L 56V Cordless Lithium-Ion Pole Saw. This image shows the complete pole saw assembly, including the motor unit, extension pole, and cutting head with chain and bar.

2. SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow safety instructions can result in serious injury or property damage.

General Safety Warnings:

- Read the Manual: Understand all instructions and warnings before use.
- Wear Personal Protective Equipment (PPE): Always wear safety glasses, hearing protection, gloves, and sturdy footwear. A hard hat is recommended for overhead work.
- Work Area Safety: Keep the work area clear of bystanders, children, and pets. Ensure good footing and balance.
- Avoid Dangerous Environments: Do not use the pole saw in wet conditions or in the presence of flammable liquids or gases.
- **Inspect Before Use:** Check for damaged parts, loose fasteners, or any other condition that may affect safe operation.
- **Battery Safety:** Use only Greencut 56V MAX lithium-ion batteries and chargers. Do not expose batteries to water or extreme temperatures.
- Maintain Proper Grip: Hold the pole saw firmly with both hands.
- Overhead Power Lines: Be extremely cautious of overhead power lines. Contact with power lines can be fatal.
- **Kickback:** Be aware of kickback, which can occur when the moving chain contacts an object at the upper tip of the guide bar.
- Storage: Store the tool in a dry, secure place out of reach of children.

3. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Greencut PP560L pole saw.

- 1. **Motor Unit:** Contains the powerful brushless motor, battery housing, and control switch.
- 2. Ergonomic Handlebar: Semi-circular handle for comfortable grip and control.
- 3. Extension Pole: Lightweight aluminum shaft, extendable for increased reach (up to 270cm total length).
- 4. Cutting Head: Includes the guide bar, saw chain, and automatic lubrication system.
- 5. **Chain Tensioner:** Tool-free side chain tensioning mechanism.
- 6. Speed Selector: Switch to adjust cutting speed.



Figure 2: Pole Saw with Extension. This image illustrates the pole saw with its extendable shaft, highlighting the reach capability.

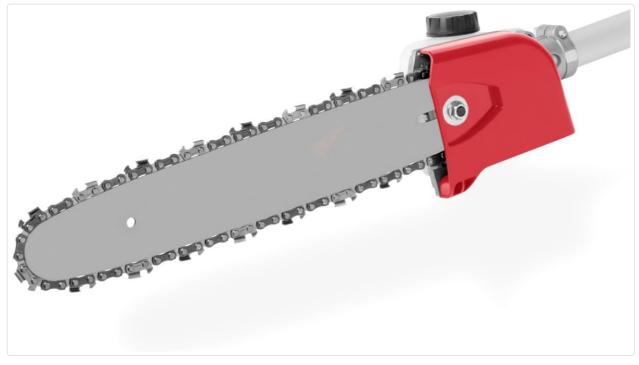


Figure 3: Close-up of the Cutting Head. This image details the guide bar and saw chain, which are essential for cutting.



Figure 4: Ergonomic Handlebar. This image shows the semi-circular handlebar designed for user comfort and control during operation.

4. SETUP AND ASSEMBLY

4.1. Assembly of the Pole Saw

The Greencut PP560L features a modular design for easy assembly and extension.

- 1. **Connect the Extension Pole:** Align the connection points of the motor unit and the extension pole. Secure them firmly using the provided locking mechanism.
- 2. **Attach the Cutting Head:** Connect the cutting head (guide bar and chain assembly) to the end of the extension pole, ensuring it is securely fastened.
- 3. **Adjust Handlebar:** Position the ergonomic handlebar to a comfortable and balanced position, then tighten its fasteners.

4.2. Battery Installation (Battery and Charger Sold Separately)

The Greencut PP560L requires a Greencut 56V MAX lithium-ion battery (2.0Ah or 4.0Ah), which is not included with the pole saw and must be purchased separately.

- 1. Ensure the pole saw is turned off and the trigger is disengaged.
- 2. Align the battery with the battery housing on the motor unit.

- 3. Slide the battery into the housing until it clicks securely into place.
- 4. To remove the battery, press the release button and slide the battery out.



Figure 5: Battery Insertion. This image demonstrates the correct method for inserting the 56V lithium-ion battery into the pole saw's motor unit.



Figure 6: Battery Attached. This image shows the battery fully seated and secured in the pole saw's battery housing.

4.3. Chain Lubrication

The pole saw features an automatic chain lubrication system. Ensure the oil reservoir is filled with appropriate chain oil before each use. Check the oil level regularly during operation.

4.4. Chain Tension Adjustment

The PP560L is equipped with a tool-free side chain tensioner. Adjust the chain tension so that the chain is snug against the guide bar but can still be pulled freely by hand. A properly tensioned chain is crucial for safe and efficient cutting.

5. OPERATING INSTRUCTIONS

5.1. Starting and Stopping

- 1. Ensure the battery is fully charged and securely installed.
- 2. Hold the pole saw firmly with both hands, maintaining good balance.
- 3. To start, press the safety lock-off button (if present) and then squeeze the trigger switch.
- 4. To stop, release the trigger switch.

5.2. Speed Selection

The pole saw features a speed selector switch to adjust the cutting speed based on the task. Use lower speeds for delicate cuts or smaller branches, and higher speeds for thicker branches.



Figure 7: Speed Selector Switch. This image shows the switch for adjusting the operational speed of the pole saw, indicated by tortoise and hare symbols.

5.3. Cutting Techniques

- Planning Cuts: Before cutting, assess the branch's direction of fall and clear the area.
- Three-Cut Method: For larger branches, use the three-cut method to prevent bark stripping:
 - a. Make an undercut about one-third of the way through the branch, away from the main trunk.
 - b. Make a top cut further out on the branch, allowing it to fall.
 - c. Make a final clean cut close to the trunk.
- Maintain Control: Always keep a firm grip and maintain balance. Avoid overreaching.
- Avoid Kickback: Do not cut with the tip of the guide bar.



Figure 8: Operating the Pole Saw. This image shows a user safely operating the Greencut PP560L to prune high branches, demonstrating proper posture and reach.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your pole saw.

- Clean After Each Use: Remove sawdust, debris, and sap from the guide bar, chain, and motor unit.
- Check Chain Tension: Regularly inspect and adjust chain tension. A loose chain can derail, and a too-tight chain can cause premature wear.
- **Sharpen Chain:** A dull chain reduces cutting efficiency and increases kickback risk. Sharpen the chain as needed or have it professionally sharpened.
- Check Oil Level: Ensure the automatic lubrication system reservoir is always filled with appropriate chain oil.
- **Inspect for Damage:** Periodically check for any signs of wear, damage, or loose components. Replace damaged parts immediately.
- **Storage:** Store the pole saw in a dry, secure location, away from moisture and extreme temperatures. Remove the battery before storage.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Pole saw does not start.	Battery not charged or not properly installed. Safety lock-off not engaged.	Charge battery fully and ensure it is securely clicked into place. Press safety lock-off before squeezing trigger.
Poor cutting performance.	Dull chain. Incorrect chain tension. Insufficient chain lubrication.	Sharpen or replace chain. Adjust chain tension. Fill oil reservoir and check automatic lubrication.
Chain derails frequently.	Loose chain tension. Worn guide bar or chain.	Adjust chain tension. Inspect guide bar and chain for wear and replace if necessary.
Motor stops during operation.	Overload protection activated. Battery low.	Reduce cutting pressure. Allow motor to cool. Recharge or replace battery.

8. SPECIFICATIONS

Feature	Detail
Brand	Greencut
Model Number	PP560L (Reference: PP56LI-ION)
Power Source	Battery Powered (56V Lithium-Ion)
Battery Included	No (Battery and charger sold separately)
Motor Type	Brushless
Max Length (with extension)	270 cm
Guide Bar Length	254 mm (10 inches)
Max Cutting Capacity	230 mm
Chain Tensioning	Tool-free side tensioner
Lubrication System	Automatic chain lubrication
Product Dimensions (L x W x H)	95.8 x 20.9 x 24.7 cm
Product Weight	700 grams (without battery)
Color	Red
UPC	08436572521674

9. WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For warranty claims, technical support, or

spare parts inquiries, please contact Greencut customer service or refer to the official Greencut website.

Remember that the 56V lithium-ion battery and charger are sold separately and are not included with the Greencut PP560L pole saw.

You can find more information about Greencut products and accessories on their official brand store Greencut Brand Store.

Related Documents - PP560L



GREENCUT GWP300X: Manual de Usuario y Guía de Mantenimiento

Manual completo para la motobomba GREENCUT GWP300X, incluyendo instrucciones de uso, montaje, mantenimiento, solución de problemas y especificaciones técnicas.



GREENCUT RLM610XE Manual de Instrucciones y Mantenimiento

Guía completa de instrucciones y mantenimiento para el cortacésped GREENCUT RLM610XE. Cubre seguridad, operación, montaje, solución de problemas y cuidado del producto.



Manual de Instrucciones Greencut GGT200L - Desbrozadora a Batería

Guía completa para el uso seguro y mantenimiento de la desbrozadora a batería Greencut GGT200L. Incluye especificaciones técnicas, instrucciones de montaje, operación, solución de problemas y precauciones de seguridad.



GREENCUT GS610X Motosierra: Manual de Instrucciones y Seguridad

Manual completo de instrucciones y seguridad para la motosierra GREENCUT GS610X. Cubre el uso seguro, montaje, mantenimiento, solución de problemas y especificaciones técnicas del producto.



Greencut RLM610XE Maintenance Guide

Comprehensive maintenance guide for the Greencut RLM610XE lawnmower, covering safety precautions, product description, assembly, usage, maintenance, troubleshooting, and technical specifications. Includes information in multiple languages.



Greencut BA750C/BAP750C Maintenance Guide

Comprehensive maintenance guide for the Greencut BA750C and BAP750C water pumps, covering safety precautions, product description, usage, troubleshooting, and maintenance procedures.