

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tekswamp](#) /

› [TeKswamp Video Projector Remote Control for Smart LightRaise 60wi User Manual](#)

## Tekswamp LightRaise 60wi

# TeKswamp Video Projector Remote Control for Smart LightRaise 60wi User Manual

## 1. INTRODUCTION

This manual provides instructions for the TeKswamp Video Projector Remote Control, designed for use with the Smart LightRaise 60wi projector. This remote offers essential functions for operating your projector, including power control, menu navigation, and input selection. It is engineered for ease of use and durability.

The remote features comfortable, easy-to-reach buttons in a compact, rectangular body. Its electrical circuit requires minimal power, ensuring operation even when batteries are low. An ON indicator light confirms proper function and IR signal transmission. Constructed from strong, durable plastic, the remote's buttons are designed to prevent accidental signals and wear.

## 2. PACKAGE CONTENTS

- 1 x TeKswamp Video Projector Remote Control
- *Note: Two AAA batteries are required and not included.*

## 3. SETUP

### 3.1 Battery Installation

To power the remote control, two AAA batteries are required. Follow these steps for proper installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





This image illustrates the battery compartment located on the back of the remote. It requires two AAA batteries, inserted with the correct polarity as indicated.

A security screw is included as a childproofing feature to prevent unauthorized access to internal

components.

## 4. OPERATING INSTRUCTIONS

### 4.1 Remote Control Layout





This image displays the full layout of the TeKswamp remote control, highlighting the power buttons (ON/OFF), input selection, navigation cluster, and other function keys.

## 4.2 Basic Functions

- **ON/OFF:** Press the **ON** button to power on the projector. Press the **OFF** button to power off the projector.
- **SRC (Source):** Press this button to cycle through available input sources (e.g., VGA, HDMI, Video).
- **Navigation Buttons (Up, Down, Left, Right, OK):** Use these buttons to navigate through the projector's on-screen menu and confirm selections.
- **MENU/INFO:** Access the projector's main menu or display information about the current input.
- **EXIT/LAMP:** Exit the current menu or display lamp information.
- **VOL +/- (Volume):** Adjust the audio volume if the projector has built-in speakers or audio output.
- **K.S. (Keystone):** Adjust the keystone correction to square the image if the projector is not perfectly perpendicular to the screen.
- **ZOOM:** Adjust the digital zoom level of the projected image.
- **ASPECT/RE-SYNC:** Change the aspect ratio of the image or re-synchronize the input signal.
- **PICT/FREEZE:** Freeze the current image on the screen.
- **Number Buttons (0-9):** May be used for direct input selection or other functions depending on the projector model.

The remote provides most of the original commands for your device. It is guaranteed to turn the device on and off, give access to and navigate the menu, and choose the input signal. Some specific functions, such as page flip, keystone correction, video adjustment, and numbers, are normally available but may not work properly with all devices. No laser pointer is available.

## 5. MAINTENANCE

### 5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

### 5.2 Storage

When not in use for extended periods, store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove the batteries if the remote will not be used for several weeks.

or months to prevent battery leakage, which can damage the device.

## 6. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Ensure there is a clear line of sight between the remote control and the projector's IR receiver. Obstructions can block the signal.
  - Verify that the projector is powered on and functioning correctly.
- **Specific functions not working:**
  - While the remote is designed to replicate most original functions, some advanced or model-specific features may not be fully supported. Refer to your projector's original manual for specific function compatibility.
- **ON Indicator not lighting up:**
  - This indicates that the remote is not sending an IR signal. Check batteries and ensure buttons are being pressed firmly.

## 7. SPECIFICATIONS

---

Feature	Specification
Product Dimensions	1.6 x 5.7 x 0.8 inches
Item Weight	2 ounces
Batteries Required	2 AAA batteries (not included)
Compatible Devices	Smart LightRaise 60wi Video Projector
Color	White
Manufacturer	TL Electronics CO.

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your TeKswamp Video Projector Remote Control, please refer to the documentation provided at the time of purchase or contact TeKswamp customer service directly. Contact details can typically be found on the manufacturer's official website or through your retailer.