

Manuals.plus /

> VINLUZ /

> VINLUZ 3-Light Modern Chandelier, Brushed Nickel (Model 1810-3-13) Instruction Manual

VINLUZ 1810-3-13

VINLUZ 3-Light Modern Chandelier Instruction Manual

Model: 1810-3-13 | Brand: VINLUZ

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or personal injury, follow these instructions carefully.

- Always turn off the power at the main circuit breaker before beginning installation.
- Consult a qualified electrician if you are not familiar with electrical installations.
- Use only bulbs of the specified type and wattage.
- Do not exceed the maximum wattage for bulbs (60W max).
- Ensure all connections are secure and properly insulated.
- Keep flammable materials away from the light fixture.
- This fixture is designed for indoor use only.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Chandelier fixture body (Brushed Nickel finish)
- 3 Clear Glass Shades
- Mounting hardware kit
- Adjustable height stems (four 10-inch sections)
- Instruction manual
- (Bulbs are not included)



E26 bulb base

Max Wattage: 60W

Voltage: 110V-120V

Light bulb is not included!

Image: Overview of the chandelier components, including the main body, glass shades, and extension rods.

SPECIFICATIONS

Brand	VINLUZ
Model Number	1810-3-13
Color	Brushed Nickel
Material	Metal, Glass
Style	Modern
Fixture Form	Ceiling Pendant
Product Dimensions	17"L (Length)
Light Source Type	CFL/LED/Incandescent/Halogen (Bulbs not included)

Bulb Base	E26
Max Wattage per Bulb	60 Watts
Voltage	120 Volts
Special Feature	Dimmable (with compatible bulbs and dimmer switch)
Installation Type	Ceiling-hardwired
Indoor/Outdoor Usage	Indoor use only
Item Weight	6 Pounds

Easy To Install





Vaulted or Sloped Ceilings



E26 Base



High Quality Finish

Image: Diagram illustrating the maximum dimensions and adjustable height options for the chandelier.

SETUP & INSTALLATION

This chandelier is designed for hardwired ceiling installation. It features an adjustable height stem and can be mounted on vaulted or sloped ceilings.

- 1. Prepare for Installation:** Turn off power at the circuit breaker. Ensure you have all necessary tools (screwdriver, wire strippers,

electrical tape, etc.) and the package contents listed above.

2. **Assemble the Fixture Body:** Carefully connect the arms to the central hub. Ensure all connections are tight.
3. **Adjust Hanging Height:** The fixture includes four 10-inch hard stems. Select the appropriate number of stems to achieve your desired hanging height. Thread the wiring through the chosen stems and connect them securely.
4. **Mount the Canopy:** Attach the mounting bracket to the junction box in your ceiling. Connect the fixture's wires to your household wiring (black to black, white to white, ground to ground) using wire nuts. Secure the canopy to the mounting bracket.
5. **Install Glass Shades:** Carefully place each clear glass shade over the bulb sockets.
6. **Insert Bulbs:** Screw in E26 base bulbs (not included), ensuring they do not exceed 60W. For dimming functionality, use dimmable E26 bulbs and a compatible dimmer switch (sold separately).
7. **Restore Power:** Once installation is complete, turn the power back on at the circuit breaker.

OPERATING INSTRUCTIONS

- **Power On/Off:** Operate the chandelier using your standard wall switch.
- **Dimmable Feature:** If you have installed dimmable E26 bulbs and a compatible dimmer switch, you can adjust the light intensity to create your desired ambiance.
- **Bulb Compatibility:** This fixture is compatible with various E26 base bulbs, including incandescent, LED, CFL, and halogen, up to 60 watts per bulb.



Image: Close-up view of the E26 bulb base, indicating maximum wattage and voltage requirements.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure power is off. Wipe the metal parts with a soft, dry cloth. The glass shades can be removed and washed with mild soap and water, then dried thoroughly before reinstallation. Avoid using abrasive cleaners or solvents.
- **Bulb Replacement:** Always turn off power before replacing bulbs. Allow bulbs to cool completely. Unscrew old bulbs and replace with new E26 base bulbs, adhering to the 60W maximum.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Power is off at the circuit breaker. Loose wire connections. Faulty bulb.	Check and reset the circuit breaker. Verify all wire connections are secure (ensure power is off first). Replace the bulb with a new one.

Light flickers.	Loose bulb. Incompatible dimmer switch or bulb.	Tighten the bulb. Ensure dimmable bulbs are used with a compatible dimmer switch.
Glass shade is broken.	Accidental damage.	Contact LightingPlus for free glass shade replacement.

WARRANTY & SUPPORT

This product comes with a manufacturer's warranty. For any quality or skill-related issues, or for replacement parts such as a broken glass shade, please contact the original manufacturer, LightingPlus. You can typically find their contact information by searching for "LightingPlus" and then clicking on "Ask a question" on the product page where you purchased the item.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07F695NC5>

More documents and user manuals: <https://manuals.plus/>