

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ingenuity](#) /

› [Ingenuity Compact Lightweight Portable Baby Swing User Manual](#)

Ingenuity 11440

Ingenuity Compact Lightweight Portable Baby Swing

Model: 11440 - Abernathy

WELCOME TO YOUR INGENUITY PORTABLE SWING USER MANUAL

Thank you for choosing the Ingenuity Compact Lightweight Portable Baby Swing. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your swing. Designed for portability and comfort, this swing offers a soothing environment for your baby with its automatic swinging motions, melodies, nature sounds, and gentle vibration.

Key Features:

- Compact and lightweight design for easy transport and storage.
- 5 swing speeds to suit your baby's preference, adapting with weight-sensing technology.
- 8 soothing melodies and 3 nature sounds with volume control.
- Timer settings for 30, 45, or 60 minutes, with auto-shutoff after 90 minutes.
- Gentle vibration feature for added comfort.
- 5-point safety harness with shoulder pads for secure and comfortable restraint.
- Removable headrest to grow with your baby.
- Includes 2 plush hanging toys (owl and hedgehog) for entertainment.
- Hybriddrive technology extends battery life.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in serious injury or death.

- Always use the restraint system.
- Never leave child unattended.
- Do not use this product once your child can sit up unaided or attempts to climb out.
- This product is not intended for prolonged periods of sleep.
- Maximum weight recommendation: 20 lbs (9 kg).
- Minimum weight recommendation: 6 lbs (2.7 kg).
- Recommended age: 0-9 months.
- Ensure all parts are securely assembled before each use.
- Place the swing on a flat, level surface.

SETUP AND ASSEMBLY

The Ingenuity Portable Swing is designed for straightforward assembly. Please follow these steps carefully.

Unpacking and Component Check:

Before assembly, ensure all components are present and undamaged. Refer to the included parts list in your physical manual for a complete overview.

Frame Assembly:

Assemble the main frame components according to the diagrams in your physical manual. Ensure all locking mechanisms click into place securely.

Seat Pad and Headrest Installation:

Attach the ultra-soft seat pad to the frame. The removable headrest can be installed for newborns and removed as your baby grows.



Figure 1: Overview of the Ingenuity Portable Baby Swing, highlighting key features such as the shoulder strap cushions on the 5-point harness, removable headrest, quiet motor with timer, and the use of 4 D batteries.

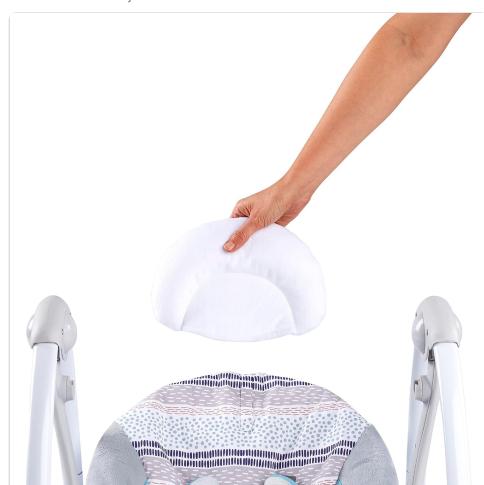


Figure 2: A hand demonstrating the removal of the headrest, which can be adjusted or removed as your baby grows.

Battery Installation:

The swing requires 4 D batteries (not included). Locate the battery compartment, typically on the underside of the control unit. Insert batteries, ensuring correct polarity. Hybriddrive technology helps extend battery life.



Figure 3: Detailed view of the control panel and the battery compartment, showing where to insert the 4 D batteries.

Toy Bar Attachment:

Attach the toy bar with the plush owl and hedgehog toys to the designated slots on the swing frame.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel to utilize all features of your Ingenuity Portable Swing.

Powering On/Off:

Press the power button on the control panel to turn the swing on or off.

Swing Functions:

- **Swing Speeds:** Use the speed adjustment buttons to select from 5 different swing speeds. The swing features weight-sensing technology to maintain consistent speed as your baby grows.
- **Timer Settings:** Select a timer setting for 30, 45, or 60 minutes. The swing will automatically shut off after 90 minutes if no timer is set.
- **Music & Sounds:** Choose from 8 melodies or 3 nature sounds. Adjust the volume using the dedicated volume control buttons.
- **Vibration:** Activate the gentle vibration feature for an additional soothing effect.



Figure 4: Close-up of the swing's control panel, showing buttons for power, swing speed, timer, music/sounds, and vibration.



Figure 5: Visual representation of the swing's motion, illustrating the gentle and consistent swinging action.

Portability and Storage:

The swing is designed to fold compactly for easy storage and transport. Simply follow the folding instructions in your physical manual to collapse the frame.



Folds for storage & transport

Figure 6: A person easily carrying the Ingenuity swing in its folded, compact state, demonstrating its portability.



Figure 7: A person demonstrating the folding mechanism of the swing, making it convenient for storage or travel.

MAINTENANCE AND CARE

Proper care ensures the longevity and hygiene of your Ingenuity Portable Swing.

Cleaning Instructions:

- **Seat pad and headrest:** Machine wash with cold water on a gentle cycle. Do not bleach. Tumble dry low.
- **Frame, toy bar, and toys:** Wipe clean with a damp cloth and mild soap. Do not immerse in water.



Figure 8: The seat pad and headrest are machine washable for easy cleaning, as indicated by the laundry basket.

Storage:

When not in use, store the swing in a clean, dry place, away from direct sunlight and extreme temperatures. Its foldable design allows for compact storage.

TROUBLESHOOTING

If you encounter any issues with your Ingenuity Portable Swing, refer to the following common problems and solutions:

- **Swing not operating or inconsistent swinging:**

- Check that the 4 D batteries are correctly installed and not depleted. Replace if necessary.
- Ensure the swing is on a flat, level surface and not obstructed.
- Verify that the swing mechanism is free from debris or foreign objects.
- Confirm that the timer setting has not expired.

- **No sound or low volume:**

- Adjust the volume using the control panel buttons.
- Check battery levels and replace if low.

- **Vibration not working:**

- Ensure the vibration button is activated.
- Check battery levels and replace if low.

- **Swing not folding correctly:**

- Ensure all locking mechanisms are disengaged as per the folding instructions in your physical manual.
- Check for any obstructions preventing the frame from collapsing fully.

If problems persist after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	22"D x 23.5"W x 23"H (55.88 cm D x 59.69 cm W x 58.42 cm H)
Item Model Number	11440
Batteries Required	4 D batteries (not included)
Target Gender	Unisex
Minimum Weight Recommendation	6 Pounds (2.7 kg)
Maximum Weight Recommendation	20 Pounds (9 kg)
Material Type	Polyester
Item Weight	7.09 Pounds (3.22 kg)
Is Portable	Yes



Figure 9: Visual representation of the swing's dimensions and recommended maximum weight and age.

WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official Ingenuity website. If you require assistance, have questions, or need to report an issue, please contact Ingenuity customer support.

You can also find a downloadable PDF version of the user manual for this product at [Ingenuity Portable Swing User Manual \(PDF\)](#)

Related Documents - 11440

 <p>1304021272100500VA</p> <p>InLighten™ Soothing Swing - Van™ Swing - Model# 1304021272100500VA</p> <p>ingenuitybaby.com</p>	<p>Ingenuity InLighten Soothing Swing - Van Elephant User Manual</p> <p>User manual for the Ingenuity InLighten Soothing Swing in the Van Elephant design. Provides instructions on assembly, use, safety warnings, and care.</p>
 <p>1304021272100500VA</p> <p>InLighten™ Soothing Swing - Kitt™ Swing - Model# 1304021272100500VA</p> <p>ingenuitybaby.com</p>	<p>Ingenuity InLighten Soothing Swing - Kitt™ User Manual and Safety Guide</p> <p>This comprehensive user manual provides detailed instructions for assembling, using, and caring for the Ingenuity InLighten Soothing Swing - Kitt™. It includes essential safety warnings, operational guidance for the control module, and maintenance tips, presented in English, Spanish, and French.</p>
 <p>1302201272100500VA</p> <p>PowerAdapt ConvertMe Swing-2-Seat™ - Wimberly™ Portable Swing - Calming Portable Bassinet Portable Highchair - Portable Highchair - Portable Bassinet</p> <p>ingenuitybaby.com</p>	<p>Ingenuity PowerAdapt ConvertMe Swing-2-Seat™ - Wimberly™ User Manual</p> <p>Comprehensive user manual for the Ingenuity PowerAdapt ConvertMe Swing-2-Seat™ in the Wimberly™ fashion. Includes safety warnings, assembly instructions, battery information, care and cleaning guidelines, parts list, and operation details for the swing and vibration unit.</p>

