

Eureka Zenith 65 HS Doser

Eureka Zenith 65 HS Doser Espresso Grinder Instruction Manual

Model: Zenith 65 HS Doser

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Eureka Zenith 65 HS Doser Espresso Grinder. Please read this manual thoroughly before using the appliance and retain it for future reference.

SAFETY INFORMATION

- Ensure the grinder is placed on a stable, level surface.
- Do not immerse the grinder in water or other liquids.
- Unplug the grinder from the power outlet before cleaning or performing any maintenance.
- Keep hands and foreign objects away from the grinding burrs and bean hopper opening during operation.
- This appliance is designed for grinding roasted coffee beans only. Do not grind other substances.
- Do not operate the grinder with a damaged power cord or plug.
- Supervise children to ensure they do not play with the appliance.

PRODUCT OVERVIEW

The Eureka Zenith 65 HS Doser Espresso Grinder is engineered for consistent and precise coffee grinding. Key features include:

- **65mm Flat Burrs:** Hardened steel burrs provide excellent consistency and speed for espresso grinding.
- **Bottom Burr Adjust:** Grind adjustment is located under the motor, allowing for easy cleaning without losing your grind setting.
- **Stepless Grinder:** Offers infinite grind settings for precise dialing in of espresso.
- **Doser Version:** Designed for bulk grinding and dispensing.



Figure 1: Eureka Zenith 65 HS Doser Espresso Grinder. This image displays the grinder in black, featuring a clear bean hopper at the top, a chrome-finished doser mechanism in the front, and a red power switch at the base.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.

- 2. Placement:** Position the grinder on a stable, dry, and level surface, away from heat sources and moisture. Ensure adequate ventilation around the unit.
- 3. Hopper Assembly:** Place the bean hopper onto the grinder body, ensuring it is securely seated. The hopper typically has a locking mechanism or a tight fit.
- 4. Power Connection:** Plug the grinder into a grounded 120 Volt AC power outlet.

OPERATING INSTRUCTIONS

- 1. Fill Hopper:** Pour roasted coffee beans into the bean hopper. Do not overfill.
- 2. Adjust Grind Size:** The Zenith 65 HS features stepless grind adjustment. Locate the grind adjustment knob (often a silver dial near the hopper base). Turn the knob clockwise for a finer grind and counter-clockwise for a coarser grind. Make small adjustments and test the grind output.
- 3. Power On:** Turn on the grinder using the power switch, usually located at the base of the unit.
- 4. Dispense Coffee:** The doser mechanism allows for dispensing ground coffee. Pull the doser lever to release a measured dose of ground coffee into your portafilter or container. Repeat as needed for the desired quantity.
- 5. Power Off:** When finished grinding, turn off the grinder using the power switch.

MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your grinder.

- **Daily Cleaning:**
 - Empty any remaining beans from the hopper.
 - Wipe down the exterior of the grinder with a damp cloth. Do not use abrasive cleaners.
 - Clean the doser chamber and chute with a brush to remove residual coffee grounds.
- **Burr Cleaning (Weekly/Bi-weekly):**
 - **Unplug the grinder.**
 - Remove the bean hopper.
 - Access the grinding chamber. The bottom burr adjustment design allows for easier access to the burrs for cleaning without losing your grind setting. Consult the specific instructions for disassembling the top burr carrier if necessary.
 - Use a stiff brush or vacuum cleaner to remove all coffee grounds from the burrs and grinding chamber.
 - Reassemble the components securely.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not turn on.	Not plugged in; power switch off; circuit breaker tripped.	Check power cord connection; ensure power switch is on; reset circuit breaker.
Inconsistent grind.	Burrs are dirty or worn; grind setting too coarse/fine.	Clean burrs thoroughly; adjust grind setting incrementally. Consider burr replacement if worn.

Problem	Possible Cause	Solution
Grinder motor runs but no coffee dispenses.	Hopper empty; coffee chute clogged; burrs jammed.	Fill hopper with beans; clean coffee chute; clean burrs and grinding chamber.
Grinder is unusually loud.	Foreign object in burrs; loose components.	Unplug the grinder. Inspect burrs for foreign objects. Check for loose parts. If problem persists, contact support.

SPECIFICATIONS

- **Brand:** Eureka
- **Model:** Zenith 65 HS Doser
- **Color:** Black
- **Burr Type:** 65mm Flat Burrs (Hardened Steel)
- **Grind Adjustment:** Stepless, Bottom Burr Adjust
- **Product Dimensions:** 10"L x 9"W x 23.5"H
- **Item Weight:** 5 pounds
- **Voltage:** 120 Volts
- **Recommended Use:** Commercial Coffee Grind

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Eureka website. Keep your purchase receipt as proof of purchase.

Manufacturer: Eureka