

[Manuals.plus](#) /

› [UBay](#) /

› UBay Replacement Remote Control Instruction Manual for Bose Wave Music System AWRCC1/AWRCC2

UBay Music System

UBay Replacement Remote Control Instruction Manual

For Bose Wave Music System AWRCC1 / AWRCC2

1. INTRODUCTION

This manual provides instructions for the UBay replacement remote control, designed for use with Bose Wave Music System models AWRCC1 and AWRCC2. This remote offers the same functionality as the original remote control without requiring any programming.

Important Compatibility Note: This remote is **not compatible** with the following Bose models: AWRC-1G, AWRC-1P, CD-3000, AWR1-1W, AWR113, Bose Acoustic Wave Music System II, Bose Acoustic Wave Music System I, or Bose Wave Systems with Multi-CD changers. Bose remote controls may appear similar but are not always interchangeable. Please verify your original system's model number for compatibility.

2. SETUP

2.1 Battery Installation

The remote control requires batteries (not included) for operation. To install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert the required batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for use without any additional programming.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your UBay replacement remote control.



Figure 1: Layout of the UBay Replacement Remote Control. The remote is white with gray circular buttons. Key buttons include On/Off, Mute, FM/AM, CD, Sleep, Volume up/down, numbered presets, Seek/Track, Play/Pause, Stop/Eject, Tune/MP3, Time adjustment, Play Mode, and Alarm controls.

On/Off: Powers the Bose Wave Music System on or off.

Stop Alarm: Stops any active alarm.

Mute: Mutes or unmutes the audio output.

FM/AM: Switches between FM and AM radio bands.

CD: Selects the CD player as the audio source.

Sleep: Activates or adjusts the sleep timer function.

Volume (Up/Down Arrows): Adjusts the audio volume level.

Presets (1-6): Selects stored radio station presets or CD tracks directly.

Seek / Track (Left/Right Arrows):

- In radio mode: Seeks to the next available station.
- In CD mode: Skips to the previous or next track.

Play/Pause (▶ ||): Starts or pauses playback for CD or other media.

Stop/Eject (■ ▲): Stops playback and ejects the CD.

Tune / MP3 (Left/Right Arrows):

- In radio mode: Manually tunes the radio frequency.
- In MP3 mode: Navigates through MP3 files.

Time (+/-): Adjusts the system time or sets alarm times.

Play Mode: Cycles through different playback modes (e.g., repeat, shuffle).

Alarm On/Off: Activates or deactivates the alarm function.

Alarm Wake To: Sets the alarm to wake to a specific source (e.g., radio, CD).

Alarm Time: Enters the alarm time setting mode.

Menu: Accesses the system's menu options.

4. TROUBLESHOOTING

4.1 Remote Control Not Responding

If the remote control is not functioning as expected, try the following steps:

1. **Check Batteries:** Ensure that new batteries are correctly installed in the remote control with the proper polarity.
2. **Reset Bose System:**
 - Unplug the Bose Wave Music System from its AC power outlet.
 - Press and hold the power button on the Bose system for five seconds.
 - Plug the Bose system back into the AC power outlet and turn it on.
3. **Reset Remote Control:**
 - Remove the batteries from the remote control.
 - Press every button on the remote at least once to drain any residual power. This also helps to identify if any buttons are stuck.
 - Re-insert the batteries into the remote control.
4. **Line of Sight:** Ensure there is a clear line of sight between the remote control and the Bose Wave Music System's infrared receiver. Obstructions can block the signal.

4.2 Compatibility Issues

If the remote control still does not work after performing the troubleshooting steps, re-verify that your Bose Wave Music System model is AWRCC1 or AWRCC2. As noted in the Introduction, this remote is not compatible with other Bose models, even if they appear similar.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always use fresh batteries of the specified type. Dispose of old batteries responsibly according to local regulations.

6. SPECIFICATIONS

Brand	UBay
Model Number	Music System (Compatible with AWRCC1, AWRCC2)
Compatible Devices	Bose Wave Music System (AWRCC1, AWRCC2)
Color	White
Product Dimensions	4 x 2.2 x 0.5 inches
Item Weight	0.317 ounces
Special Feature	Ergonomic, No Programming Required
Manufacturer	UBay Factory

7. SUPPORT

For further assistance or inquiries regarding your UBay replacement remote control, please contact the manufacturer or your point of purchase. Please have your product model information ready when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07F6XG7C6>

More documents and user manuals: <https://manuals.plus/>