

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Universal Remote Control Easytry1126 Instruction Manual

Easytry123 Easytry1126

Easytry123 Universal Remote Control Instruction Manual

MODEL: EASYTRY1126

Introduction

This document provides essential instructions for the Easytry123 Universal Remote Control, model Easytry1126. This remote is designed as a replacement for various television brands, including TCL, Nobel, Samsung, SANYO, LG, PANASONIC, Philips, Sony, Toshiba, Sharp, HITACHI, ERISSON, and FUNAI LCD/LED HDTVs. Please note that this is a replacement unit and may not offer all functions present on your original remote control.

This package does not include batteries or a separate instruction manual. Please refer to this guide for operational details.

Setup

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.



This image shows the back of the Easytry123 Universal Remote Control. The battery compartment cover is removed, revealing two empty slots for AAA batteries. The remote's sleek black design is visible.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note:

- Always use new batteries of the same type.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

2. Initial Use

This Easytry123 Universal Remote Control is designed to be compatible with the listed TV brands without complex programming. After installing batteries, point the remote control towards your television and attempt to use basic functions such as Power, Volume, and Channel. If the remote does not respond, ensure there is a clear line of sight between the remote and your TV's infrared receiver.

Important:

As a replacement remote, specific advanced functions or programming steps are not provided with this unit. If certain functions do not work, it may be due to compatibility limitations with your specific TV model or the nature of a universal replacement remote. Refer to your television's original manual for details on its remote control functions and infrared receiver location.

Operating the Remote Control

The Easytry123 Universal Remote Control features a standard layout for common television functions. Below is a general guide to its buttons and their typical uses:



This image displays the front of the Easytry123 Universal Remote Control. It features a black body with various control buttons, including power, volume, channel, input, and number keys. Specific brand buttons for Samsung, LG, Sanyo, Panasonic, Philips, Sony, Toshiba, Sharp, Hitachi, Erisson, and Funai are visible.

- **Power Button (RED):** Turns the television ON or OFF.
- **Input/Source Button:** Cycles through available video input sources (e.g., HDMI 1, HDMI 2, AV).
- **Number Buttons (0-9):** Used to directly select channels.
- **Channel Up/Down (CH+/-):** Changes the television channel sequentially.
- **Volume Up/Down (VOL+/-):** Adjusts the television's audio volume.
- **Mute Button:** Toggles the television's sound ON or OFF.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used to navigate menus and confirm selections on your television.
- **Menu/Settings Button:** Accesses the television's main menu or settings.
- **Exit Button:** Exits current menus or on-screen displays.
- **Brand-Specific Buttons:** Some buttons may be labeled with specific TV brands (e.g., Samsung, LG). These are generally for direct compatibility or specific functions for those brands.

For detailed information on specific functions of your television, please consult your television's original user manual.

Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding to TV.	• Dead or incorrectly inserted batteries. • Obstruction between remote and TV. • Remote is out of range.	• Replace batteries, ensuring correct polarity. • Remove any objects blocking the remote's signal path to the TV. • Move closer to the television.
Some functions do not work.	• Compatibility limitations of a universal replacement remote. • Specific TV model requires unique codes not supported.	• This is a replacement remote; not all original functions may be supported. • Consult your TV's original manual for specific functions.
Remote works intermittently.	• Low battery power. • Infrared sensor on TV is obstructed or dirty.	• Replace batteries. • Clean the TV's infrared sensor area.

Specifications

Brand:	Easytry123
Model Number:	Easytry1126
ASIN:	B07F7165WP
Batteries Required:	2 x AAA (not included)
Connectivity	
Technology:	Infrared
Special Feature:	Universal
Compatible	
Devices:	Television (TCL, Nobel, Samsung, SANYO, LG, PANASONIC, Philips, Sony, Toshiba, Sharp, HITACHI, ERISSON, FUNAI LCD LED HDTV)
Controller Type:	Button Control
Manufacturer:	Easytry123

Warranty and Support

Information regarding product warranty is not provided with this remote control. For any support inquiries, warranty claims, or further assistance, please contact the seller directly through your purchase platform.