

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› **Easytry123 Remote Control User Manual for AOC LED HDTV TV Models LE50D7840, LE42H234D, LE42H164, LE17W034, LE22A1321, LE22H138, LE22H168, LE32A0321**

Easytry123 Easytry1152

Easytry123 Remote Control User Manual

For AOC LED HDTV TV Models: LE50D7840, LE42H234D, LE42H164, LE17W034, LE22A1321, LE22H138, LE22H168, LE32A0321

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with various AOC LED HDTV television models, including LE50D7840, LE42H234D, LE42H164, LE17W034, LE22A1321, LE22H138, LE22H168, and LE32A0321. Please note that while this remote offers primary functions, some advanced or specific features of your original TV remote may not be supported.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, revealing the two AAA battery slots. This illustrates the correct orientation for battery insertion.

2. Initial Use

This replacement remote control is designed for immediate use with compatible AOC LED HDTV models. No programming or pairing is typically required. Simply point the remote at your television and press the desired function button.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. The layout is designed for intuitive operation of your AOC television.



Image: Front view of the Easytry123 remote control, displaying its full button layout. Key buttons include Power, Input, Number Pad, Volume, Channel, Menu, and Navigation controls.

Key Functions:

- **Power (●):** Turns the television on or off.
- **Input:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Pad (0-9):** Directly selects channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes the television channel.
- **Mute:** Silences or restores the television audio.
- **Menu:** Accesses the television's main menu for settings and options.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.
- **Exit/Return:** Exits menus or returns to the previous screen.
- **Info:** Displays information about the current program or input.
- **Color Buttons (Red, Green, Yellow, Blue):** These buttons may have specific functions depending on the TV model or current menu/application. Refer to your TV's manual for details.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using harsh chemicals or abrasive cleaners.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can damage the remote control.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------|---|---|
| Remote not responding. | Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range. | Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure you are within a reasonable distance and pointing directly at the TV's IR receiver. |

| Problem | Possible Cause | Solution |
|-------------------------------------|--|---|
| Some functions do not work. | The replacement remote may not support all advanced functions of the original TV remote. | This is expected for some replacement remotes. Verify if the function is a basic TV control. If it's a specific smart TV or advanced feature, it might not be compatible. |
| Buttons are sticky or unresponsive. | Dirt or debris under the buttons. | Clean the remote control as described in the Maintenance section. |

SPECIFICATIONS

Brand: Easytry123

Model Number: Easytry1152

Compatible Devices: AOC LED HDTV Televisions

Connectivity Technology: Infrared (IR)

Controller Type: Button Control

Power Source: 2 x AAA Batteries (not included)

Special Feature: Ergonomic design

WARRANTY AND SUPPORT

For any issues or questions regarding your Easytry123 remote control, please refer to the retailer or manufacturer's support channels. Specific warranty information may vary by purchase location.