

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY EN-83801 Replacement Remote Control User Manual

ECONTROLLY RCEC-EN-83801

ECONTROLLY EN-83801 Replacement Remote Control User Manual

For Hisense LCD LED TV HDTV

1. INTRODUCTION

Thank you for choosing the ECONTROLLY EN-83801 Replacement Remote Control. This remote is designed to be a direct replacement for your original Hisense LCD LED TV HDTV remote, providing seamless control without the need for complex programming. Simply install the batteries, and it's ready to use.





Figure 1: Front view of the ECONTROLLY EN-83801 Remote Control.

2. SETUP: BATTERY INSTALLATION

The ECONTROLLY EN-83801 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries correctly:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery cover back into place until it clicks securely.

Note: For optimal performance and to prevent battery leakage, use new alkaline batteries. Remove batteries if the remote will not be used for an extended period.





Figure 2: Rear view showing the battery compartment of the remote control.

3. OPERATING INSTRUCTIONS

This remote control is designed to function immediately with compatible Hisense LCD LED TV HDTV models without any programming. Point the remote directly at your television's infrared receiver.

Key Functions:

- **POWER ()**: Turns the TV on or off.
- **MUTE**: Mutes or unmutes the TV sound.
- **0-9 (Number Buttons)**: Directly select channels.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes channels up or down.
- **MENU**: Accesses the TV's main menu.
- **Navigation Arrows (▲ ▼ ◀ ▶)**: Navigate through menus and options.
- **OK**: Confirms selections in menus.
- **EXIT**: Exits the current menu or screen.
- **SOURCE**: Selects input sources (HDMI, AV, etc.).
- **SLEEP**: Sets a sleep timer for the TV.
- **DISPLAY**: Shows current channel information.
- **RECALL**: Switches between the current and previously viewed channel.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functionality varies by TV model and content; often used for interactive features or specific menu options.

For specific advanced functions, refer to your Hisense TV's original user manual.

4. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal circuitry.

5. TROUBLESHOOTING

If you experience issues with your ECONTROLLY EN-83801 remote control, try the following troubleshooting steps:

- **Remote Not Responding**:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace the batteries with fresh, new AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Confirm you are pointing the remote directly at the TV's sensor.

- **Some Buttons Not Working:**

- This may indicate low battery power. Replace the batteries.
- Ensure the remote is compatible with your specific Hisense TV model. While designed for many, some older or newer models might have slight variations.

- **TV Not Responding to Remote:**

- Try restarting your TV by unplugging it from the power outlet for a few minutes, then plugging it back in.
- Verify that the TV's remote control sensor is not blocked or dirty.

If the issue persists after trying these steps, please contact the manufacturer for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	RCEC-EN-83801
Compatible Brand	Hisense
Compatible Devices	LCD LED TV HDTV
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approx.)
Item Weight	1 ounce (approx.)

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your ECONTROLLY EN-83801 Replacement Remote Control, please refer to the product packaging or contact the seller/manufacturer directly. Keep your purchase receipt as proof of purchase.

