

Easytry123 Easytry1214

Easytry123 Replacement Remote Control User Manual

For Samsung LED Smart 3D TV Models: UE40ES6140W, UE40ES6200S, UE40ES6300S, UE40ES6300U, UE40ES6305U, UE40ES6307U, UE40ES6340S, UE40ES6530S, UE40ES6535U

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Easytry123 Replacement Remote Control. This remote is designed to function as a direct replacement for specific Samsung LED Smart 3D TV models. Please read this manual carefully before use to ensure proper functionality and to maximize your viewing experience.

PRODUCT OVERVIEW

The Easytry123 Replacement Remote Control is a dedicated remote for compatible Samsung LED Smart 3D TVs. It offers standard television control functions. Please note that while it replaces the original remote, some advanced or specific smart TV functions may not be fully supported.



Image: Front view of the Easytry123 Replacement Remote Control. This image displays the layout of the buttons on the remote, including power, channel, volume, and navigation controls.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image: Back view of the remote control with the battery compartment open, showing where to insert two AAA batteries.

2. Compatibility Check

This remote control is compatible with the following Samsung LED Smart 3D TV models:

- UE40ES6140W
- UE40ES6200S
- UE40ES6300S
- UE40ES6300U
- UE40ES6305U
- UE40ES6307U
- UE40ES6340S
- UE40ES6530S
- UE40ES6535U

No programming is typically required for these models; the remote should function immediately after battery installation.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Samsung TV. Ensure there are no obstructions between the remote and the TV.

- **Power Button:** Press to turn the TV on or off.
- **Channel Buttons (CH +/-):** Press to change channels up or down.
- **Volume Buttons (VOL +/-):** Press to increase or decrease the volume.
- **Mute Button:** Press to mute or unmute the TV sound.
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Input/Source Button:** Press to cycle through available input sources (HDMI, AV, etc.).
- **Navigation Buttons (Arrows, Enter):** Use to navigate menus and confirm selections.

Note: As a replacement remote, certain advanced features or smart TV functions specific to the original Samsung remote may not be available or may operate differently. Refer to your TV's original manual for specific advanced functions.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Verify that your TV model is listed in the "Compatibility Check" section.
- **Some functions do not work:**
 - This replacement remote is designed for basic TV control. Certain advanced smart TV features or specific buttons from the original remote may not be supported.
 - Ensure the TV is not in a specific mode (e.g., a connected device's menu) that might override remote commands.

SPECIFICATIONS

Brand	Easytry123
Model Number	Easytry1214
Compatible Devices	Samsung LED Smart 3D Televisions (specific models listed)
Controller Type	Button Control

Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

For any issues or questions regarding your Easytry123 Replacement Remote Control, please refer to the retailer's return policy or contact the seller directly for support. Specific warranty details may vary by purchase location and seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question