

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY EN-31201A Replacement Remote Control User Manual

ECONTROLLY EN-31201A

ECONTROLLY EN-31201A Replacement Remote Control User Manual

Model: EN-31201A

INTRODUCTION

This manual provides instructions for the ECONTROLLY EN-31201A replacement remote control. This remote is designed to be compatible with various Hisense TV models, offering a direct replacement for your original remote without requiring complex programming.

COMPATIBILITY

The EN-31201A remote control is compatible with a wide range of Hisense TV models. Please verify your TV model against the list below:

- LTDN46K20US, LTD24V86US, LTDN42K20US, LTDN42V77US
- LTDN39V77US, LEDN32K15US, LHD32K20AUS, LHD32K26US, LHD37V87US, LHDN32V66AUS, LTDN23K15US, LTDN24K16US, LTDN24K20US, LTDN24V87US
- LTDN39V78US, LTDN40K26US, LTDN40V87US, LTDN42K26US, LTDN55V89GUS, LTDN24V86US
- LTDN46V86US, F24V77C, F24V86C, F46V89C, F55V89C, F39V77C, F40V87C, F42K26, F42V77C
- F46K20E, F46V86C, F46V89C, F55V89C, H32K26E, H32V77C

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are typically not included and must be purchased separately.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

The remote is ready for use immediately after battery installation; no programming is required.



Figure 1: Battery compartment with cover removed. Insert two AAA batteries as shown.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your ECONTROLLY EN-31201A remote control.



Figure 2: Front view of the EN-31201A remote control.

Button Functions

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (e.g., HDMI, AV, Component).

Button	Function
TV	Switches to TV mode.
AV / COMP / HDMI / VGA	Direct selection of specific input sources.
ASPECT	Adjusts the screen aspect ratio.
GUIDE	Displays the electronic program guide.
PICTURE	Accesses picture settings.
SOUND	Accesses sound settings.
DISPLAY	Shows on-screen display information.
MUTE	Mutes or unmutes the TV sound.
Volume Up/Down	Adjusts the volume level.
Channel Up/Down	Changes TV channels.
MENU	Opens the TV's main menu.
EXIT	Exits the current menu or function.
Navigation Arrows (Up/Down/Left/Right)	Navigates through menus and options.
ENTER	Confirms selections in menus.
Number Buttons (0-9)	Direct channel selection.
LAST	Returns to the previously viewed channel.
CCD	Activates Closed Captioning.
MTS/SAP	Selects Multi-channel Television Sound/Secondary Audio Program.
TIME	Accesses time-related functions or display.
SLEEP	Sets the sleep timer.

MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote control or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range (approximately 10 meters or 33 feet).
- **TV Sensor:** Verify that the TV's remote sensor is not blocked or dirty.

Intermittent Operation

- **Weak Batteries:** Replace batteries even if they seem to be partially working.
- **Interference:** Other electronic devices or strong light sources might interfere with the remote's signal. Try using the remote in a different environment.

SPECIFICATIONS

Feature	Detail
Model	EN-31201A
Brand	ECONTROLLY
Material	ABS Material
Power Source	2 x AAA Batteries (not included)
Transmitting Distance	Approximately 10 meters (33 feet)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2 ounces
Color	Black
Compatible Devices	Television

WARRANTY INFORMATION

This product is a replacement remote control. Please refer to the original product's documentation or the seller for specific warranty details, if any. General return policies may apply as per the point of purchase.

SUPPORT

For further assistance or inquiries regarding the ECONTROLLY EN-31201A remote control, please contact your retailer or the ECONTROLLY customer support channels available at the time of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07F82QRQW>

More documents and user manuals: **<https://manuals.plus/>**