

Easytry123 Easytry1232

Easytry123 Replacement Remote Control Easytry1232 User Manual

INTRODUCTION

This manual provides instructions for the Easytry123 Replacement Remote Control, model Easytry1232. This remote is designed as a replacement for various Samsung LED Smart 3D TV models, including AA59-00510A, AA59-00509A, UE32D5500RP, UE37D5500RP, UE55C6000RP, ME55A, UE55A, UE40D5500RP, and UE46D5500RP. Please read this manual carefully to ensure proper setup and operation of your new remote control.

Important Note: As a replacement item, this remote may not support all advanced functions of your original TV remote. Its primary purpose is to provide essential control over your television.

SETUP

Battery Installation

The Easytry123 Replacement Remote Control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Back of the remote control with the battery cover.



Figure 2: Battery compartment with cover removed, showing battery placement.

Compatibility

This remote control is compatible with the following Samsung TV models:

- AA59-00510A
- AA59-00509A
- UE32D5500RP
- UE37D5500RP
- UE55C6000RP
- ME55A
- UE55A

- UE40D5500RP
- UE46D5500RP

Ensure your TV model is listed above for optimal functionality. No programming is typically required; the remote should work directly with compatible models after battery installation.

OPERATING INSTRUCTIONS

The Easytry123 Replacement Remote Control provides standard functions for your compatible Samsung TV. Point the remote directly at your television's infrared receiver for best performance.

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes the channel sequentially.
- **Mute Button:** Silences the TV audio.
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Move through menu options.
- **Enter/OK Button:** Confirms selections in menus.
- **Return/Exit Button:** Goes back to the previous screen or exits a menu.
- **Source/Input Button:** Changes the input source (e.g., HDMI, AV).

Refer to your television's original user manual for specific functions and menu navigation details.

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the remote.

TROUBLESHOOTING

- **Remote is not working:**
 - Ensure batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some buttons are not responding:**
 - Verify that your TV model is listed in the compatibility section. Some advanced functions may not be supported by a replacement remote.

- Clean the remote's surface and buttons to ensure no debris is interfering with button presses.

SPECIFICATIONS

- **Brand:** Easytry123
- **Model Number:** Easytry1232
- **Compatible Devices:** Television (Specific Samsung models as listed)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Battery Type:** 2 x AAA batteries (not included)

WARRANTY AND SUPPORT

As a replacement product, specific warranty terms may vary. Please refer to the seller or retailer from whom you purchased this remote control for information regarding warranty coverage, returns, or technical support. Keep your purchase receipt as proof of purchase.