

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control User Manual for Samsung TVs

Easytry123 Easytry1264

Easytry123 Replacement Remote Control User Manual

Model: Easytry1264

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with various Samsung LED Smart TV models, offering essential functions for your television viewing experience. Please note that as a replacement unit, some advanced or specific functions of your original remote may not be supported.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Battery compartment with batteries installed.



Image: Battery compartment closed.

2. Initial Use

This remote control is designed as a direct replacement and typically requires no programming. Once batteries are installed, point the remote towards your Samsung TV and begin operation.

OPERATING INSTRUCTIONS

The remote control provides standard functions for your television. Familiarize yourself with the button layout:



Image: Front view of the remote control.

- **Power Button:** Turns the TV on or off.
- **Channel Up/Down:** Changes the TV channel.
- **Volume Up/Down:** Adjusts the TV volume.
- **Mute Button:** Silences the TV audio.
- **Number Buttons (0-9):** Direct channel selection.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **Menu/Settings Button:** Accesses the TV's main menu or settings.
- **Exit/Return Button:** Exits menus or returns to the previous screen.

Note: As a replacement remote, specific smart TV functions, voice control, or advanced features present on your original Samsung remote may not be available or fully functional. The primary purpose of this remote is to provide essential TV control.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote is not working.	Obstruction between remote and TV.	Ensure a clear line of sight between the remote's IR emitter and the TV's IR receiver.
Some functions do not work.	The remote is a replacement and may not support all original TV functions.	This is expected behavior for a universal or replacement remote. Focus on essential TV controls.
Remote works intermittently.	Low battery power.	Replace batteries.

SPECIFICATIONS

- Brand:** Easytry123
- Model Number:** Easytry1264
- Compatible Devices:** Television (Various Samsung LED Smart TV models)
- Connectivity Technology:** Infrared (IR)
- Controller Type:** Button Control
- Special Feature:** Ergonomic design
- Power Source:** 2 x AAA batteries (not included)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the specific terms provided by your retailer or the seller at the time of purchase. As this is a replacement product, warranty coverage may vary. Keep your purchase receipt for any warranty claims.

For further assistance, you may contact the seller directly through the platform where the purchase was made.

