

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Orren Ellis McClellan Arched Floor Lamp

## Orren Ellis McClellan Arched Floor Lamp User Manual

Model: McClellan Arched Floor Lamp

### IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply is disconnected before assembly, maintenance, or bulb replacement.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact qualified service personnel.
- This lamp is for indoor use only. Do not expose to water or high humidity.
- Keep the lamp away from flammable materials.
- Do not attempt to modify the lamp or its components.
- Use only the specified bulb type and wattage (27W).
- Always place the lamp on a stable, level surface to prevent tipping.
- Keep out of reach of children and pets.

### PRODUCT OVERVIEW

The Orren Ellis McClellan Arched Floor Lamp is designed to provide pure, bright, natural full-spectrum light, enhancing visibility and reducing eye strain. Its adjustable gooseneck allows for precise light direction, making it ideal for various tasks and reading.

### Key Features:

- **Full Spectrum Illumination:** Provides light that mimics natural daylight, making colors appear more vibrant.
- **Energy Efficient:** Uses a 27W bulb that provides illumination equivalent to a 150W incandescent bulb.
- **Adjustable Gooseneck:** Flexible design allows for easy positioning of the lamp head.
- **Durable Construction:** Made from high-quality metal for stability and longevity.
- **Simple Operation:** Features an easy-to-use on/off switch.

Image: The McClellan Arched Floor Lamp positioned in a modern living room, demonstrating its elegant design and functional reach over a chair.

### PACKAGE CONTENTS

Before assembly, please ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Lamp Base (A)
- Lower Pole (B)
- Upper Pole with Gooseneck and Lamp Head (C)
- 27W Full Spectrum Bulb (D)
- Power Cord (Pre-attached to Lamp Base)

## SETUP AND ASSEMBLY

Follow these steps to assemble your Orren Ellis McClellan Arched Floor Lamp:

1. **Step 1: Attach Lower Pole to Base.** Carefully screw the Lower Pole (B) into the Lamp Base (A) clockwise until securely tightened. Ensure the power cord passes freely through the pole.



Image: The lamp base with the lower pole attached, standing upright in an empty room, illustrating the initial assembly step.

2. **Step 2: Attach Upper Pole.** Screw the Upper Pole (C) (with the gooseneck and lamp head) onto the top of the Lower Pole (B) clockwise until firmly connected. Be careful not to twist the internal wiring.



Image: The fully assembled lamp body, showing the gooseneck and lamp head, ready for bulb installation.

3. **Step 3: Install the Bulb.** Carefully screw the 27W Full Spectrum Bulb (D) into the lamp socket located in the lamp head. Do not overtighten.



Image: A close-up view of the lamp head, showing the installed bulb, emphasizing the light source.

4. **Step 4: Position and Plug In.** Place the lamp on a stable, level surface. Plug the power cord into a standard electrical outlet.

## OPERATING INSTRUCTIONS

### Turning the Lamp On/Off:

Locate the on/off switch on the power cord or lamp pole. Press the switch to turn the lamp on or off.

### Adjusting the Lamp Head:

Gently bend the flexible gooseneck section of the upper pole to direct the light as desired. Avoid excessive force or bending the gooseneck beyond its natural range of motion.

## MAINTENANCE AND CARE

- **Cleaning:** Disconnect the lamp from the power outlet before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:**
  - a. Ensure the lamp is unplugged and the bulb has cooled completely.
  - b. Carefully unscrew the old bulb from the socket.
  - c. Screw in a new 27W full spectrum bulb. Ensure it is securely seated but do not overtighten.

d. Dispose of the old bulb according to local regulations.

- **Storage:** If storing the lamp, disassemble it in reverse order of assembly and store in its original packaging in a dry place.

## TROUBLESHOOTING

| Problem                | Possible Cause                                                        | Solution                                                                                                                                                                    |
|------------------------|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lamp does not turn on. | Not plugged in.<br>Loose bulb.<br>Faulty bulb.<br>Power outlet issue. | Ensure power cord is securely plugged into a working outlet.<br>Tighten the bulb in the socket.<br>Replace the bulb with a new one.<br>Test the outlet with another device. |
| Light flickers.        | Loose bulb.<br>Incorrect bulb type.<br>Bulb nearing end of life.      | Tighten the bulb.<br>Ensure you are using a 27W full spectrum bulb.<br>Replace the bulb.                                                                                    |
| Lamp is unstable.      | Not assembled correctly.<br>Placed on an uneven surface.              | Re-check assembly steps, ensuring all poles are tightly screwed.<br>Move the lamp to a flat, stable surface.                                                                |

## SPECIFICATIONS

|                            |                                           |
|----------------------------|-------------------------------------------|
| Product Type               | Task/Reading Floor Lamp                   |
| Model                      | McClellan Arched Floor Lamp               |
| Material                   | Metal                                     |
| Number of Lights           | 1                                         |
| Maximum Wattage (per Bulb) | 27 Watt (equivalent to 150W incandescent) |
| Switch Type                | On/Off (Rocker)                           |
| Power Source               | Corded Electric                           |
| Special Feature            | Full Spectrum Illumination                |
| ASIN                       | B07F87MW26                                |

## WARRANTY AND SUPPORT

This Orren Ellis product is covered by a limited manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or to order replacement parts, please contact Orren Ellis customer service. Refer to the product packaging or the retailer's website for the most current contact information.

When contacting support, please have your product model (McClellan Arched Floor Lamp) and ASIN (B07F87MW26) ready.

Copyright © 2024 Orren Ellis. All rights reserved.