

Intex 68309EP

Intex Excursion Pro K2 Inflatable Kayak Set

Model: 68309EP

Brand: Intex

1. INTRODUCTION

The Intex Excursion Pro K2 Inflatable Kayak is engineered for stability, maneuverability, and durability, making it ideal for recreational paddling and fishing. Its robust construction and thoughtful design ensure a reliable and enjoyable experience on the water. This manual provides essential information for the proper setup, operation, and maintenance of your kayak.

2. COMPONENTS AND WHAT'S INCLUDED

Your Intex Excursion Pro K2 Kayak set includes the following items:

- Intex Excursion Pro K2 Inflatable Kayak
- Two (2) Deluxe 86-inch Kayak Paddles
- High-Output Air Pump
- Two (2) Adjustable Inflatable Bucket Seats with Backrest and Booster Pads
- Two (2) Detachable Fishing Rod Holders
- One (1) Adjustable GoPro Camera and Mobile Phone Mount
- One (1) Repair Patch
- One (1) Carry Bag
- Two (2) Removable Skegs (one short for shallow water, one long for deep water)



3. SETUP

3.1. Inflation

The kayak features multiple air chambers for safety and rigidity. Use the included high-output air pump to inflate the kayak. Ensure all valves are securely closed after inflation. The kayak should be firm to the touch, but not over-inflated. Refer to the pressure gauge on the pump to ensure correct PSI levels as indicated on the kayak's surface.



Figure 2: Intex Excursion Pro K2 Kayak with included pump and paddles.

3.2. Attaching Seats

Inflate the two bucket seats. Position them inside the kayak using the Velcro strips on the bottom of the seats and the corresponding areas on the kayak floor. Secure the seats further using the adjustable straps that clip to the D-rings on the kayak's sides. The seats can be adjusted for optimal comfort and support.



Figure 3: Top-down view of the kayak showing seat placement and adjustable footrests.

3.3. Installing Skogs

Select the appropriate skog for your paddling conditions: the short skog for shallow water or the long skog for deep water. Slide the chosen skog into the mounting slot at the rear underside of the kayak until it clicks securely into place.

3.4. Assembling Paddles

Assemble the two 86-inch kayak paddles by connecting the sections. Ensure the paddle blades are aligned correctly for efficient paddling. The paddles can be disassembled for easy storage in the carry bag.

3.5. Mounting Accessories

Attach the detachable fishing rod holders and the adjustable GoPro/mobile phone mount to the designated mounting brackets on the kayak. These accessories provide convenience for fishing and capturing your adventures.

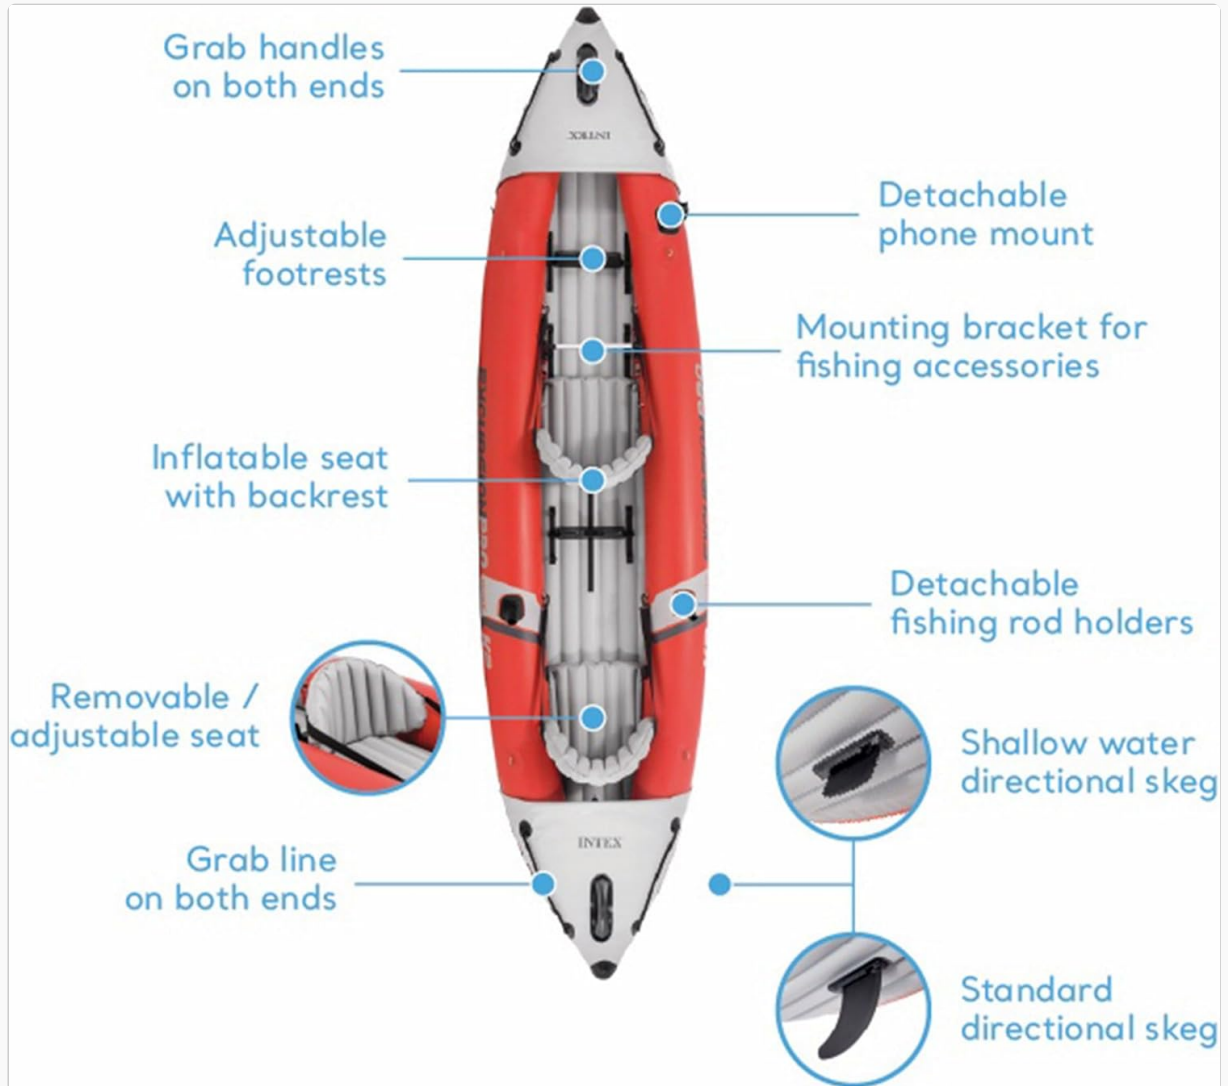


Figure 4: Detailed diagram highlighting key features and accessory mounting points.

4. OPERATION

4.1. Launching and Landing

Always launch and land the kayak in calm, shallow water. Ensure both occupants are seated and balanced before pushing off. When landing, approach the shore slowly and evenly to avoid damaging the kayak.

4.2. Paddling and Steering

Use the paddles in a coordinated manner for efficient propulsion. The removable skegs enhance directional stability. The longer skeg is recommended for deep water to improve tracking, while the shorter skeg is suitable for shallow water to prevent snagging.



Figure 5: Two individuals enjoying fishing from the Intex Excursion Pro K2 Kayak.

4.3. Using Storage and Accessories

Utilize the extra space in the bow and stern for storing gear. Stainless steel D-rings are provided for securing dry bags and other accessories. The fishing rod holders keep your rods secure while paddling or waiting for a bite. The adjustable mount allows for hands-free recording with a GoPro or phone.



Figure 6: A user demonstrating the use of the fishing rod holder on the kayak.



Figure 7: The bow storage area with D-rings for securing gear.

4.4. Official Product Video

5. MAINTENANCE

5.1. Cleaning

After each use, rinse the kayak thoroughly with fresh water to remove any dirt, sand, or saltwater residue. Use a mild soap solution if necessary. Ensure the kayak is completely dry before deflating and storing to prevent mold and mildew.

5.2. Deflation and Storage

To deflate, open all air valves. The spring-loaded valves allow for fast deflation. Once deflated, fold the kayak neatly and place it in the provided carry bag. Store the kayak in a cool, dry place away from direct sunlight and extreme temperatures.

5.3. Repair

In case of minor punctures, use the included repair patch. Clean the damaged area, apply the patch according to the instructions on the patch kit, and allow sufficient time for it to cure before re-inflating the kayak.

6. TROUBLESHOOTING

- **Kayak losing air:** Check all valves for secure closure. Inspect the kayak's surface for punctures or leaks. Use soapy water to identify small leaks by looking for bubbles.
- **Difficulty steering:** Ensure the correct skeg (long for deep water, short for shallow) is properly installed and locked into place.
- **Paddles feel inefficient:** Verify that the paddle sections are fully connected and the blades are oriented correctly.

7. SPECIFICATIONS

| Feature | Detail |
|--------------------|---------------------------------|
| Brand | Intex |
| Model Name | Excursion Pro K2 |
| Item Model Number | 68309EP |
| Product Dimensions | 151"L x 37"W x 18"H |
| Inflated Boat Size | 12.7 feet x 3.1 feet x 1.6 feet |
| Seating Capacity | 2 Persons |
| Weight Limit | 400 Pounds |
| Material | SuperTough 3-ply laminate PVC |
| Color | Red |
| Item Weight | 44.7 Pounds |

8. WARRANTY AND SUPPORT

For detailed warranty information, troubleshooting, and additional support, please refer to the official user manual. You can download the PDF version of the user manual [here](#).