

manuals.plus /

- › [EWA](#) /
- › [EWA A107 Mini Metal Bluetooth Speaker User Manual](#)

EWA EWA-A107

EWA A107 Mini Metal Bluetooth Speaker User Manual

Model: EWA-A107

1. INTRODUCTION

Thank you for purchasing the EWA A107 Mini Metal Bluetooth Speaker. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use.



Image: The EWA A107 Mini Metal Bluetooth Speaker, showcasing its compact, cylindrical design and metal grille.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- EWA A107 Metal Bluetooth Speaker x 1
- Micro USB Charging Cable x 1
- User Manual x 1

3. PRODUCT OVERVIEW

The EWA A107 is a compact, portable Bluetooth speaker designed for high-quality audio output. It features a metal body, a bass radiator for enhanced low frequencies, and a single control button for various functions.

Simple & Functional

One Button Features All Necessary Functions



Image: Diagram illustrating the dimensions (53mm diameter, 48mm height) and key components of the EWA A107 speaker, including the TF (Micro SD) Slot, USB Charge Port, and Control Button located on the bottom and side.

3.1 Key Features

- High-Quality Sound with Metal Body
- Rich Full Deep Bass via Bass Radiator
- Long Battery Life (800 mAh, up to 8 hours playtime)
- Micro SD Card Support for additional audio options
- True Wireless Stereo (TWS) Pairing capability

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the micro USB charging cable to the speaker's USB Charge Port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The indicator light will be red while charging and turn off when fully charged.

Charging time is approximately 2-3 hours.



Red On
Charging



Red Off
Fully Charged



Blue On
Paired



Blue Flashing
Waiting for Pair



Press Twice
(anyone of the
two speakers)
TWS Paired



Press Once
(Play/Pause)
Press Long
(Turn on/off)



Right Press Once
(Next Track)
Right Press Long
(Volume Up)



Left Press Once
(Previous Track)
Left Press Long
(Volume Down)

Image: Diagram showing the meaning of the indicator lights: Red On for Charging, Red Off for Fully Charged, Blue On for Paired, and Blue Flashing for Waiting for Pair.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To Power On: Press and hold the Control Button until you hear an audible cue.
- To Power Off: Press and hold the Control Button until you hear an audible cue.

5.2 Bluetooth Pairing

1. Ensure the speaker is powered on and the blue indicator light is flashing, indicating it is in pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "EWA A107" from the list of devices.
4. Once paired, the blue indicator light will turn solid.

5.3 True Wireless Stereo (TWS) Pairing

To achieve dual-channel stereo sound, you can pair two EWA A107 speakers together:


1. Turn on both EWA A107 speakers.
2. Press the "ON/OFF" button twice on either one of the two speakers.
3. Wait for a "DUU" sound, which confirms that the two speakers are connected to each other.
4. On your device, search for "EWA Audio A107s" and pair with it.

True Wireless Stereo

Pair Two Speakers for Dual-channel Stereo Sound



Left Channel

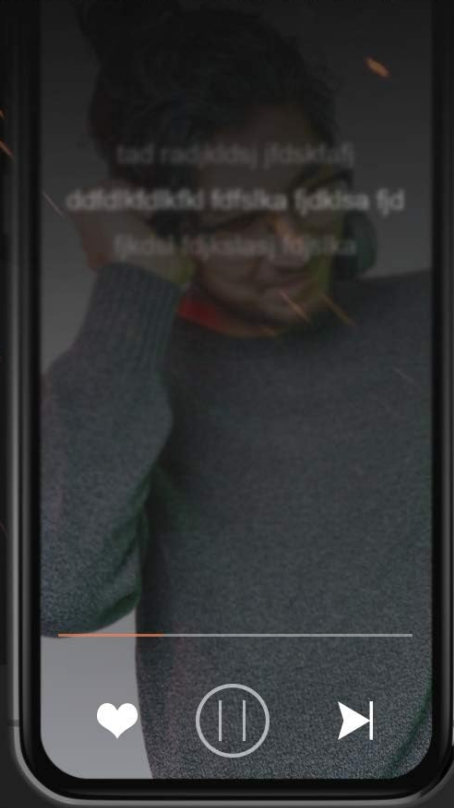

Right Channel

Step 1: Turn on two speakers.

Step 2: Press twice “ON/OFF” button (anyone of the two speakers).

Wait till a “DUU” sound, which means two speakers are connected to each other.

Step 3: Search “EWA Audio A107s” and pair with your device.

Image: Diagram illustrating the True Wireless Stereo (TWS) pairing process, showing two EWA A107 speakers acting as left and right channels connected to a smartphone.

5.4 Micro SD Card Playback

Insert a Micro SD card into the TF (Micro SD) Slot on the speaker. The speaker will automatically detect and play audio files from the card.

5.5 Control Functions (Single Button Operation)

Action	Function
Press Once	Play/Pause
Press Long	Turn on/off
Right Press Once	Next Track

Action	Function
Right Press Long	Volume Up
Left Press Once	Previous Track
Left Press Long	Volume Down
Press Twice (any of two speakers)	TWS Paired

6. MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the speaker away from extreme temperatures, direct sunlight, and moisture.
- Do not disassemble the speaker. This will void the warranty.
- Store the speaker in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not turn on.	Ensure the battery is charged. Connect to a power source using the micro USB cable.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none"> ◦ Ensure the speaker is in pairing mode (blue light flashing). ◦ Make sure Bluetooth is enabled on your device. ◦ Move the speaker closer to your device. ◦ Forget "EWA A107" from your device's Bluetooth list and try pairing again.
No sound or low volume.	<ul style="list-style-type: none"> ◦ Adjust the volume on both the speaker and your connected device. ◦ Ensure the speaker is properly paired. ◦ Check if the audio source is playing.
TWS pairing fails.	<ul style="list-style-type: none"> ◦ Ensure both speakers are EWA A107 models. ◦ Make sure both speakers are powered on. ◦ Repeat the TWS pairing steps carefully. ◦ Ensure no other Bluetooth devices are interfering.
Micro SD card not playing.	<ul style="list-style-type: none"> ◦ Ensure the Micro SD card is inserted correctly. ◦ Check if the audio files on the card are in a supported format. ◦ Try another Micro SD card.

8. SPECIFICATIONS

Feature	Detail
Model Name	A107
Brand	EWA
Speaker Type	Outdoor (Portable)
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Battery Life	8 Hours (at 50% volume)
Battery Capacity	800 mAh Lithium-Polymer
Power Source	Battery Powered
Speaker Maximum Output Power	3 Watts
Audio Output Mode	Stereo (with TWS pairing)
Control Method	Touch (Single Button)
Item Weight	8 ounces
Package Dimensions	3.3 x 3.3 x 2.6 inches
Color	Gray
Micro SD Support	Yes

9. WARRANTY AND SUPPORT

The EWA A107 Mini Metal Bluetooth Speaker comes with a 1-year warranty. For product issues or support, please contact EWA customer service. The quickest way to resolve product problems is to contact us directly. Visit the official EWA Store for more information:[EWA Store on Amazon](#)