

Denver SCO-65210

Denver SCO-65210 Electric Scooter

USER MANUAL

1. Introduction

Thank you for purchasing the Denver SCO-65210 Electric Scooter. This manual provides essential information for the safe and proper operation, maintenance, and troubleshooting of your new scooter. Please read this manual thoroughly before first use and keep it for future reference.

The Denver SCO-65210 is designed for personal transportation, featuring an aluminum frame and a 300W electric motor. It offers a maximum speed of up to 20 km/h and a maximum load capacity of 100 kg. For your safety, always wear appropriate protective gear, including a helmet, and adhere to local traffic laws and regulations.

2. Product Overview



Figure 2.1: Denver SCO-65210 Electric Scooter, side view. This image shows the Denver SCO-65210 Electric Scooter from the side, highlighting its sleek black design and overall structure.



Figure 2.2: Handlebar and Display. A detailed view of the scooter's handlebar, showing the grips, brake lever, and the digital display unit which indicates speed, distance, and battery level.

Key Features:

- Lightweight aluminum frame
- 300W front-wheel electric motor
- Integrated powerful LED light
- Front suspension for enhanced comfort
- Foldable design for easy transport and storage

3. Setup and Assembly

3.1 Unfolding the Scooter

1. Place the scooter on a flat, stable surface.
2. Locate the folding mechanism near the base of the steering column.
3. Release the locking latch and carefully lift the steering column until it clicks into the upright position.
4. Ensure the locking mechanism is securely engaged before use.



Figure 3.1: Folded Scooter. The scooter is shown in its compact, folded state, demonstrating its portability and ease of storage.

3.2 Initial Charging

Before first use, fully charge the scooter's battery. Connect the charger to the charging port, typically located near the footboard. The charging indicator light on the charger will change color (e.g., red to green) when charging is complete. Do not overcharge the battery.

3.3 Handlebar Installation (if applicable)

Some models may require handlebar attachment. Align the handlebars with the steering column and secure them using the provided screws and tools. Ensure all connections are tight and secure.

4. Operating Instructions

4.1 Powering On/Off

- To power on: Press and hold the power button on the display unit until the screen illuminates.
- To power off: Press and hold the power button again until the display turns off.

4.2 Riding the Scooter

1. Place one foot on the footboard and push off with the other foot to gain initial momentum.
2. Once moving, gently press the accelerator lever (throttle) to engage the motor.
3. Maintain a balanced posture and keep both hands on the handlebars.
4. To slow down or stop, release the accelerator and gently apply the brake lever.

4.3 Display Functions

The integrated display shows important information such as current speed, battery level, and distance traveled. Refer to the display for real-time operational data.

4.4 Safety Guidelines

- Always wear a helmet and other protective gear (knee pads, elbow pads).
- Do not ride in heavy rain or through puddles.
- Avoid riding on uneven surfaces, steep inclines, or slippery conditions.
- Do not exceed the maximum load capacity of 100 kg.
- Be aware of your surroundings and other road users.
- Do not perform stunts or dangerous maneuvers.

5. Maintenance

5.1 Cleaning

Wipe the scooter with a damp cloth after use. Do not use high-pressure water jets or harsh chemicals, as this can damage electrical components.

5.2 Battery Care

- Charge the battery regularly, even if the scooter is not in use for extended periods (e.g., once a month).
- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not attempt to open or repair the battery pack.

5.3 Tire Maintenance

Check tire pressure regularly if your scooter has pneumatic tires. Ensure tires are properly inflated to the recommended pressure to optimize performance and prevent punctures.

5.4 General Inspection

Periodically check all screws, bolts, and connections to ensure they are tight. Inspect the brake system for proper function and wear. If any parts are damaged or worn, contact customer support for replacement.

6. Troubleshooting

6.1 Scooter Not Turning On

- Check if the battery is charged.
- Ensure the power button is pressed and held correctly.
- Verify all electrical connections are secure.

6.2 Low Speed or Power

- Ensure the battery is fully charged.
- Check for excessive load (exceeding 100 kg).
- Inspect tires for proper inflation (if pneumatic) or any obstructions.

6.3 Brake Malfunction

- Check the brake lever for proper tension and movement.
- Inspect brake pads for wear.
- If issues persist, seek professional assistance.

For issues not listed here, or if troubleshooting steps do not resolve the problem, please contact customer support.

7. Specifications

Feature	Specification
Brand	Denver
Model Number	SCO-65210
Item Weight	8.9 Kilograms

Feature	Specification
Product Dimensions	43.2 x 90 x 109 cm
Batteries	1 Lithium ion battery (included)
Special Features	Foldable
Color	Blanco Y Gris
Manufacturer	Denver
Age Range (Description)	Adult
Number of Wheels	3
Wheel Material	Rubber
Frame Material	Aluminum
Handlebar Type	Fixed
Wheel Type	Pneumatic

8. Warranty and Support

For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Denver website. Keep your proof of purchase for warranty claims.

If you require technical assistance, have questions about your scooter, or need to order replacement parts, please contact Denver customer support through their official channels. Contact information can typically be found on the manufacturer's website or in the product packaging.

© 2023 Denver. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question