

Scotts LSW70026S

Scotts LSW70026S 26-Inch Push Lawn Sweeper Instruction Manual

Model: LSW70026S | Brand: Scotts

1. INTRODUCTION

The Scotts LSW70026S 26-Inch Push Lawn Sweeper is designed to efficiently collect dry grass clippings, leaves, and light debris from level lawn surfaces, patios, sidewalks, and driveways. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your lawn sweeper.

2. SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the lawn sweeper. Failure to follow these instructions may result in serious injury or property damage.

- **Read the Manual:** Familiarize yourself with all controls and proper usage.
- **Personal Safety:** Wear appropriate footwear and eye protection. Do not operate barefoot or in open sandals.
- **Clear the Area:** Before operation, clear the area of any objects that could be thrown by the brushes, such as rocks, toys, or wires.
- **Children and Bystanders:** Keep children and bystanders away from the operating area.
- **Dry Conditions:** This sweeper is designed for use on dry materials only. Do not use on wet leaves, grass, or debris, as this can cause clogging and reduce effectiveness.
- **Level Ground:** The sweeper is recommended for use on level ground only. Uneven terrain may affect performance and stability.
- **Proper Adjustment:** Ensure the brush height is correctly adjusted for your lawn type to prevent damage to the lawn or the sweeper.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged,

contact Scotts customer service.

- Main Sweeper Body (Green)
- Handle Assembly (Black)
- Collection Bag (Black mesh with Scotts logo)
- Hardware Pack (Bolts, Wing Nuts, Washers)
- Instruction Manual

4. SETUP

Assembly typically takes 5 to 10 minutes. Follow these steps to assemble your Scotts Push Lawn Sweeper.

4.1 Attaching the Handle

Connect the two sections of the handle assembly using the provided bolts and wing nuts. Ensure the handle is securely fastened.

4.2 Attaching the Collection Bag

Slide the collection bag onto the handle frame. The bag should hang freely behind the sweeper body, ready to collect debris.



Figure 1: Front view of the assembled Scotts LSW70026S Push Lawn Sweeper.



Figure 2: Attaching and detaching the collection bag.

5. OPERATING INSTRUCTIONS

Proper operation ensures efficient debris collection and extends the life of your sweeper.

5.1 Adjusting Brush Height

The effectiveness of the sweeper depends on the correct brush height setting. The brushes should be set approximately 1/4 inch deep into your grass.

1. Locate the orange adjustment dial on the front of the sweeper body.
2. Turn the dial to raise or lower the brushes until they are just touching the top of the grass and slightly penetrating it.
3. Test the setting by pushing the sweeper. If it's not picking up debris, lower the brushes slightly. If it's too difficult to push, raise them slightly.

Recommended for use on level ground only.



Figure 3: Brush height adjustment dial.

5.2 Sweeping Technique

Push the sweeper at a steady, moderate pace. Overlapping each pass by about a quarter of the previous sweep can improve collection efficiency. The sweeper works best on dry leaves and grass clippings, collecting approximately 80% on the first pass.



Figure 4: Operating the lawn sweeper on grass.



Figure 5: The lightweight design allows for easy maneuverability.

5.3 Emptying the Collection Bag

When the collection bag is full, simply lift it off the frame and empty the contents into a compost pile or waste bin. Reattach the bag before continuing to sweep.

Video 1: Demonstration of the Scott's 26-Inch Lawn Sweeper in action, collecting leaves and grass clippings.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your lawn sweeper.

- **Cleaning:** After each use, remove any tangled debris from the brushes and wheels. Wipe down the sweeper body and collection bag.
- **Storage:** Store the sweeper in a dry, protected area. The handle can be folded for compact storage.
- **Brush Inspection:** Periodically inspect the brushes for wear. Replace worn brushes to maintain effective sweeping.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Sweeper not picking up debris:**

- Ensure the brush height is correctly adjusted (1/4 inch into the grass).
- Check if the material is wet; the sweeper is designed for dry debris only.
- Verify that the collection bag is properly attached and not overfilled.

- **Sweeper is difficult to push:**

- Raise the brush height slightly.
- Check for tangled debris in the brushes or wheels.
- Ensure the collection bag is not overfilled.

- **Debris is flipping over the back of the bag:**

- The collection bag may be too full. Empty it.
- Adjust your pushing speed; a slower, steady pace is often more effective.

8. SPECIFICATIONS

Brand	Scotts
Model Number	LSW70026S
Power Source	Manual
Material	Plastic
Color	Black/Green
Sweeping Width	26 Inches
Product Dimensions	32"D x 16"W x 12"H
Item Weight	19.06 pounds
Assembly Required	Yes

9. WARRANTY AND SUPPORT

Scotts products are designed for durability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Scotts website. For technical support, replacement parts, or further assistance, please contact Scotts customer service.

You can visit the [Scotts Store on Amazon](#) for more information and products.