

Regency Hill 42D34

Regency Hill Jenson Adjustable Pharmacy Floor Lamp

Model: 42D34

1. INTRODUCTION

Thank you for choosing the Regency Hill Jenson Adjustable Pharmacy Floor Lamp. This manual provides essential information for the safe and efficient use of your new lamp. Please read it thoroughly before assembly and operation, and retain it for future reference.

This traditional pharmacy floor lamp features an adjustable height and a swing arm head, making it ideal for reading or task lighting in various rooms such as bedrooms, living rooms, dining rooms, or offices. Its dark bronze finish and metal construction ensure durability and a timeless aesthetic.

2. SAFETY INFORMATION

- **Electrical Safety:** Always unplug the lamp from the power outlet before cleaning, changing the bulb, or performing any maintenance. Do not use with a damaged cord or plug.
- **Bulb Requirements:** Use one maximum 60-watt standard-medium base bulb (E26 type, not included). Do not exceed the recommended wattage to prevent overheating.
- **Placement:** Ensure the lamp is placed on a stable, level surface to prevent tipping. Keep the cord away from high-traffic areas to avoid tripping hazards.
- **Cleaning:** Clean with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish.
- **Indoor Use Only:** This lamp is designed for indoor use only. Do not expose to moisture or extreme temperatures.

3. SETUP AND ASSEMBLY

Your Jenson Pharmacy Floor Lamp is designed for easy assembly. Follow these steps to set up your lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present and undamaged.
2. **Assemble the Pole:** Connect the straight lamp poles together one by one by screwing them clockwise. If a pole is slipping, loosen it slightly, then tighten with moderate force. Pull out any extra cord from the bottom of the base as you connect sections.
3. **Attach the Base:** Securely fasten the assembled pole to the heavy metal base. Ensure all connections are smooth and tight for stability.
4. **Install the Lampshade:** Find the black ring in the package and secure it using the lampshade fixing ring to attach the shade to the lamp head.
5. **Insert the Bulb:** Install one standard-medium base (E26) bulb, up to 60 watts (not included).
6. **Connect to Power:** Plug the 7-foot long black cord into a suitable 120V AC power outlet.

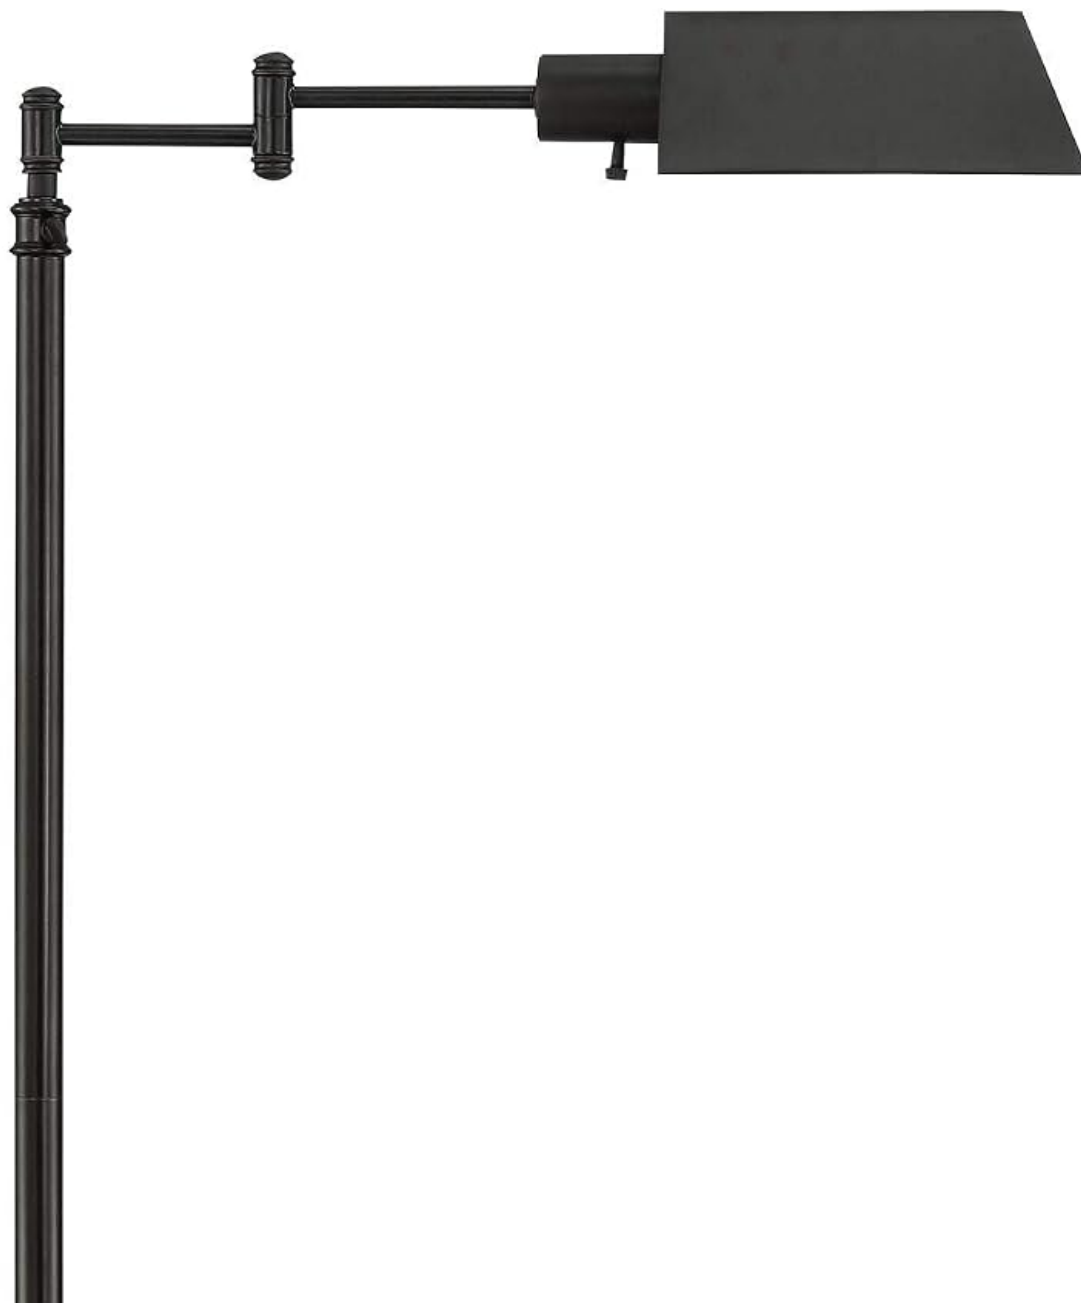




Figure 3.1: Labeled components of the Jenson Pharmacy Floor Lamp, highlighting the swing arm lamp head, adjustable height, classic pharmacy design, dark bronze finish, and stable metal construction.



Figure 3.2: Key dimensions of the lamp, including adjustable height from 44" to 54", shade width of 8", shade height of 3", and base width of 9".

Your browser does not support the video tag.

Video 3.1: A seller-provided video demonstrating the assembly process of a similar floor lamp, including connecting pole sections, securing the base, and installing the lampshade and bulb.

4. OPERATING INSTRUCTIONS

The Jenson Pharmacy Floor Lamp is designed for ease of use and versatile lighting.

1. **Power On/Off:** The lamp features an on-off push button switch located on the lamp head. Press the button to turn the light on or off.
2. **Adjusting Height:** The lamp's height is adjustable from 44 inches to 54 inches. Loosen the adjustment knob on the pole, slide the upper section to your desired height, and then tighten the knob to secure it.

3. **Adjusting Light Direction:** The swing arm lamp head allows for horizontal movement (side to side) and vertical tilting, enabling you to direct the light precisely where needed for reading or task lighting.





Figure 4.1: Detail of the convenient on-off push button switch located directly on the lamp head for easy access.

5. MAINTENANCE

To ensure the longevity and optimal performance of your lamp, follow these simple maintenance guidelines:

- **Cleaning:** Dust the lamp regularly with a soft, dry cloth. For more thorough cleaning, wipe surfaces with a slightly damp cloth and immediately dry with a clean, soft cloth. Avoid harsh chemicals or abrasive materials.
- **Bulb Replacement:** Always ensure the lamp is unplugged and the bulb has cooled completely before attempting to replace it. Use only E26 base bulbs with a maximum wattage of 60W.
- **Cord Care:** Periodically inspect the power cord for any signs of damage, fraying, or cuts. If damage is found, discontinue use immediately and contact a qualified electrician or the manufacturer for assistance.
- **Tighten Connections:** Occasionally check all screw connections and joints to ensure they remain tight and secure.

6. TROUBLESHOOTING

If you encounter any issues with your lamp, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Lamp does not light up	1. Power cord not securely plugged in. 2. Bulb is loose or burnt out. 3. Power outlet is not functioning.	1. Ensure the power cord is fully plugged into the outlet. 2. Tighten the bulb or replace it with a new one. 3. Test the outlet with another appliance or check your circuit breaker.
Light flickers	1. Loose bulb connection. 2. Incorrect bulb type or wattage.	1. Tighten the bulb securely. 2. Ensure the bulb is an E26 base, 60W maximum incandescent bulb.

Problem	Possible Cause	Solution
Lamp is unstable	1. Pole sections or base not securely tightened.	1. Check and tighten all pole connections and the base attachment.

7. SPECIFICATIONS

- **Brand:** Regency Hill
- **Model Number:** 42D34
- **ASIN:** B07FB1VRBR
- **UPC:** 736101956372
- **Product Dimensions:** 22.9D x 62.2W x 137.2H Centimetres (9D x 24.5W x 54H Inches)
- **Adjustable Height:** 44" to 54"
- **Base Diameter:** 9 Inches
- **Shade Dimensions:** 8" wide x 5.5" deep x 3" high
- **Weight:** 13 Pounds (5.9 kg)
- **Material:** Metal
- **Finish Type:** Dark Bronze
- **Shade Material:** Metal
- **Shade Color:** Black
- **Bulb Base:** E26 (Standard-Medium)
- **Max Wattage:** 60 Watts
- **Light Source Type:** Incandescent (Bulb not included)
- **Switch Type:** Push Button (on lamp head)
- **Cord Length:** 7 feet
- **Voltage:** 120 Volts
- **Indoor/Outdoor Usage:** Indoor
- **Installation Type:** Freestanding

8. WARRANTY AND SUPPORT

This Regency Hill product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, replacement parts, or warranty claims, please contact the retailer where you purchased the product or visit the official Regency Hill website for customer service information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FB1VRBR>

More documents and user manuals: <https://manuals.plus/>