

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Intel](#) /
- › [Intel NUC 7 Business Mini PC \(NUC7i5DNKPC\) Instruction Manual](#)

Intel NUC7i5DNKPC

Intel NUC 7 Business Mini PC (NUC7i5DNKPC) Instruction Manual

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Intel NUC 7 Business Mini PC (model NUC7i5DNKPC). This compact and powerful PC is designed for business environments, featuring a 7th Generation Intel Core i5 processor, 256GB NVMe SSD, 8GB DDR4-2133 memory, and Windows 10 Pro. It includes Intel vPro Technology for remote manageability and enhanced security, and Intel HD Graphics 620 supporting dual 4K monitors.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- Intel NUC 7 Business Mini PC Unit
- VESA Mounting Plate
- Power Supply/Adapter (Note: An AC power cord is not included and must be supplied by the user. A 3-prong "laptop style" cord with 3 round pins in a triangle formation is required.)
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the ports and features of your Intel NUC.



Figure 1: Front Panel. This image shows the front of the Intel NUC 7 Business Mini PC. It features two USB 3.0 ports (marked with "SS" for SuperSpeed) and a power button on the right side.



Figure 2: Rear Panel. This image displays the rear of the Intel NUC 7 Business Mini PC. From left to right, it includes a 19V DC power input, two HDMI ports (one labeled "Protected UHD"), an Ethernet port, and two additional USB 3.0 ports.



Figure 3: Internal Access. This image shows the Intel NUC 7 Business Mini PC with its top cover partially removed, illustrating access to internal components for potential upgrades or maintenance.

SETUP

- 1. Connect Power:** Connect the power adapter to the 19V DC input port on the rear of the NUC. Plug the AC power cord (not included) into the power adapter and then into a wall outlet.
- 2. Connect Display:** Connect your monitor(s) to the HDMI ports on the rear of the NUC using HDMI cables. The NUC supports dual 4K displays.
- 3. Connect Peripherals:** Connect your USB keyboard, mouse, and any other USB devices to the available USB 3.0 ports (two on the front, two on the rear).
- 4. Connect Network (Optional):** For a wired internet connection, connect an Ethernet cable from your router or modem to the Ethernet port on the rear of the NUC. For wireless connectivity, the NUC includes built-in Wi-Fi

and Bluetooth.

5. **Power On:** Press the power button located on the front panel of the NUC. The system will boot up.
6. **Initial Windows 10 Pro Setup:** Follow the on-screen instructions to complete the initial setup of Windows 10 Pro, including language, region, network settings, and user account creation.

OPERATING INSTRUCTIONS

- **Basic Operation:** Once Windows 10 Pro is set up, you can use the NUC like any standard desktop computer. Launch applications, browse the web, and manage files.
- **Dual Display Support:** Utilize the two HDMI ports to connect multiple monitors for an extended desktop experience. Configure display settings within Windows.
- **Intel vPro Technology:** This NUC includes Intel vPro Technology, enabling remote management and enhanced security features. Consult your IT administrator or Intel documentation for specific vPro setup and usage.
- **Shut Down/Restart:** To properly shut down or restart the NUC, use the options available in the Windows Start Menu. Avoid simply unplugging the power cable to prevent data loss.

MAINTENANCE

- **Cleaning:** Keep the NUC clean by gently wiping the exterior with a soft, dry cloth. Do not use liquid cleaners directly on the device. Ensure ventilation openings are free from dust and obstructions.
- **Software Updates:** Regularly update Windows 10 Pro and Intel drivers to ensure optimal performance, security, and compatibility. Access Windows Update through the Settings menu.
- **Data Backup:** Periodically back up important data to an external drive or cloud storage to prevent data loss.

TROUBLESHOOTING

No Power / System Does Not Turn On:

- Ensure the power adapter is securely connected to the NUC and a working power outlet.
- Verify that you are using a compatible 3-prong AC power cord with the power adapter. This cord is not included with the NUC.
- Test the power outlet with another device.

No Display on Monitor:

- Check that the HDMI cables are securely connected to both the NUC and the monitor.
- Ensure the monitor is powered on and set to the correct input source (HDMI 1, HDMI 2, etc.).
- Try connecting to a different HDMI port on the NUC or using a different monitor/cable if available.

No Internet Connection:

- For wired connections, ensure the Ethernet cable is properly connected and your router/modem is working.
- For wireless connections, check Wi-Fi settings in Windows to ensure you are connected to the correct network and the signal is strong.
- Restart your router/modem and the NUC.

System Performance Issues:

Ensure Windows and drivers are up to date.

- Ensure windows and drivers are up to date.
- Check for background applications consuming excessive resources using Task Manager.
- Ensure adequate ventilation to prevent overheating.

SPECIFICATIONS

Feature	Detail
Model Name	Intel NUC 7 Business
Model Number	BLKNUC7I5DNKPC1
Processor	7th Generation Intel Core i5-7300U (2.6 GHz CPU Speed)
Operating System	Windows 10 Pro
RAM	8GB DDR4-2133 (Max 32GB, 1 slot available)
Storage	256GB NVMe SSD
Graphics	Intel HD Graphics 620 (Integrated)
Video Output	2x HDMI (Supports dual 4K displays, Max Resolution: 3840 x 2160 pixels)
USB Ports	4x USB 3.0 (Total)
Network	Ethernet, Wi-Fi (802.11b/g/n), Bluetooth
Special Features	Intel vPro Technology, Hardware TPM 2.0, Microphone
Dimensions (LxWxH)	5.59 x 4.88 x 4.49 inches
Weight	2.2 Pounds
Color	Black
UPC	735858382656

WARRANTY INFORMATION

The Intel NUC 7 Business Mini PC comes with a **3-Year Limited Warranty**. For detailed terms and conditions, please refer to the official Intel warranty documentation or visit the Intel support website. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, driver downloads, or additional documentation, please visit the official Intel support website. You can typically find support resources by searching for "Intel NUC support" or by navigating to [Intel's official support page](#).

