

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lawmate](#) /

› [Lawmate Pro DVR Button Camera Bundle PV-500NP Instruction Manual](#)

Lawmate PV-500NP Bundle

Lawmate Pro DVR Button Camera Bundle PV-500NP Instruction Manual

Model: PV-500NP Bundle | Brand: Lawmate

1. INTRODUCTION AND OVERVIEW

The Lawmate PV-500NP Bundle is a professional-grade surveillance kit designed for discreet and high-resolution recording. This all-in-one package combines the PV-500Neo Pro HD LCD touch screen WiFi pocket DVR with the BU-18Neo 1080P button camera. It offers motion-activated recording, peer-to-peer Wi-Fi connectivity, and compatibility with both Mac and Windows operating systems. The system is ideal for covert recording, allowing users to capture and review HD footage conveniently.

2. PACKAGE CONTENTS

- PV-500Neo Pro HD LCD Touch Screen WiFi Pocket DVR
- BU-18Neo 1080P Button Camera
- 32GB Micro SD Card
- USB Charging/Data Cable
- Memory Card Reader
- Reset Tool (pin)
- Assorted Button Covers for Camera Lens

3. PRODUCT FEATURES

- **Video Capture Resolution:** 1080p HD video recording at 30 fps.
- **Special Features:** Motion Sensor, Portable design.
- **Memory Storage:** Supports up to 32GB Micro SD Card.
- **Connectivity:** Wireless (Wi-Fi) for peer-to-peer connection.
- **Operating System Compatibility:** Android, iOS, Mac, Windows.
- **Power Source:** Rechargeable battery (AC/DC adapter included).
- **Discreet Design:** Button camera with various covers for covert use.

4. SETUP

4.1. Initial Charging

Before first use, fully charge the DVR unit using the provided USB charging cable and an AC adapter. The charging indicator light will illuminate during charging and turn off when fully charged.

4.2. Inserting the Micro SD Card

Locate the Micro SD card slot on the DVR. Gently insert the provided 32GB Micro SD card until it clicks into place. Ensure the card is inserted correctly to enable recording.



Image: Side view of the PV-500Neo Pro DVR, highlighting the Micro SD card slot and USB port.

4.3. Connecting the Button Camera

Connect the BU-18Neo button camera to the designated port on the PV-500Neo Pro DVR. Ensure a secure connection to prevent accidental unplugging during operation.



Image: The PV-500Neo Pro DVR with the BU-18Neo button camera attached, showing the cable connection.

4.4. Setting Date and Time

To set the correct date and time for video recordings, connect the DVR to a computer. A text file on the Micro SD card will need to be edited to reflect the current date and time. This file also allows you to choose whether to display the date/time on the video footage.

4.5. App Installation (for Wi-Fi features)

Download the dedicated mobile application (refer to the included mini-manual for QR code or app store search terms)

on your Android or iOS device to utilize Wi-Fi features and live viewing.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Locate the power switch on the DVR. Slide the switch to the 'On' position to power on the device. The device will typically begin recording in loop mode automatically upon power-on. To power off, slide the switch to the 'Off' position.



Image: Top view of the PV-500Neo Pro DVR, indicating the power switch and record/stop controls.

5.2. Recording Modes

- **Continuous Loop Recording:** When powered on, the device will automatically start recording. When the memory card is full, it will overwrite the oldest files to continue recording.
- **Motion Detection Recording:** After powering on, press the designated button (refer to the mini-manual for exact button) once to activate motion detection mode. An LED indicator will flash to confirm this mode. Recording will only occur when motion is detected.

5.3. Accessing Recordings

To access recorded files, power off the DVR and connect it to a computer using the USB cable. The device will appear as a removable drive, allowing you to transfer or view files. Alternatively, you can remove the Micro SD card and insert it into the provided memory card reader for computer access.



Image: Back view of the PV-500Neo Pro DVR, showing the USB port for data transfer and charging.

6. MAINTENANCE

- **Handle with Care:** The flexible ribbon cable connecting the camera to the DVR is delicate. Avoid stressing the connection points or folding the cable sharply, as this may cause damage.
- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid harsh chemicals or abrasive materials.

- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

- **Device Freezes/Stops Recording:** If the device freezes or stops recording unexpectedly, use the provided reset tool to press the reset button. This may resolve the issue.



Image: Bottom view of the PV-500Neo Pro DVR, indicating the DC In port and the recessed Reset button.

- **Poor Audio Quality:** Ensure the microphone (located on the DVR body, not the camera lens) is not obstructed. For outdoor use, ensure the entire DVR is outside to minimize internal noise.
- **No Recording/Files Not Found:** Verify that the Micro SD card is correctly inserted and formatted. Ensure the device is powered on and in the desired recording mode.

8. SPECIFICATIONS

Feature	Detail
Brand	Lawmate
Connectivity Technology	Wireless
Video Capture Resolution	1080p
Special Feature	Motion Sensor, Portable
Memory Storage Capacity	32 GB
Power Source	AC/DC
Operating System	Android, iOS
Frame Rate	30 fps
Recording Mode	HD video
Item Weight	1.23 pounds
Package Dimensions	9.33 x 5.47 x 2.56 inches

9. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the documentation provided with your purchase or contact the seller directly. Specific warranty terms and support channels may vary.