

ECONTROLLY RCEC-XRT132

ECONTROLLY XRT132 Remote Control User Manual

Model: RCEC-XRT132

INTRODUCTION

This manual provides instructions for the ECONTROLLY XRT132 Remote Control, designed for use with various Vizio TV models. This remote control requires no programming or pairing. Simply install new alkaline batteries, and it will be ready for immediate use.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

The remote control is now ready for use with your compatible Vizio TV.



Image: Rear view of the XRT132 remote control with the battery cover removed, illustrating the correct placement for two AAA batteries.

OPERATING INSTRUCTIONS

The ECONTROLLY XRT132 remote control provides standard functions for your Vizio TV. Point the remote directly at the TV's infrared sensor for optimal performance.

Key Functions

- **Power Button ():** Turns the TV on or off.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.

- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute Button ():** Mutes or unmutes the TV's audio.
- **Input/Source Button ():** Cycles through available input sources (HDMI, AV, etc.).
- **Menu/Settings Button (≡):** Accesses the TV's main menu or settings.
- **Navigation Buttons (Up, Down, Left, Right):** Used to navigate through menus and options.
- **OK/Select Button ():** Confirms selections or plays/pauses media.
- **Back/Exit Button:** Returns to the previous screen or exits a menu.
- **PIC Button:** Likely accesses picture settings or modes.



Image: Front view of the ECONTROLLY XRT132 remote control, highlighting the layout of its operational buttons.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure new AAA alkaline batteries are correctly installed with the correct polarity.
 - Check if the batteries are depleted and replace them if necessary.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Intermittent response:**
 - This may indicate low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.
- **Remote works for some functions but not others:**
 - Verify that your Vizio TV model is listed as compatible with the XRT132 remote.
 - Some advanced TV functions may require the original TV remote or specific TV settings.

SPECIFICATIONS

Model Number	RCEC-XRT132
Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2 ounces
Batteries Required	2 AAA batteries
Connectivity Technology	Infrared (IR)
Compatible Devices	Vizio Televisions (M60-D1, M65-D0, M70-D3, M80-D3, M50-D1, M55-D0, M60-C3, P50-C1, P55-C1, P75-C1, XR6M10, XR6P10, P65-C1, A1, E280-B1, D39HN-E0, D43N-E1, D48HN-E0, D48N-E0, D50N-E1, D55N-E2, E221-A1, E231-B1)

WARRANTY INFORMATION

Specific warranty details for the ECONTROLLY XRT132 Remote Control are not provided in the product information. Please refer to the seller's return policy or contact the manufacturer directly for warranty inquiries.

Note: Amazon's return policy for this item is typically 30 days from receipt for a refund or replacement.

CUSTOMER SUPPORT

For further assistance or technical support regarding your ECONTROLLY XRT132 Remote Control, please contact the seller directly through the platform where the purchase was made.

You may also visit the [ECONTROLLY brand page on Amazon](#) for more information.