

## Bosch 00311925

# Bosch Siemens Washing Machine Cleaner (200g) Instruction Manual

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of the Bosch Siemens Washing Machine Cleaner. This product is designed to clean the interior of your washing machine, helping to improve washing results by reducing spots and marks on laundry, and to reduce unpleasant odors caused by regular low-temperature washes. Regular use contributes to the longevity and optimal performance of your appliance.

## SAFETY INFORMATION

### Warning:

- Keep out of reach of children.
- Avoid contact with eyes and skin. In case of contact, rinse immediately with plenty of water and seek medical advice.
- Do not ingest. If swallowed, seek medical advice immediately and show this container or label.
- Wear protective gloves and eye/face protection during handling.
- Ensure adequate ventilation when using the product.
- This product contains Sodium carbonate (>30%), sodium silicate (15-30%), sodium percarbonate (5-15%). Refer to the ingredients list for full details.

For further safety information, please refer to the product packaging and consult a medical professional if necessary.

## INGREDIENTS

The Bosch Siemens Washing Machine Cleaner contains the following active ingredients:

- Sodium carbonate (>30%)
- Sodium silicate (15-30%)
- Sodium percarbonate (5-15%)
- Other ingredients include Trisodium citrate, Polymer based on maleic acid and acrylic acid, TAED, Fatty alcohol alcoxylate, Parfum, Amylases.

## PRODUCT OVERVIEW

---



Image: A 200g container of Bosch Siemens Washing Machine Cleaner. The label displays product information in multiple languages, safety pictograms, and indicates a minimum wash temperature of 90°C.

## SETUP

Before using the cleaner, ensure your washing machine is prepared:

1. Ensure your washing machine is completely empty of laundry.
2. Close the washing machine door securely.

## OPERATING INSTRUCTIONS

Follow these steps to effectively clean your washing machine:

1. **Add Cleaner:** Open the detergent dispenser drawer or directly add the entire contents of one 200g box of Bosch Siemens Washing Machine Cleaner into the empty washing machine drum. Do not add any laundry or other detergents.
2. **Select Program:** Choose the hottest and longest wash cycle available on your washing machine. A program with a minimum temperature of 90°C (194°F) is recommended for optimal cleaning results.
3. **Start Cycle:** Start the selected wash cycle. Allow the machine to complete the full cycle.
4. **Post-Cycle:** Once the cycle is complete, wipe down the rubber seal around the door and the detergent dispenser drawer with a damp cloth to remove any loosened residue.

*Note: The cleaner works by dissolving detergent residues, grease, and dirt, which can cause unpleasant odors and affect washing performance.*

## MAINTENANCE SCHEDULE

For optimal washing machine hygiene and performance, it is recommended to use the Bosch Siemens Washing Machine Cleaner regularly:

- For daily machine users, apply the cleaner every 3 months.
- For machines used 2-3 times a week, consider cleaning every 90-100 washes or every 6 months.
- This product is a cleaner, not a descaler. If you have hard water, consider using a separate descaling product alternately with this cleaner. For example, use the cleaner at 3 months, and a descaler at 6 months.

## TROUBLESHOOTING

| Problem                                  | Possible Cause                                 | Solution                                                                                                                                                                                            |
|------------------------------------------|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unpleasant odors persist after cleaning. | Severe build-up or mold in inaccessible areas. | Repeat the cleaning cycle. Ensure the hottest and longest cycle was used. Check and clean the detergent dispenser and door seal manually. If odors persist, professional servicing may be required. |

| Problem                                     | Possible Cause                                    | Solution                                                                                                                     |
|---------------------------------------------|---------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| Residue visible in the drum after cleaning. | Heavy accumulation of dirt or detergent.          | Run an additional rinse cycle. Wipe down the drum interior with a damp cloth. Consider increasing the frequency of cleaning. |
| Cleaner did not dissolve completely.        | Insufficient water temperature or cycle duration. | Ensure a wash cycle of at least 90°C and the longest duration is selected. Break up any clumps before adding the cleaner.    |

## PRODUCT SPECIFICATIONS

**Product Name:** Bosch Siemens Washing Machine Cleaner

**Model Number:** 00311925

**Item Weight:** 200 g

**Product Dimensions (LxWxH):** 7 x 7 x 12 cm

**Item Form:** Powder

**Scent:** Unscented

**Specific Uses:** Washing Machine Cleaning

**Material Feature:** Vegetarian, Chlorine Free

**Country of Origin:** Germany

**Manufacturer:** BSH Household Appliances Manufacturing Pvt. Ltd.

**Date First Available:** 27 January 2017

## SUPPORT AND CONTACT INFORMATION

For further assistance or inquiries regarding your Bosch Siemens Washing Machine Cleaner, please contact the manufacturer:

**Manufacturer:** BSH Household Appliances Manufacturing Pvt. Ltd.

**Contact Number:** 1800 266 1880

**Address:** Arena House, 2nd Floor Main, Building, Plot No.103, Road No.12, MIDC, Andheri East, Mumbai 400093

**Website:** [www.cleanright.eu](http://www.cleanright.eu) (as indicated on product packaging)