

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT RMT-B119A Replacement Remote Control User Manual for Sony Blu-ray Disc Players

USARMT RMT-B119A

USARMT RMT-B119A Replacement Remote Control User Manual

For Sony Blu-ray Disc Players

Model: RMT-B119A | Brand: USARMT

INTRODUCTION

This manual provides instructions for the USARMT RMT-B119A replacement remote control, designed for use with various Sony Blu-ray Disc Players. Please read this manual carefully before using the remote control to ensure proper operation and to maximize your viewing experience.

PRODUCT OVERVIEW

The RMT-B119A remote control features dedicated buttons for common Blu-ray player functions, including navigation, playback, and direct access to streaming services like Netflix.





Image 1: Front view of the USARMT RMT-B119A replacement remote control, showing all buttons including numeric keypad, navigation, playback controls, and dedicated Netflix and SEN buttons.

Key Buttons and Functions:

- **OPEN/CLOSE:** Opens or closes the disc tray.
- **INPUT:** Selects the input source on the connected TV.
- **TV I/O:** Powers the TV on or off.
- **I/O (Power):** Powers the Blu-ray Disc Player on or off.
- **VOL +/-:** Adjusts the volume.

- **Numeric Keypad (0-9):** For direct track selection or input.
- **AUDIO:** Changes audio tracks or languages.
- **SUBTITLE:** Toggles subtitles on or off.
- **DISPLAY:** Shows on-screen information.
- **Color Buttons (Yellow, Blue, Red, Green):** For specific functions within menus or applications.
- **TOP MENU:** Accesses the disc's top menu.
- **POP UP/MENU:** Accesses the disc's pop-up menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** For menu navigation and selection.
- **RETURN:** Returns to the previous screen or menu.
- **OPTIONS:** Displays context-sensitive options.
- **HOME:** Accesses the player's main home menu.
- **PREV/NEXT:** Skips to the previous or next chapter/track.
- **PAUSE/PLAY/STOP:** Standard playback controls.
- **REWIND/FAST FORWARD:** Rewinds or fast forwards playback.
- **NETFLIX:** Direct access to the Netflix application.
- **SEN (Sony Entertainment Network):** Direct access to the Sony Entertainment Network.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image 2: Back view of the USARMT RMT-B119A remote control, illustrating the battery compartment and textured grip.

The remote control does not require any programming and should work directly with compatible Sony Blu-ray Disc Players once batteries are installed.

OPERATING INSTRUCTIONS

Basic Operation:

- **Power On/Off:** Press the **I/O** button to turn your Blu-ray player on or off.
- **Disc Playback:** Insert a Blu-ray disc or DVD into the player. Use the **PLAY** button to start playback.
- **Navigation:** Use the **Up, Down, Left, Right** arrow buttons to navigate menus and select items. Press the **ENTER** button

(center of navigation pad) to confirm selections.

- **Volume Control:** Use the **VOL +/-** buttons to adjust the audio output level.
- **Accessing Menus:** Press **HOME** to go to the player's main menu. Use **TOP MENU** or **POP UP/MENU** for disc-specific menus.
- **Streaming Services:** Press the dedicated **NETFLIX** or **SEN** buttons to directly launch these applications (internet connection and subscription may be required).

COMPATIBILITY

This remote control is compatible with the following Sony Blu-ray Disc Player models:

- BDP-S390, BDP-S390WM
- BDP-S590, BDP-S590WM
- BDP-BX59, BDP-BX39, BDP-BX110, BDP-BX310, BDP-BX510
- BDP-S1100, BDP-S2100, BDP-S3100, BDP-S3100/BF
- BDP-S5100, BDP-S5100/BM, BDP-S5100E
- And other models listed as compatible with RMT-B119A.

MAINTENANCE

Cleaning:

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	• Ensure batteries are inserted correctly with the correct polarity. • Replace old batteries with new AAA batteries. • Check for any obstructions between the remote control and the Blu-ray player's infrared sensor. • Ensure you are within the effective range and line of sight of the player.
Certain buttons are not responding.	• Verify that the button function is applicable to the current screen or mode of the Blu-ray player. • Clean the remote control, especially around the unresponsive buttons, to remove any debris. • Replace batteries.

SPECIFICATIONS

- **Model:** RMT-B119A
- **Brand:** USARMT
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Sony Blu-ray Disc Players (specific models listed in Compatibility section)
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** Approximately 20.32 x 5.08 x 1.27 cm (8 x 2 x 0.5 inches)
- **Weight:** Approximately 90.72 g (3.2 oz) without batteries

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.

USARMT RMT-B119A User Manual | © 2023 All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question