

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UBeesize](#) /

› [UBeesize Bluetooth Remote Control \(JP remote shutter\) Instruction Manual](#)

UBeesize JP remote shutter

UBeesize Bluetooth Remote Control Instruction Manual

Model: JP remote shutter

INTRODUCTION

The UBeesize Bluetooth Remote Control is designed to enable remote photo and video capture with compatible smartphones and tablets. This device is ideal for self-portraits, group photos, and any photography situation where minimizing camera shake or operating from a distance is beneficial. It offers a wireless range of up to 30 feet (10 meters). This manual provides detailed instructions for the proper setup, operation, and maintenance of your remote control.

PACKAGE CONTENTS

- 1 x Wireless Bluetooth Remote Control (battery included)
- 1 x Adjustable Wrist Strap
- 1 x Instruction Manual

SETUP

1. Powering On the Remote

Locate the ON/OFF switch on the side of the remote control. Slide the switch to the "ON" position. The LED indicator light will begin to flash, indicating it is ready for pairing.



Image Description: This diagram illustrates the physical features of the remote, including the LED indicator, iOS and Android remote buttons, battery compartment, and ON/OFF switch.

2. Pairing with Your Device

1. Ensure your smartphone or tablet's Bluetooth is enabled.
2. On your device, go to the Bluetooth settings.
3. Look for "AB Shutter3" or a similar name in the list of available devices and select it to pair.
4. Once paired, the LED indicator on the remote will stop flashing and remain solid blue.

Note: Most mobile devices do not require a separate app for this remote. It pairs directly via Bluetooth.



Image Description: The remote is compatible with a wide range of devices, including iPhones, iPads, Samsung Galaxy, Huawei, LG, and Blackberry models.

OPERATING INSTRUCTIONS

Taking Photos and Recording Videos

1. Open your device's camera application.
2. Position your device as desired (e.g., on a tripod, selfie stick).
3. Press the appropriate button on the remote control:
 - For iOS devices (iPhone, iPad), press the button labeled "iOS".
 - For Android devices, press the button labeled "Android".
4. The remote will trigger your device's camera shutter for photos or start/stop video recording.

ios Android

HD

30 FEET **Bluetooth® Range** **10 METERS**

Image Description: The remote control allows you to capture photos and videos from a distance, ideal for group shots or self-portraits.



Image Description: This remote supports both photo and video recording modes, providing stability when used with a tripod.



Image Description: The remote can be used in diverse settings, from simple handheld shots to more elaborate setups with tripods or selfie sticks.

MAINTENANCE

- **Power Off When Not in Use:** To conserve battery life, always slide the ON/OFF switch to the "OFF" position when the remote control is not in use.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** The remote uses a standard button cell battery. If the remote stops responding or the LED does not light up, the battery may need replacement. Refer to the diagram for battery compartment location.

TROUBLESHOOTING

Remote Not Pairing

- Ensure the remote is powered on and the LED is flashing.
- Make sure your device's Bluetooth is enabled and discoverable.
- Check if the remote is already paired with another device. The remote can only be paired with one device at a time. If you need to switch devices, unpair it from the previous device's Bluetooth settings first.
- Move the remote closer to your device (within 10 meters / 30 feet).
- Restart both the remote (turn off and on) and your smartphone/tablet.
- Check the remote's battery. Replace if necessary.

Remote Not Triggering Camera

- Confirm the remote is successfully paired (solid blue LED).
- Ensure you are pressing the correct button for your device's operating system (iOS or Android).
- Verify that your device's camera app is open and active.
- Some third-party camera apps or social media apps (e.g., Snapchat, Facebook, Instagram) may not fully support external Bluetooth shutters. Use your device's native camera app for best compatibility.

SPECIFICATIONS

Brand	UBeesize
Model Number	JP remote shutter
Connectivity	Bluetooth
Compatible Devices	iOS (iPhone, iPad), Android smartphones and tablets
Wireless Range	Up to 10 meters (30 feet)
Color	Black
Dimensions (L x W x H)	3 x 4 x 1.27 cm (approximately 1.18 x 1.57 x 0.5 inches)
Weight	200 g
Battery	Button cell battery (included)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official UBeesize website. Keep your purchase receipt for warranty claims.