

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Soundcore](#) /

› [Anker Soundcore Infini Soundbar User Manual](#)

## Soundcore A3371

# Anker Soundcore Infini Soundbar User Manual

Model: A3371

## INTRODUCTION

---

The Anker Soundcore Infini Soundbar is designed to enhance your audio experience with immersive sound and versatile connectivity. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your device.

## SETUP

---

### Package Contents

- Soundcore Infini Soundbar
- Power Cable
- Remote Control
- AAA Batteries x 2
- 3.5mm-RCA Audio Cable
- Optical Cable
- Wall Mount Brackets x 2
- Wall Mount Bolts x 2
- Wall Mount Template
- User Manual
- Customer Support Information

### Placement Options

The Soundcore Infini Soundbar offers flexible placement. It can be positioned in front of your TV or mounted on a wall. Its slim design (approximately 56mm height) ensures it does not obstruct your TV screen.

# 設置場所を選ばない

テレビの前に設置した場合も、  
壁に取り付けた場合も  
同じサウンド体験を提供します



Image: The Soundcore Infini Soundbar can be placed on a TV stand or mounted on the wall for a consistent sound experience.

## Connecting to Your TV


The Soundcore Infini offers multiple connection methods:

- **Optical Cable:** For high-quality digital audio.
- **Coaxial Digital Cable:** Another option for digital audio connection.
- **AUX Cable (3.5mm-RCA):** For analog audio connections.
- **Bluetooth:** For wireless connection to mobile devices.

Refer to the included user manual for specific instructions on connecting each cable to the designated input terminal on the soundbar and your TV.

# 様々な接続方法

光ケーブル、同軸デジタルケーブル、  
AUXケーブルを利用して、  
テレビやその他の機器に接続できます

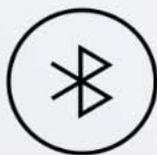

**Bluetooth**



**Digital Optical**



**Digital Coaxial**



**AUX**

Image: Rear panel of the soundbar displaying various input ports including AUX, Coaxial, and Optical.

## Important Note for Digital Inputs:

If using either optical digital input or coaxial input and no sound is output, please change your TV's audio output setting to

PCM format.

## OPERATING INSTRUCTIONS

---

### Power On/Off

Press the power button on the soundbar or the remote control to turn the device on or off.

### Volume Control

Adjust the volume using the volume buttons on the remote control or the built-in buttons on the soundbar.

### Sound Modes

The Soundcore Infini features three specialized sound modes to optimize your listening experience:

- **Movie EQ Mode:** Provides powerful bass and virtual surround sound for an immersive cinematic experience.
- **Music EQ Mode:** Delivers clear, balanced mids and highs, along with deep bass, ideal for music playback.
- **Dialogue Mode:** Enhances the mid-range frequencies to make conversations clearer and prevent them from being drowned out by other sounds.

Switch between these modes easily using the dedicated buttons on the included remote control.

# シーン別のサウンドモード

3種類のサウンドモードを搭載  
視聴コンテンツに合った  
サウンド出力が選択できます



Image: The soundbar offers three sound modes: Movie, Music, and Dialogue, selectable to match your content.

## Bluetooth Connection

To connect your mobile device via Bluetooth:

1. Ensure the soundbar is powered on.
2. Activate Bluetooth on your mobile device.
3. Select "Soundcore Infini" from the list of available devices.
4. Once connected, you can stream music and podcasts wirelessly.

## MAINTENANCE

---

### Cleaning

Regularly clean the power outlet and the soundbar to prevent dust accumulation, which can lead to electrical leakage, smoke, or fire.

### Cable Usage

Always use genuine or certified cables for optimal performance and safety.

### Environmental Conditions

Do not use the soundbar in extreme temperatures.

## TROUBLESHOOTING

---

### If Sound is Unstable

If multiple Bluetooth devices (such as mice or keyboards) are connected to your source device, radio waves may interfere. Please turn off the Bluetooth function of any unused devices.

### If Power Does Not Turn On

Ensure you are using the genuine or a certified power cable and that it is securely connected to both the soundbar and a working power outlet.

## SPECIFICATIONS

---

Feature	Detail
Brand	Soundcore
Model Number	A3371
Manufacturer Name	Anker
UPC	848061033038
Speaker Max Output	100 Watts
Mounting Type	Tabletop Mount
Speaker Type	Soundbar
Features	2.1ch, BassUp Technology, Subwoofer, Remote Control, Optical Digital Input
Controller Type	Button Control, Remote Control
Color	Black
Control Method	Remote

Speaker Channel Configuration	2.1
Wireless Type	Bluetooth 4.2
Number of Batteries	2 Lithium Ion batteries (included)
Item Dimensions (D x W x H)	9D x 88W x 5.6H cm
Item Weight	2.9 Kilograms

*Note: Product specifications are subject to change without prior notice.*

## **WARRANTY AND SUPPORT**

---

For warranty information and customer support, please refer to the documentation included in your product package or visit the official Soundcore website. The product is Technical Conformity Mark certified (Frequency band: 2402MHz-2480MHz).