

manuals.plus /

› [KYODOLED](#) /

› [KYODOLED Medium Black Cash Box with Combination Lock \(Model P0012\) Instruction Manual](#)

## KYODOLED P0012

# KYODOLED Medium Black Cash Box with Combination Lock (Model P0012)

Instruction Manual

## 1. INTRODUCTION

Thank you for choosing the KYODOLED Medium Black Cash Box with Combination Lock. This manual provides essential information for the proper setup, operation, and maintenance of your cash box. Please read these instructions carefully before use to ensure optimal security and longevity of the product.

This cash box is designed for securing small valuables, cash, and documents. Its durable alloy steel construction and three-digit combination lock offer reliable protection for your items.

## 2. PRODUCT OVERVIEW


The KYODOLED Medium Black Cash Box features a robust design with practical components for organization and security.



Figure 1: A closed view of the KYODOLED Medium Black Cash Box, featuring its sleek black finish and the three-digit combination lock on the front.

### Key Components:

- **Durable Casing:** Constructed from alloy steel for enhanced security.
- **Combination Lock:** A three-digit resettable combination lock for keyless access.
- **Removable Money Tray:** Features multiple compartments for organizing coins and small items.
- **Lower Storage Compartment:** Provides ample space beneath the tray for bills, documents, or other valuables.
- **Convenient Carry Handle:** A sturdy handle integrated into the lid for easy portability.

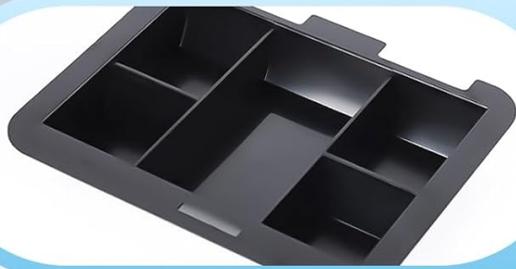

Removable Coin Tray

Convenient Carry Handle



Combination Lock

Cold-rolled steel construction



Figure 2: This graphic highlights the main features of the cash box: a removable coin tray for organization, a sturdy carry handle for portability, a secure combination lock, and its durable cold-rolled steel construction.

### 3. SETUP: SETTING YOUR COMBINATION LOCK

Your cash box comes with a factory default combination of **0-0-0**. Follow these steps to set your personalized combination:

1. **Open the Cash Box:** Ensure the dials are set to the default code (0-0-0). Push the latch button to open the lid.
2. **Locate the Reset Lever:** Inside the lid, on the back of the lock mechanism, you will find a small lever.
3. **Move the Lever to Position 'B':** While the box is open, slide this lever from its current position ('A') to position 'B'. You may need a small tool like a pen tip to do this.
4. **Set Your New Combination:** With the lever in position 'B', rotate the three number dials to your desired personal combination. Choose a memorable but secure code.

5. **Return the Lever to Position 'A':** Once your new combination is set, slide the lever back from position 'B' to position 'A'. This action locks in your new code.
6. **Test Your New Combination:** Close the lid and scramble the dials. Then, enter your new combination and push the latch button to ensure it opens correctly.

**Important: Do not forget your combination. There is no master key or override function to open the box if the combination is lost. KYODOLED is not responsible for forgotten combinations.**

## 4. OPERATING INSTRUCTIONS

---

### Opening and Closing the Cash Box:

- To open, align the dials to your set combination and push the latch button.
- To close, simply lower the lid and press down firmly until it latches. Scramble the dials to secure the lock.

### Using the Removable Money Tray:

The cash box includes a removable plastic money tray designed for organizing coins and small items.



◀ The money tray cannot accommodate cash.

The bottom layer could storage cash/passwort. ▶



Figure 3: This image illustrates the interior of the cash box when open, highlighting the removable money tray with compartments for coins and the spacious area beneath for bills or documents. Note: The money tray is designed for coins and small items; paper currency should be stored in the lower compartment.

- The tray features multiple compartments for different coin denominations or small accessories.
- For paper currency, it is recommended to store bills in the larger compartment beneath the removable tray. The tray itself may not accommodate unfolded cash.
- To access the lower compartment, simply lift the money tray out.

## More Suitable for daily small items



Membership cards



Shopping receipts



Loose changes



Backup keys



Small pill boxes



Sticky notes

## Not suitable for valuables



Precious metals



Jewelry



Large amounts of cash



Important Contracts

Figure 4: A visual guide indicating items suitable for storage, such as membership cards, receipts, loose change, backup keys, small pill boxes, and sticky notes. It also advises against storing highly valuable items like precious metals, jewelry, large amounts of cash, or important contracts, emphasizing the box's purpose for daily small items.

## 5. MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Lock Mechanism:** Keep the combination dials and latch mechanism free from dust and debris. Do not apply oil or lubricants to the lock, as this can attract dirt and hinder operation.
- **Storage:** Store the cash box in a dry environment to prevent rust or corrosion.

## 6. TROUBLESHOOTING

### Cannot Open the Cash Box:

- **Incorrect Combination:** Double-check that the correct three-digit combination is entered and that each number is precisely aligned in the center of the display window.
- **Forgotten Combination:** If you have forgotten your combination, there is no emergency key or reset procedure. The only solution is to try all possible combinations (000-999), which can be time-consuming.
- **Latching Mechanism Obstruction:** Ensure no items inside the box are preventing the lid from opening or the latch from disengaging.

### Combination Lock Feels Stiff or Jams:

- **Debris:** Check for any foreign objects or dust obstructing the dials or the latch mechanism. Clean gently with a soft brush if necessary.
- **Reset Lever Position:** If you recently changed the combination, ensure the internal reset lever is fully returned to position 'A'. If it is partially between 'A' and 'B', the lock may not function correctly.

## 7. SPECIFICATIONS

Feature	Detail
Brand	KYODOLED
Model Number	P0012
Product Dimensions	7.87"W x 6.30"D x 3.35"H (200 x 160 x 90mm)
Lock Type	3-Digit Combination Lock
Color	Black
Material	Alloy Steel
Capacity	109.07 Cubic Inches
Item Weight	1.8 pounds (0.82 Kilograms)
Special Features	Combination Lock, Portable, Removable Money Tray
Alarm	No
Water Resistance Level	Not Water Resistant

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact KYODOLED directly through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for any warranty claims.

© 2025 KYODOLED. All rights reserved.

### Related Documents - P0012

	<p><a href="#">Ford Technical Service Bulletins: October 2015 Updates and Fixes</a></p> <p>A compilation of Ford Technical Service Bulletins (TSBs) issued in October 2015, detailing various vehicle concerns, troubleshooting steps, and software updates for Ford and Lincoln models including Explorer, F-150, F-Super Duty, and MKC.</p>
	<p><a href="#">Laser 7728 OBDII/EOBD Fault Code Reader - Diagnostic Trouble Codes</a></p> <p>Comprehensive list of generic OBDII/EOBD diagnostic trouble codes (DTCs) with their definitions, for the Laser 7728 Fault Code Reader. This reference guide helps identify potential vehicle issues.</p>
	<p><a href="#">2014 OBD-II 5-Digit Diagnostic Trouble Code (DTC) Interpretation Guide</a></p> <p>A comprehensive reference for 2014 On-Board Diagnostics (OBD-II) 5-digit diagnostic trouble codes (DTCs), detailing P, B, C, U, and other code series with their descriptions and diagnostic indicators.</p>