

Teesa TSA4003 Aroma F30 Automatic Milk Frother User Manual

Model: TSA4003 Aroma F30

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the Teesa Aroma F30 Automatic Milk Frother. Keep this manual for future reference.


- Do not immerse the frother base, power cord, or plug in water or any other liquid.
- Ensure the power supply voltage matches the rating label on the appliance.
- Always place the frother on a flat, stable, heat-resistant surface.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance out of reach of children.
- Avoid contact with moving parts.
- Do not fill above the maximum fill line to prevent overflow.
- The frother jug becomes hot during operation. Handle with care.
- Unplug from the outlet when not in use and before cleaning.
- This appliance is intended for household use only.

2. PRODUCT OVERVIEW

The Teesa Aroma F30 is an automatic milk frother designed to create hot or cold milk froth and heat milk. It features a stainless steel container with a non-stick coating for easy cleaning.



AROMA F30

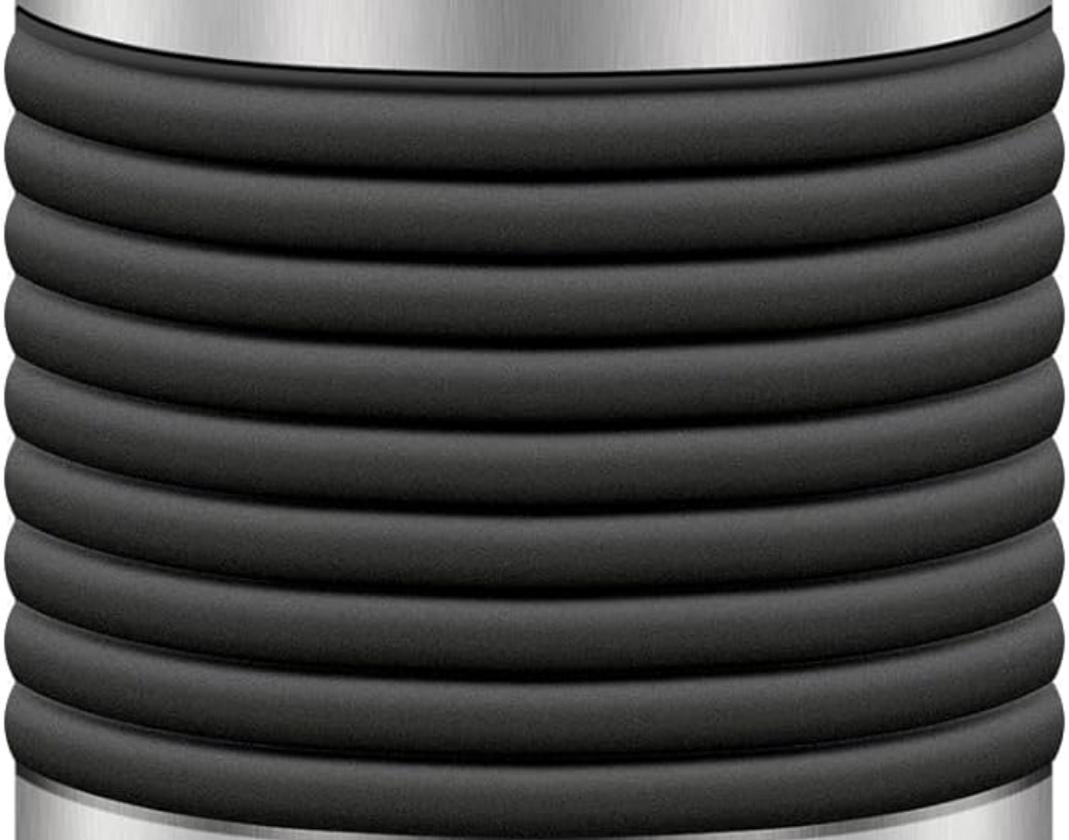

teesa





Figure 2.1: Front view of the Teesa Aroma F30 Automatic Milk Frother, showing the stainless steel body, black ribbed grip, and illuminated control buttons.

Components:

- Milk Frother Unit (Stainless Steel Jug with Base)
- Transparent Lid
- Frothing Whisk (for creating foam)
- Stirring Whisk (for heating milk without foam)
- Cleaning Brush
- User Manual





Figure 2.2: Top-down view of the frother's interior, showing the non-stick coating and the magnetic whisk attachment point with a frothing whisk in place.

3. SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean:** Before first use, clean the interior of the frother jug and the whisks with warm soapy water. Rinse thoroughly and dry. Do not immerse the base unit in water.
3. **Placement:** Place the frother on a dry, level, and stable surface away from heat sources and water.
4. **Whisk Selection:** Choose the appropriate whisk for your desired function. The frothing whisk (with the coil) is for creating foam. The stirring whisk (flat) is for heating milk without foam. Place the selected whisk onto the magnetic pin at the bottom of the frother jug.

4. OPERATION

The Teesa Aroma F30 offers three settings for milk preparation: hot frothing, cold frothing, and hot milk without froth.



Figure 4.1: The Teesa Aroma F30 Milk Frother positioned on a kitchen counter, ready for use, demonstrating its compact design.

Steps for Use:

1. **Add Milk:** Pour cold milk into the frother jug. Observe the internal markings for minimum and maximum fill levels. Do not exceed the maximum fill line to prevent overflow.
2. **Secure Lid:** Place the transparent lid firmly on the frother jug.
3. **Connect Power:** Plug the power cord into a suitable electrical outlet.
4. **Select Function:** The frother has two illuminated buttons on the front panel:
 - Red Button (Hot):** Press once for hot milk froth. The red indicator light will illuminate.
 - Blue Button (Cold):** Press once for cold milk froth. The blue indicator light will illuminate.
 To heat milk without frothing, use the stirring whisk and press the red button.
5. **Start:** The frother will start automatically after button selection. The whisk will rotate, and the heating element (if selected) will activate.

6. **Automatic Shut-off:** The frother will automatically switch off once the desired temperature or froth consistency is achieved. The indicator light will turn off.

7. **Serve:** Carefully remove the lid and pour the frothed or heated milk into your cup.

Note: For best frothing results, use fresh, cold milk (preferably whole milk). The frother is designed for milk and milk alternatives; other liquids may not yield optimal results.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your frother. Always unplug the appliance before cleaning.

- **Immediate Cleaning:** After each use, rinse the interior of the frother jug and the whisk immediately with warm water. This prevents milk residue from drying and sticking.
- **Hand Wash Only:** The frother jug and whisks are **not dishwasher safe**. Wash them by hand using warm water and a mild detergent. The non-stick coating makes cleaning easy.
- **Cleaning Brush:** Use the provided cleaning brush to reach all areas inside the jug and around the whisk.
- **Exterior:** Wipe the exterior of the frother base with a damp cloth. Do not use abrasive cleaners or scourers.
- **Drying:** Ensure all parts are completely dry before storing or next use.
- **Storage:** Store the frother in a dry place.

6. TROUBLESHOOTING

If you encounter issues with your Teesa Aroma F30, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not start.	Not plugged in; power outage; whisk not correctly placed.	Check power connection; ensure whisk is securely on the magnetic pin.
Milk does not froth well.	Milk too warm; old milk; wrong whisk used; insufficient milk.	Use fresh, cold milk; ensure frothing whisk is used; check milk levels.
Milk overflows.	Too much milk added.	Do not exceed the maximum fill line indicated inside the jug.
Burning smell or milk sticks to bottom.	Residue from previous use; frother not cleaned properly.	Clean the frother thoroughly after each use. Ensure no milk residue remains.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- **Model Name:** Aroma F30
- **Model Number:** TSA4003

- **Brand:** Teesa
- **Material:** Stainless Steel
- **Color:** Transparent (Lid) / Stainless Steel (Body)
- **Special Feature:** Automatic
- **Capacity:** 600 Milliliters (Total)
- **Recommended Uses:** Residential
- **Power Source:** Corded Electric
- **Wattage:** 650 watts
- **Number of Settings:** 3 (Hot Froth, Cold Froth, Hot Milk)
- **Product Dimensions:** 4.13 x 4.13 x 7.99 inches
- **Item Weight:** 1.89 pounds (0.86 Kilograms)
- **Product Care Instructions:** Hand Wash Only

8. WARRANTY AND SUPPORT

This Teesa Aroma F30 Automatic Milk Frother is covered by a manufacturer's warranty against defects in materials and workmanship under normal use. The specific terms and duration of the warranty may vary by region and retailer.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Teesa website.

Please retain your proof of purchase for warranty purposes.