

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Zerone](#) /

› [Zerone Universal Remote Control AA59-00784C User Manual](#)

Zerone AA59-00784C

Zerone Universal Remote Control AA59-00784C User Manual

Model: AA59-00784C

INTRODUCTION

This manual provides comprehensive instructions for the Zerone Universal Remote Control, model AA59-00784C. This remote is designed as a replacement for various Smart TV remotes, including models AA59-00784A, AA59-0784B, and BN59-01043A. It offers full functionality without the need for complex programming.



This image provides a clear view of both the front face, showing all control buttons, and the smooth, ergonomic back of the Zerone Universal Remote Control.

Please note that due to manufacturing variations, you may receive either a 'New Type' or 'Old Type' version of the remote control. Both versions are functionally identical and compatible with the listed TV models.



This image displays two versions of the remote control, labeled 'New Type' and 'Old Type'. Both models are functionally identical, but may have minor cosmetic differences. The specific model received is random.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
4. Replace the battery cover by sliding it back into place until it clicks securely.



This is an innovative keyboard remote control for Samsung Smart TV. Perfectly replaces your damage or old one. Small and compact size makes this remote control easy to grip and uneasy to slip.

This image shows the open battery compartment located on the back of the remote control. It requires two AAA batteries, which are not included.

2. Initial Use

No programming or setup is required for this universal remote control. Once batteries are installed, it is ready for immediate use with compatible Smart TVs.

OPERATING INSTRUCTIONS

Point the remote control directly at your television's infrared receiver. Ensure there are no obstructions between the remote and the TV.



- No programming or setting up required.
- Small and compact size makes this remote control easy to grip and uneasy to slip.
- Farther transmitting distance, stable performance.

This image demonstrates the typical use of the remote control, held in hand and directed towards a television for operation.

Key Functions:

- **Power Button** (): Turns the TV on or off.
- **Source Button**: Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9)**: Direct channel selection.
- **Volume Up/Down (VOL +/-)**: Adjusts the television volume.
- **Channel Up/Down (CH +/-)**: Changes television channels.
- **Mute Button**: Mutes or unmutes the television audio.
- **Menu Button**: Accesses the TV's main menu.
- **Smart Hub Button**: Opens the Smart Hub interface for apps and streaming services.
- **Navigation Pad (Up/Down/Left/Right/Enter)**: Navigates through menus and selections.
- **Return Button**: Goes back to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Colored Buttons (A, B, C, D)**: Functionality varies by TV model and application.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind)**: Controls media playback.

MAINTENANCE

Battery Replacement:

When the remote control's performance degrades or it stops responding, replace the two AAA batteries. The remote is designed to retain its codes even when batteries are removed.

Cleaning:

Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
 - If only certain advanced functions are not working, verify that your TV model fully supports those specific functions with a universal remote.

SPECIFICATIONS

Product Name	Remote Control
Model	AA59-00784C
Compatible Models	AA59-00784A, AA59-0784B, BN59-01043A Smart TVs
Power Source	2 x AAA Batteries (Not Included)
Color	Black
Item Weight	2.82 ounces (approx. 80g)
Max Number of Supported Devices	1 (Television)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact the manufacturer directly. Specific warranty terms may vary by region and retailer.