

Barbie GFH60

Barbie Dreamtopia Brush 'n Sparkle Unicorn Interactive Toy Instruction Manual

Brand: Barbie | Model: GFH60

1. INTRODUCTION

Welcome to the magical world of Barbie Dreamtopia! This instruction manual provides essential information for the safe and enjoyable use of your Barbie Dreamtopia Brush 'n Sparkle Unicorn. This interactive toy features lights and sounds activated by brushing its mane or pressing a button on its body, designed to inspire imaginative play.

2. PACKAGE CONTENTS

- Barbie Dreamtopia Brush 'n Sparkle Unicorn
- Magical Brush Accessory

3. SAFETY INFORMATION

No specific safety warnings are provided by the manufacturer beyond general toy safety. Always supervise children during play. Keep small parts away from children under 3 years of age to prevent choking hazards. Dispose of batteries responsibly.

4. SETUP

4.1 Battery Installation

The Barbie Dreamtopia Brush 'n Sparkle Unicorn requires 3 AA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the underside of the unicorn.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 3 new AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Note: Batteries included are for demonstration purposes only. Dispose of used batteries properly.

5. OPERATING INSTRUCTIONS

The Barbie Dreamtopia Brush 'n Sparkle Unicorn features four different light and sound shows. These can be activated in two ways:

- **Brush Activation:** Use the included magical brush accessory to brush the unicorn's long pink mane. This action will trigger a light and sound sequence.
- **Button Activation:** Press the button located on the unicorn's body. Each press will activate a different light and sound show.

Experiment with both methods to discover all four unique light and sound combinations.



Figure 1: A child brushing the unicorn's mane to activate lights and sounds.



Figure 2: A hand pressing the activation button on the unicorn's side.

6. FEATURES

- Interactive lights and sounds: Four distinct light and sound shows for engaging play.
- Dual activation methods: Activate by brushing the mane with the included brush or by pressing the body button.
- Vibrant design: Shimmery white body with cut-out, color-rimmed stars that illuminate, complemented by a long pink mane and tail, and blue hooves.
- Encourages imaginative play: Designed to inspire storytelling and creative adventures.

7. MAINTENANCE

7.1 Cleaning

To clean the unicorn, wipe its surface with a damp cloth. Do not immerse the toy in water. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish or electronic components.

7.2 Hair Care

The unicorn's mane and tail can be brushed with the included accessory. For best results, brush gently to prevent tangling or damage to the hair fibers.

8. TROUBLESHOOTING

8.1 Lights and Sounds Not Activating

- **Check Batteries:** Ensure batteries are correctly installed with proper polarity. Replace with fresh AA batteries if necessary.
- **Activation Method:** Confirm you are either brushing the mane with the magical brush or pressing the button on the unicorn's body.

Your browser does not support the video tag.

Video 1: Official product demonstration of the Barbie Dreamtopia Brush 'n Sparkle Unicorn's features. This video shows the unicorn activating its lights and sounds when brushed or when the button is pressed, demonstrating proper functionality.







9. SPECIFICATIONS

Model Number	GFH60
Product Dimensions	3 x 9.5 x 12 inches
Item Weight	0.027 ounces
Recommended Age	3 years and up
Batteries	3 AA batteries (included)
Manufacturer	Mattel
Release Date	October 1, 2018

10. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Barbie website. Keep your purchase receipt as proof of purchase.

Related Documents - GFH60

	<p>Barbie Dreamhouse JGJ21 Assembly Instructions</p> <p>Comprehensive assembly instructions and safety information for the Barbie Dreamhouse playset (Model JGJ21) by Mattel. Includes part identification, step-by-step building guide, and usage tips.</p>
	<p>Barbie HKT79 DreamCamper Playset Assembly and User Guide</p> <p>Discover how to assemble and use the Barbie HKT79 DreamCamper playset. This guide provides detailed instructions for transforming the vehicle into a multi-room playset, battery installation, and important safety information for the popular Barbie toy.</p>
	<p>Barbie Dreamhouse Assembly Instructions and Product Information</p> <p>Official assembly instructions and product details for the Barbie Dreamhouse playset (Model HMX10) by Mattel. Includes step-by-step guides, safety warnings, and manufacturer information.</p>
	<p>Barbie 3-Story Townhouse Dollhouse with Elevator and Accessories (DLY32) - Assembly Instructions</p> <p>Detailed assembly instructions and product overview for the Barbie 3-Story Townhouse Dollhouse (Model DLY32) by Mattel. Learn how to build and store this playset, including part identification and safety warnings.</p>
	<p>Barbie HCK77 Dollhouse Playset: Assembly and Play Guide</p> <p>Comprehensive assembly instructions and play feature overview for the Barbie HCK77 dollhouse playset by Mattel. Includes safety warnings and care tips.</p>
	<p>Barbie Color Change Camper Van Play Set with Dough - HRJ78 Instructions</p> <p>Explore imaginative play with the Barbie Color Change Camper Van play set (HRJ78). This set includes dough for creative fun and features a color-changing effect activated by water. Includes detailed assembly, usage, and safety instructions.</p>