

Eurotime TR118

Eurotime TR118 Digital Timer User Manual

Model: TR118 | Brand: Eurotime

INTRODUCTION

The Eurotime TR118 is a versatile digital timer designed for various timing needs, from cooking to study sessions. It features a large 6-digit LCD display, two independent timers (T1 and T2), and supports both countdown and count-up functions. The timer can be set for durations up to 99 hours, 59 minutes, and 59 seconds. It includes an audible alarm, a magnetic back for easy attachment, and a foldable stand for tabletop use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Eurotime TR118 Digital Timer:



Figure 1: Front View

This image shows the front of the Eurotime TR118 Digital Timer. The large 6-digit LCD display is prominent, showing

'12:02 29'. Below the display are the control buttons: 'H' (Hours), 'M' (Minutes), 'S' (Seconds), 'C' (Clear), and 'START/STOP'. To the right of the display are two smaller buttons labeled 'T1' and 'T2', and a 'CLOCK' button at the top right. The 'MEMORY' label is visible below the 'START/STOP' button.



Figure 2: Back View

This image displays the back of the Eurotime TR118 Digital Timer. It clearly shows the battery compartment cover, the integrated magnet for attaching to metal surfaces, and the foldable kickstand for upright placement on a flat surface. The model number 'TR118N' and 'MADE IN CHINA' are printed on the casing.

Button Functions:

- **CLOCK:** Switches between displaying the current time and the active timer. Press and hold to set the current time.
- **T1 / T2:** Selects Timer 1 or Timer 2 for setting or activation.
- **H (Hours):** Adjusts the hour value for the selected timer or clock.
- **M (Minutes):** Adjusts the minute value for the selected timer or clock.
- **S (Seconds):** Adjusts the second value for the selected timer or clock.
- **C (Clear):** Clears the set time for the active timer.
- **START/STOP:** Starts or pauses the active timer.
- **MEMORY:** Recalls the last set countdown time for the active timer.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the timer.
2. Slide the battery compartment cover downwards to open it.
3. Insert one (1) AAA 1.5V battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
(Battery not included)
4. Slide the battery compartment cover back into place until it clicks securely.

OPERATING INSTRUCTIONS

1. Setting the Clock:

1. Press the **CLOCK** button to switch the display to clock mode (if not already there).
2. Press and hold the **CLOCK** button for approximately 3 seconds until the hour digits begin to flash.
3. Use the **H**, **M**, and **S** buttons to set the desired hour, minute, and second.
4. Press the **CLOCK** button again to confirm the setting and exit clock setting mode.

2. Using Countdown Timers (T1 / T2):

1. Press either the **T1** or **T2** button to select the desired timer. The display will show 'T1' or 'T2' to indicate the active timer.
2. Use the **H**, **M**, and **S** buttons to set the desired countdown time (up to 99 hours, 59 minutes, 59 seconds).
3. Press the **START/STOP** button to begin the countdown. The display will show the remaining time.
4. To pause the countdown, press the **START/STOP** button again. Press it once more to resume.
5. When the countdown reaches zero, an audible alarm will sound for approximately 60 seconds. The display will flash '00:00:00'.
6. Press any button to stop the alarm.

3. Clearing a Timer:

- Select the timer (T1 or T2) you wish to clear.
- If the timer is running, press **START/STOP** to pause it.
- Press the **C (Clear)** button to reset the timer to '00:00:00'.

4. Memory Function:

- After a countdown has completed and been stopped, or if a timer was manually cleared, press the **MEMORY** button to recall the last set countdown time for the active timer. This allows for quick reuse of frequently used timings.

5. Using Count-Up Function:

1. Select the desired timer (T1 or T2).
2. Ensure the timer is cleared to '00:00:00' by pressing the **C (Clear)** button.
3. Press the **START/STOP** button. The timer will begin counting upwards from zero.
4. To pause the count-up, press the **START/STOP** button again. Press it once more to resume.
5. To reset the count-up timer to zero, press **START/STOP** to pause it, then press the **C (Clear)** button.

MAINTENANCE

Cleaning:

- Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

Battery Replacement:

- If the display becomes dim or the alarm weakens, replace the AAA battery as described in the 'Setup' section.
- Dispose of used batteries responsibly according to local regulations.

Storage:

- Store the timer in a cool, dry place when not in use.
- If storing for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

- **Display is blank or dim:**
Ensure the battery is correctly installed with the correct polarity. Replace the AAA battery with a fresh one.
- **Timer not starting/stopping:**
Ensure you have selected either T1 or T2. Press the START/STOP button firmly. If setting a countdown, ensure a time has been entered before pressing START/STOP.
- **Alarm not sounding:**
Check if the battery is low and replace it if necessary. Ensure the timer is counting down to zero.
- **Buttons are unresponsive:**
Remove and reinsert the battery to perform a soft reset. If the issue persists, the unit may require service.

SPECIFICATIONS

Model:	TR118
Brand:	Eurotime
Display:	Large 6-digit LCD
Timers:	2 separate timers (T1, T2)
Functions:	Countdown, Count-up, Clock, Memory
Max. Time Setting:	99 Hours, 59 Minutes, 59 Seconds
Power Source:	1 x AAA 1.5V Battery (not included)
Dimensions (L x W x D):	73 x 66 x 18 mm (approx. 2.87 x 2.60 x 0.71 inches)
Weight:	63 g (approx. 2.22 oz)
Mounting Options:	Magnetic back, Foldable stand

WARRANTY AND SUPPORT

This product is manufactured by Eurotime. For specific warranty information or technical support, please refer to the documentation included with your purchase or contact Eurotime directly through their official website or customer service channels. Keep your proof of purchase for any warranty claims.