Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > OSRAM /
- OSRAM ENDURA STYLE UpDown Midi Round LED Outdoor Wall Light Instruction Manual

OSRAM 4058075123311

OSRAM ENDURA STYLE UpDown Midi Round LED Outdoor Wall Light Instruction Manual

1. Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your OSRAM ENDURA STYLE UpDown Midi Round LED Outdoor Wall Light. Please read this manual thoroughly before installation and retain it for future reference. This product is designed for functional outdoor lighting, featuring energy-efficient LED technology and a durable cast aluminum body with an IP44 protection rating.

2. SAFETY INFORMATION

WARNING: Risk of electric shock. Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.

- Always disconnect power at the main circuit breaker before attempting any installation, maintenance, or repair.
- Ensure the supply voltage matches the product's specified voltage (240V).
- Do not modify the product in any way. Unauthorized modifications may compromise safety and void the warranty.
- This luminaire is rated IP44, suitable for outdoor use in covered areas, protecting against solid objects larger than 1mm and splashing water from any direction.
- Do not install near flammable materials or in areas with excessive vibration.
- Ensure all connections are secure and properly insulated.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact your supplier.

- 1 x OSRAM ENDURA STYLE UpDown Midi Round LED Outdoor Wall Light
- Mounting accessories (screws, wall plugs)
- Connection accessories

• Instruction Manual



Figure 3.1: The OSRAM ENDURA STYLE UpDown Midi Round LED Outdoor Wall Light, shown in anthracite grey.

4. INSTALLATION AND SETUP

This luminaire is designed for wall mounting. Ensure the chosen location is suitable for outdoor use and provides a stable surface for mounting.

- 1. **Preparation:** Disconnect power at the main circuit breaker. Use a voltage tester to confirm the power is off.
- 2. **Marking:** Hold the luminaire against the desired mounting surface and mark the drilling points for the mounting bracket.
- 3. **Drilling:** Drill holes at the marked points and insert appropriate wall plugs (supplied).

- 4. **Mounting Bracket:** Secure the mounting bracket to the wall using the supplied screws.
- 5. **Wiring:** Connect the electrical wires from the mains supply to the luminaire's terminal block. Ensure correct polarity (Live, Neutral, Earth) and secure all connections. Refer to local wiring regulations.
- 6. **Fixture Attachment:** Carefully attach the luminaire body to the mounting bracket, ensuring all wires are neatly tucked away and not pinched. Secure the fixture using the provided fasteners.
- 7. **Testing:** Restore power at the main circuit breaker and test the luminaire's operation.

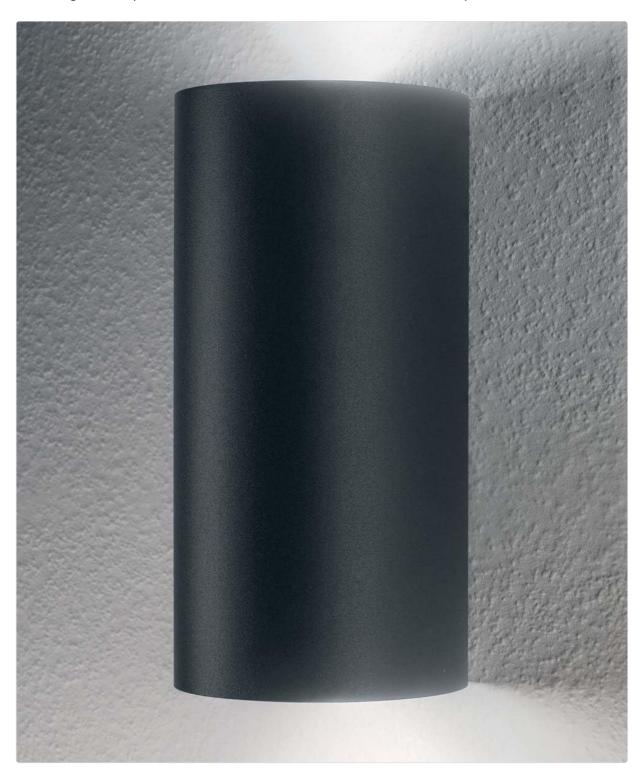


Figure 4.1: The luminaire installed on a wall, demonstrating its up and down light emission.

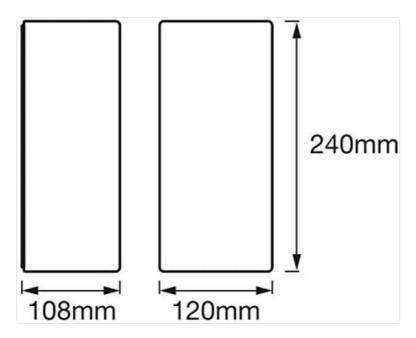


Figure 4.2: Dimensional drawing of the luminaire, showing its height of 240mm, width of 120mm, and depth of 108mm.

5. OPERATING INSTRUCTIONS

The OSRAM ENDURA STYLE UpDown Midi LED outdoor wall light is designed for automatic operation once correctly installed and connected to a power source. It will illuminate when power is supplied to the circuit it is connected to. There are no user-adjustable controls on the fixture itself.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your luminaire.

- Cleaning: Disconnect power before cleaning. Use a soft, dry, or slightly damp cloth to wipe the exterior surface. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Inspection:** Periodically inspect the luminaire for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.
- **LED Light Source:** The LED light source in this product is not user-replaceable. If the LED fails, the entire luminaire must be replaced.

7. TROUBLESHOOTING

If you encounter issues with your luminaire, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Luminaire does not illuminate	No power supply Incorrect wiring Faulty circuit breaker	Check if the circuit breaker is ON. Verify power supply to the fixture. Ensure wiring connections are correct and secure (consult a qualified electrician).
Light flickers or dims	Loose wiring connection Incompatible dimmer switch (if applicable, though this product is not specified as dimmable)	Disconnect power and check all wiring connections for tightness. Ensure the luminaire is not connected to an incompatible dimmer.

Problem	Possible Cause	Solution
Physical damage to fixture	Impact or environmental factors	Disconnect power immediately. Do not use a damaged fixture. Contact customer support for replacement or repair options.

If the problem persists after following these steps, please contact OSRAM customer support or a qualified electrician.

8. SPECIFICATIONS


Feature	Specification
Brand	OSRAM
Model	ENDURA STYLE UpDown Midi Round
Product Number	4058075123311
Dimensions (L x W x H)	10.8 cm x 12 cm x 24 cm
Weight	9.07 grams
Material	Aluminum
Color	Dark Grey (Anthracite)
Protection Rating	IP44
Light Source	Integrated LED
Power Consumption	13.5 Watts
Voltage	240 Volts
Color Temperature	3000 Kelvin (Warm White)
Color Rendering Index (CRI)	80
Power Factor	0.5
Installation Type	Wall Mount
Special Features	Easy, Quick Installation
Application Areas	Outdoor (covered areas), building facades, entrance lighting, patios, balconies

9. WARRANTY AND SUPPORT

This OSRAM ENDURA STYLE UpDown Midi Round LED Outdoor Wall Light comes with a**5-year** warranty from the date of purchase, covering defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or any questions regarding your product, please contact OSRAM customer service through their official website or the retailer where the product was purchased.

Related Documents - 4058075123311

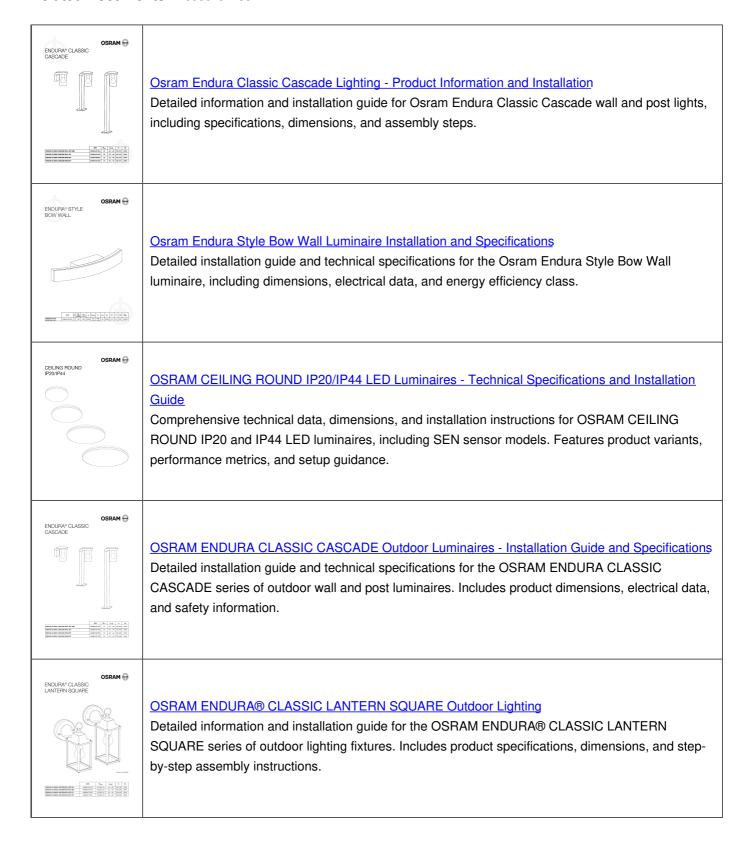



OSRAM ENDURA CLASSIC ITYS IVE WALL - Outdoor Lighting Installation Guide

Comprehensive installation guide and technical specifications for the OSRAM ENDURA CLASSIC ITYS IVE WALL outdoor wall light. Includes product details, dimensions, step-by-step instructions, and compliance information.