

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Walker Edison](#) /

› [Walker Edison Saxon Mid Century Modern Glass Shelf TV Stand \(Model W60NOR2DDW\) User Manual](#)

Walker Edison W60NOR2DDW

Walker Edison Saxon Mid Century Modern Glass Shelf TV Stand

Model: W60NOR2DDW | Brand: Walker Edison

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Walker Edison Saxon Mid Century Modern Glass Shelf TV Stand. Designed to enhance your living space, this TV stand offers both style and functionality with its middle glass shelf and closed storage compartments. Please read these instructions carefully before assembly and use to ensure proper setup and long-term enjoyment of your product.



Figure 1: The Walker Edison Saxon TV Stand, showcasing its walnut finish and mid-century modern design.

KEY FEATURES

- **Mid-Century Modern Style:** Features a sleek design with angled legs and a boxy frame.

- **Tempered Safety Glass Shelf:** An open middle shelf for display, supporting up to 20 lbs.
- **Closed Storage:** Two side compartments with doors to conceal media essentials or decor.
- **Adjustable Shelves:** Internal shelves within the closed compartments are adjustable for flexible storage.
- **Cord Management:** Integrated features in the back panel help keep wires tidy and organized.
- **Adjustable Rubber Feet:** Protects flooring and prevents sliding, ensuring stability.
- **TV Compatibility:** Supports TVs up to 65 inches when measured diagonally (corner to corner).
- **Durable Construction:** Made from wood with a walnut finish.
- **Weight Capacity:** Top surface supports up to 75 lbs, glass shelf up to 20 lbs, and bottom shelf up to 30 lbs.



Figure 2: The TV stand integrated into a living room, demonstrating its capacity for a 55-inch television and storage capabilities.

SETUP AND ASSEMBLY

Assembly of the Walker Edison Saxon TV Stand is required. Please ensure all components are present before beginning. A detailed instruction manual with step-by-step diagrams is included in the product packaging. It is

recommended to assemble the unit on a soft, clean surface to prevent scratches. Avoid over-tightening screws during initial assembly to allow for adjustments, especially when aligning doors.

Important Assembly Notes:

- **Back Panels:** Pay attention to the orientation of the back panels, particularly the cord slots, to ensure they align with your desired cable routing.
- **Door Stops:** It is often easier to attach door stops before securing the top panel, contrary to some general instructions.
- **Adjustable Feet:** Utilize the adjustable rubber feet to level the stand on uneven floors and protect your flooring.

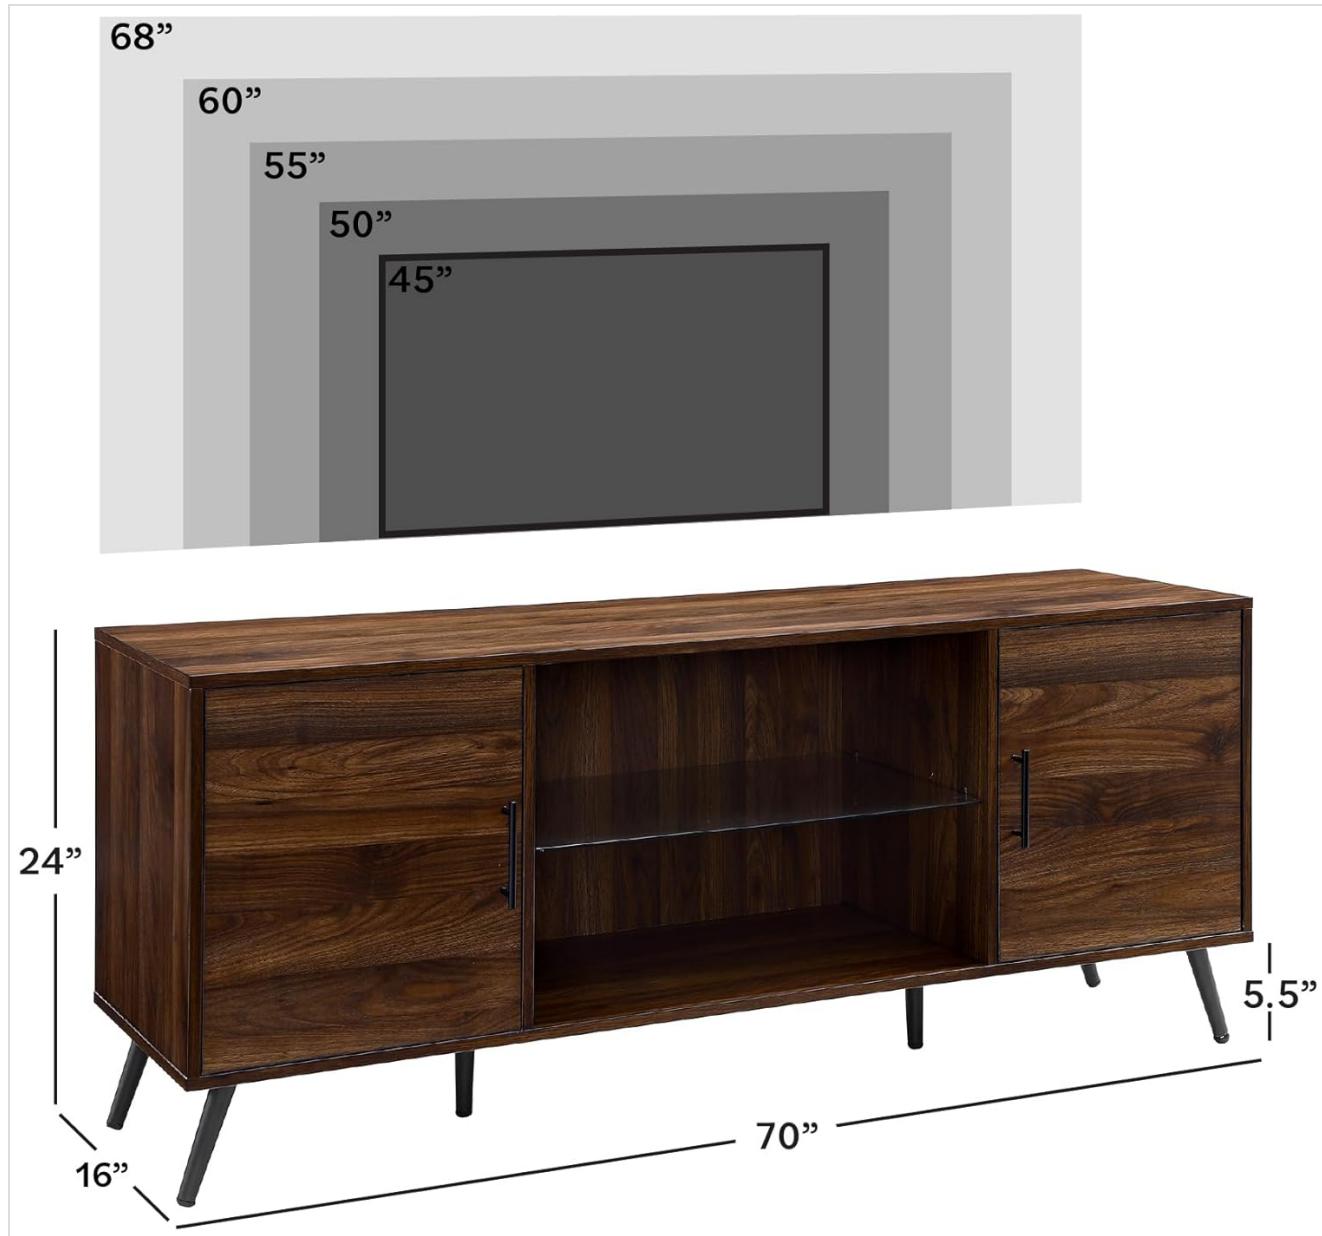


Figure 3: Product dimensions and TV size compatibility for planning your setup.

OPERATING GUIDELINES

Your TV stand is designed for optimal functionality and organization. Here are some guidelines for its use:

- **TV Placement:** Place your television centrally on the top surface. The stand is designed to support TVs up to

65 inches diagonally.

- **Weight Distribution:** Ensure weight is evenly distributed across the top surface and shelves to maintain stability. Adhere to the specified weight limits for each section.
- **Adjustable Shelves:** The glass shelf in the middle and the wooden shelves inside the side cabinets can be adjusted to different heights to accommodate various items, such as media players, gaming consoles, books, or decorative pieces.
- **Cord Management:** Utilize the integrated cord management cut-outs in the back panel to route and organize cables, keeping your entertainment area neat and clutter-free.



Simple Cord Management

Easily organize messy wires with cut-outs for overall cord management.

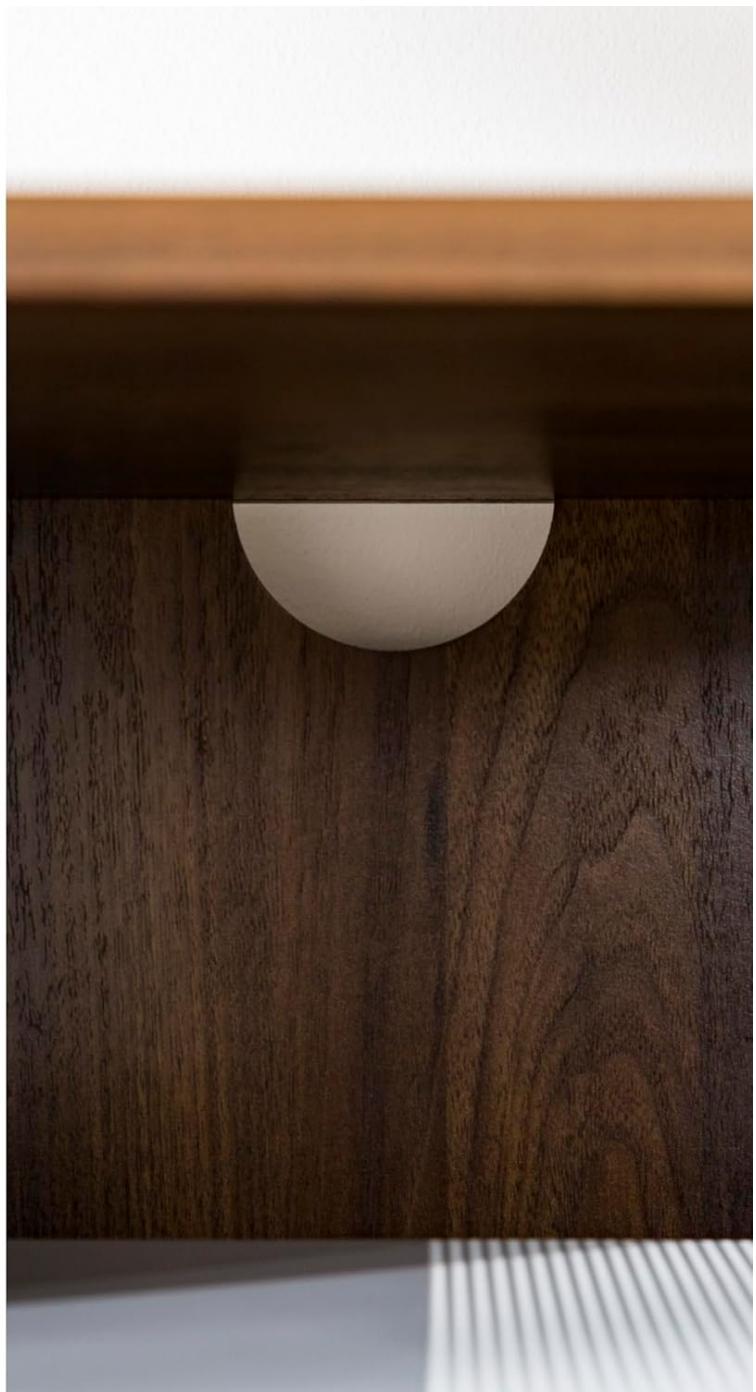


Figure 4: Detail of the cord management feature, allowing for organized cable routing.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your TV stand, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading of the wood finish.
- **Heat:** Do not place hot items directly on the surface without protective coasters.
- **Hardware:** Periodically check and tighten all hardware to ensure the stability and structural integrity of the unit.



Figure 5: The durable walnut wood grain finish of the TV stand.

TROUBLESHOOTING

If you encounter any issues with your TV stand, please refer to the following common solutions:

- **Wobbly Stand:** Ensure all screws are securely tightened. Use the adjustable rubber feet to level the stand on uneven floors.
- **Misaligned Doors:** Loosen the hinge screws slightly, adjust the door to the correct alignment, and then re-

tighten the screws. Magnetic closures should keep the doors securely shut.

- **Missing Parts:** If any parts are missing or damaged upon arrival, please contact customer support immediately.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Walker Edison
Model Number	W60NOR2DDW
Color	Walnut
Material	Wood
Product Dimensions	16"D x 60"W x 24"H
Item Weight	80 Pounds
Maximum Recommended Load (Top Surface)	75 Pounds
Maximum Recommended Load (Glass Shelf)	20 Pounds
Maximum Recommended Load (Bottom Shelf)	30 Pounds
TV Size Support	Up to 65 inches (diagonally)
Number of Shelves	3 (1 glass, 2 wood)
Assembly Required	Yes
Special Feature	Space Saving, Cord Management, Adjustable Shelves

OFFICIAL PRODUCT OVERVIEW

Video 1: An official overview of the Nora 60" Mid Century Modern 2 Door TV Stand by Walker Edison, highlighting its design and features.

WARRANTY AND CUSTOMER SUPPORT

Your Walker Edison Saxon TV Stand comes with a **30-day limited manufacturer's warranty**. For any questions, assistance with assembly, or to report missing/damaged parts, please contact Walker Edison customer support.

Phone: 1-801-433-3008

Email: service@walkeredison.com

Replacement parts are available. Please contact Walker Edison within 30 days of delivery for assistance.

QUESTIONS? We can help you.




1-801-433-3008

or email **service@walkeredison.com**

Replacement parts now available.
Please contact Walker Edison within 30 days of delivery.

Figure 6: Walker Edison customer support contact details for inquiries and assistance.

Related Documents - W60NOR2DDW

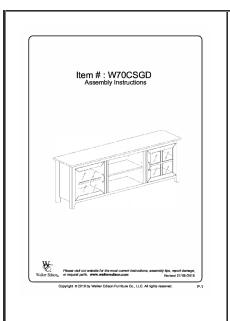

[Walker Edison W70CSGD TV Stand Assembly Instructions](#)

Detailed assembly instructions for the Walker Edison W70CSGD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.



[Walker Edison W584DHDHB Assembly Instructions](#) | [Furniture Setup Guide](#)

Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.



[Walker Edison W58BDSD Assembly Instructions for Modern Farmhouse TV Stand](#)

Step-by-step assembly instructions for the Walker Edison W58BDSD TV Stand, featuring a modern farmhouse design with double barn doors. Includes detailed parts list, hardware list, and assembly guidance for a smooth setup.



Walker Edison FRAB4C Nightstand Assembly Instructions

Detailed assembly instructions for the Walker Edison Mid-Century Modern 1-Drawer Nightstand (Model FRAB4C), including parts list, hardware list, and step-by-step guidance.



Walker Edison W70SBD TV Stand Assembly Instructions

Detailed assembly instructions for the Walker Edison W70SBD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.



Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand Assembly Instructions

Detailed assembly instructions for the Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand (SKU: W70ADR2D). Includes parts list, hardware list, and step-by-step guidance for easy setup.